



Hydro Multi-B

Booster systems with 2 or 3 pumps
50/60 Hz



1. Introduction	3	10. Optional equipment	42
Benefits	3	Redundant primary sensor	42
2. Product data	4	Water shortage protection	42
Performance range, 50 Hz	4	Non-return valve	42
Performance range, 60 Hz	5	CIM communication module	42
Performance range, 50/60 Hz	6	Phase failure monitoring	42
Product range	7	Beacon	42
Type key	8	Acoustic alarm	43
Operating conditions	8	External transformer	43
3. Construction	9	High-level lamp	43
Pump	9	Pilot lamp indicating alarm	43
Manifold	9	Pilot lamp indicating operation	43
Control cabinet and CU 323	9	11. Accessories	44
Base frame	9	Foot valve	44
System components	10	Float switch	44
4. Functions	11	Analog sensor	44
Control variants	11	Additional documentation	44
Overview of functions	12	12. Further product documentation	45
Description of selected functions	13	WebCAPS	45
5. Installation	14	WinCAPS	46
Mechanical installation	14		
Electrical installation	15		
6. Sizing	16		
Understanding the curve charts	19		
How to select a system, example	20		
7. Curve conditions	21		
How to read the curve charts	21		
8. Performance curves	22		
Hydro Multi-B ES with CM(E) 3, 50 Hz	22		
Hydro Multi-B ES with CM(E) 3, 50 Hz	23		
Hydro Multi-B ES with CM(E) 5, 50 Hz	24		
Hydro Multi-B ES with CM(E) 10, 50 Hz	25		
Hydro Multi-B ES with CM(E) 15, 50 Hz	26		
Hydro Multi-B ES with CM(E) 25, 50 Hz	27		
Hydro Multi-B ES with CM(E) 3, 60 Hz	28		
Hydro Multi-B ES with CM(E) 5, 60 Hz	29		
Hydro Multi-B ES with CM(E) 10, 60 Hz	30		
Hydro Multi-B ES with CM(E) 15, 60 Hz	31		
Hydro Multi-B ES with CM(E) 25, 60 Hz	32		
Hydro Multi-B E with CME 3	33		
Hydro Multi-B E with CME 5	34		
	34		
Hydro Multi-B E with CME 10	35		
	35		
Hydro Multi-B E with CME 15	36		
	36		
Hydro Multi-B E with CME 25	37		
	37		
9. Technical data	38		
Dimensional sketches			

1. Introduction

The Grundfos Hydro Multi-B is a booster system designed to maintain a constant pressure, regardless of flow fluctuations.

The system can be installed in buildings where the mains water supply does not deliver a sufficient pressure or is unstable.

The system is ideal for any clean-water pressure-boosting application where adaptability and user comfort are in focus.

Examples:

- office buildings
- blocks of flats
- hotels
- shopping centres
- hospitals
- schools.

As standard, Hydro Multi-B booster systems consist of two or three CM(E) pumps coupled in parallel and mounted on a common base frame with all the necessary fittings and a control cabinet.

The Hydro Multi-B comes in two control variants with at least one CME pump with integrated speed-controlled motor. This ensures perfect adaptation to the demand, high efficiency and protection against pressure surges in the installation.

The pumps are controlled in automatic cascade via the control cabinet mounted on the base frame. The CU 323 controller controls the speed of the CME pump(s) and starts and stops the required number of CM pumps in order to adapt perfectly to the water demand of the application.

Benefits

Pressure boosting made simple

The Hydro Multi-B is developed with focus on user-friendliness and ease of operation.

The pumps are controlled via the CU 323 controller which features a simple interface that makes it easy to control and monitor the system.

When the system has been set up, the controller takes care of the daily operation.



TM05 0444 1211

Fig. 1 CU 323 controller

Compact and designed to last


The components and design of the Hydro Multi-B have been chosen with focus on robustness and compactness. The booster system offers the user all the benefits of a complete solution with a single supplier who takes the responsibility of the complete system.

Ready, Set, Pump

Grundfos does not compromise when it comes to quality. Therefore, every system is thoroughly tested before it leaves the factory. On delivery, the system is assembled, tested and ready to pump as soon as it is connected to the water and power supplies.

2. Product data


Performance range, 50 Hz

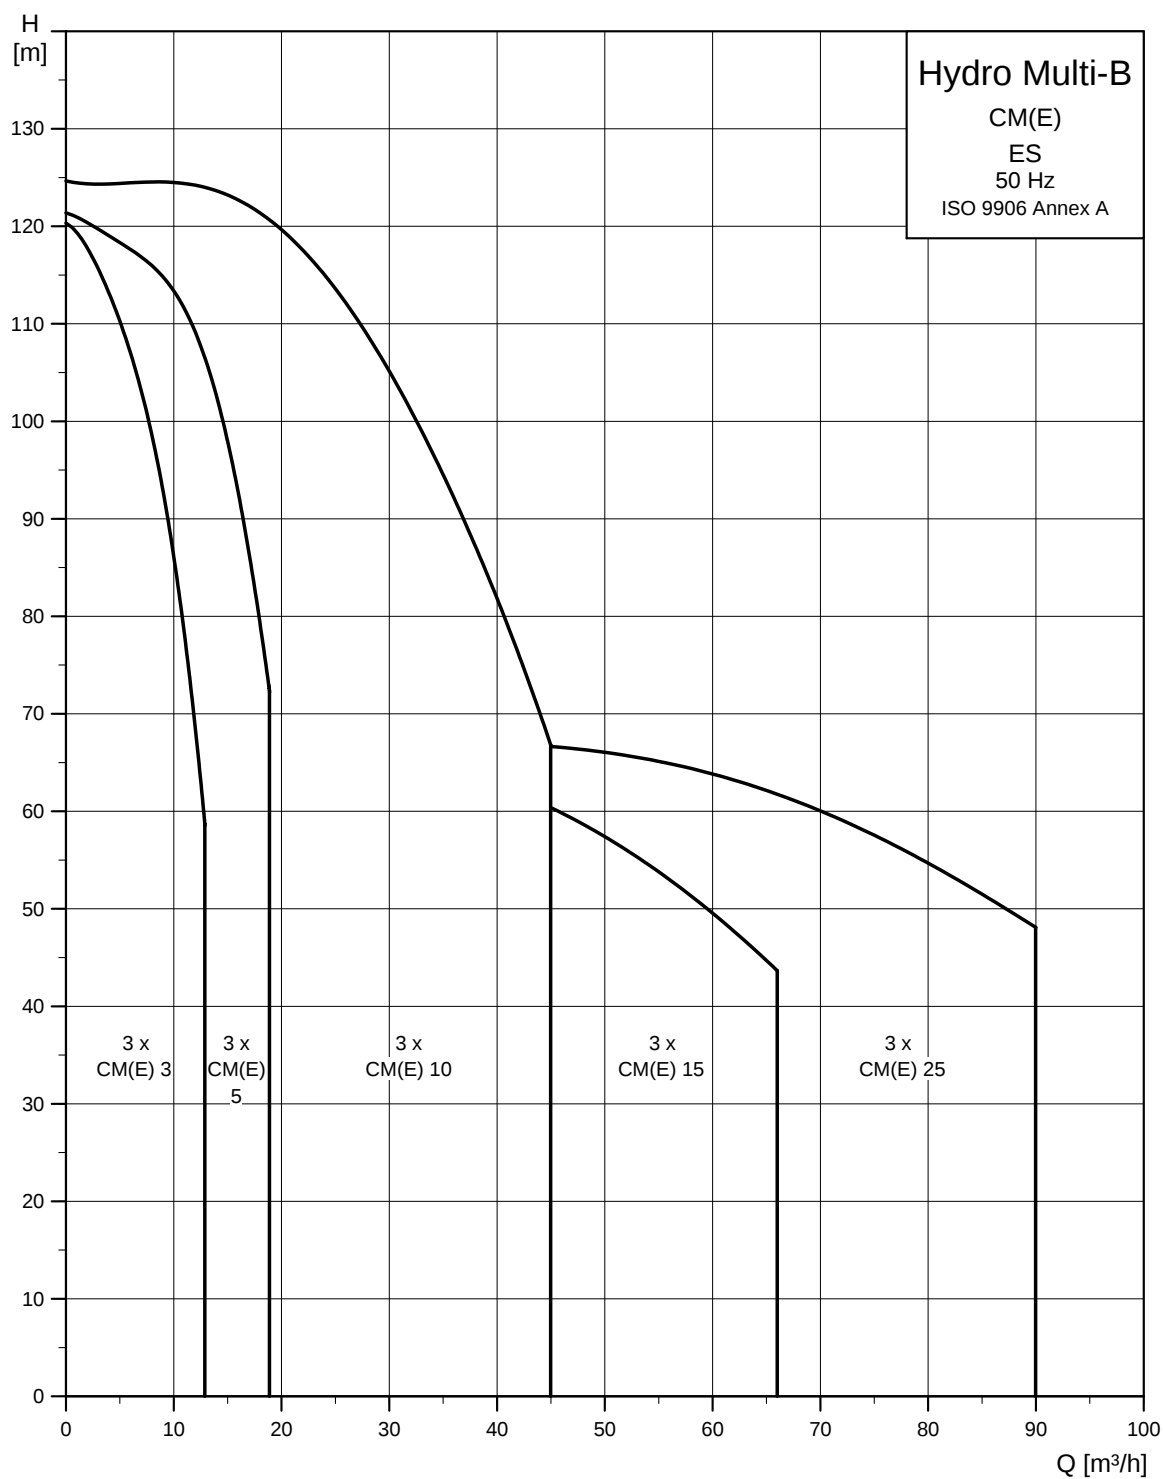

TM05 1195 2411

Note: The performance range is based on the standard range of the CM and CME pumps.


Performance range, 60 Hz

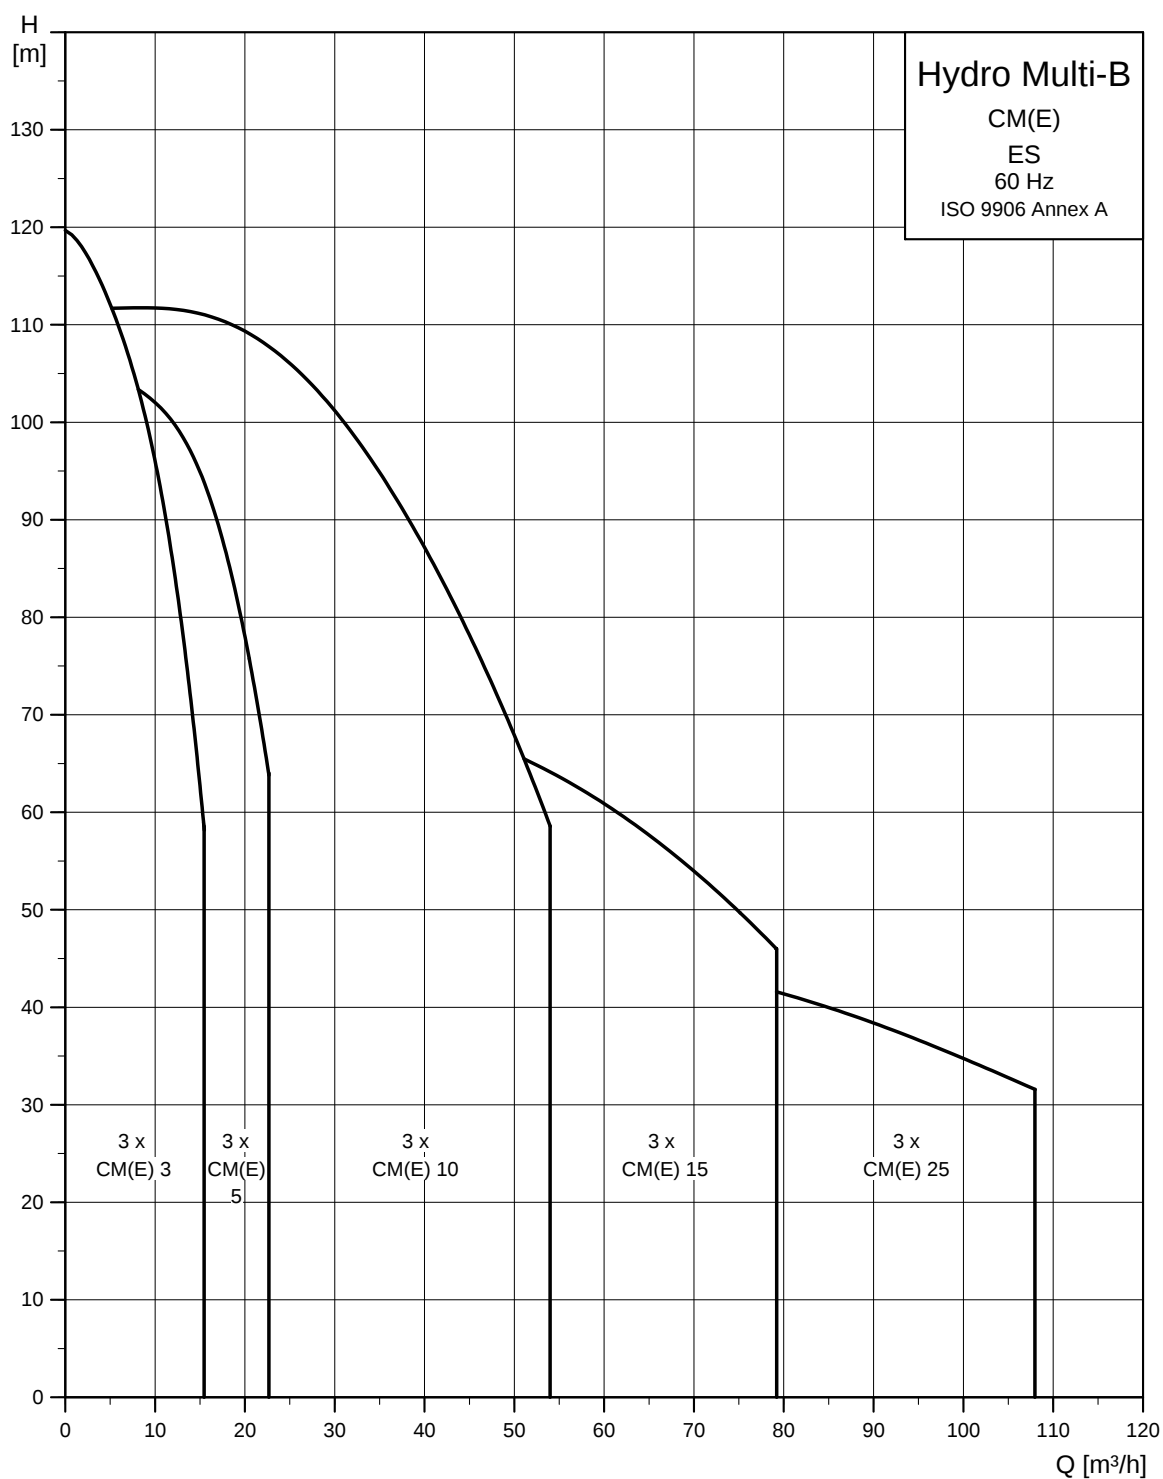

TM05 1196 2411

Note: The performance range is based on the standard range of the CM and CME pumps.


Performance range, 50/60 Hz

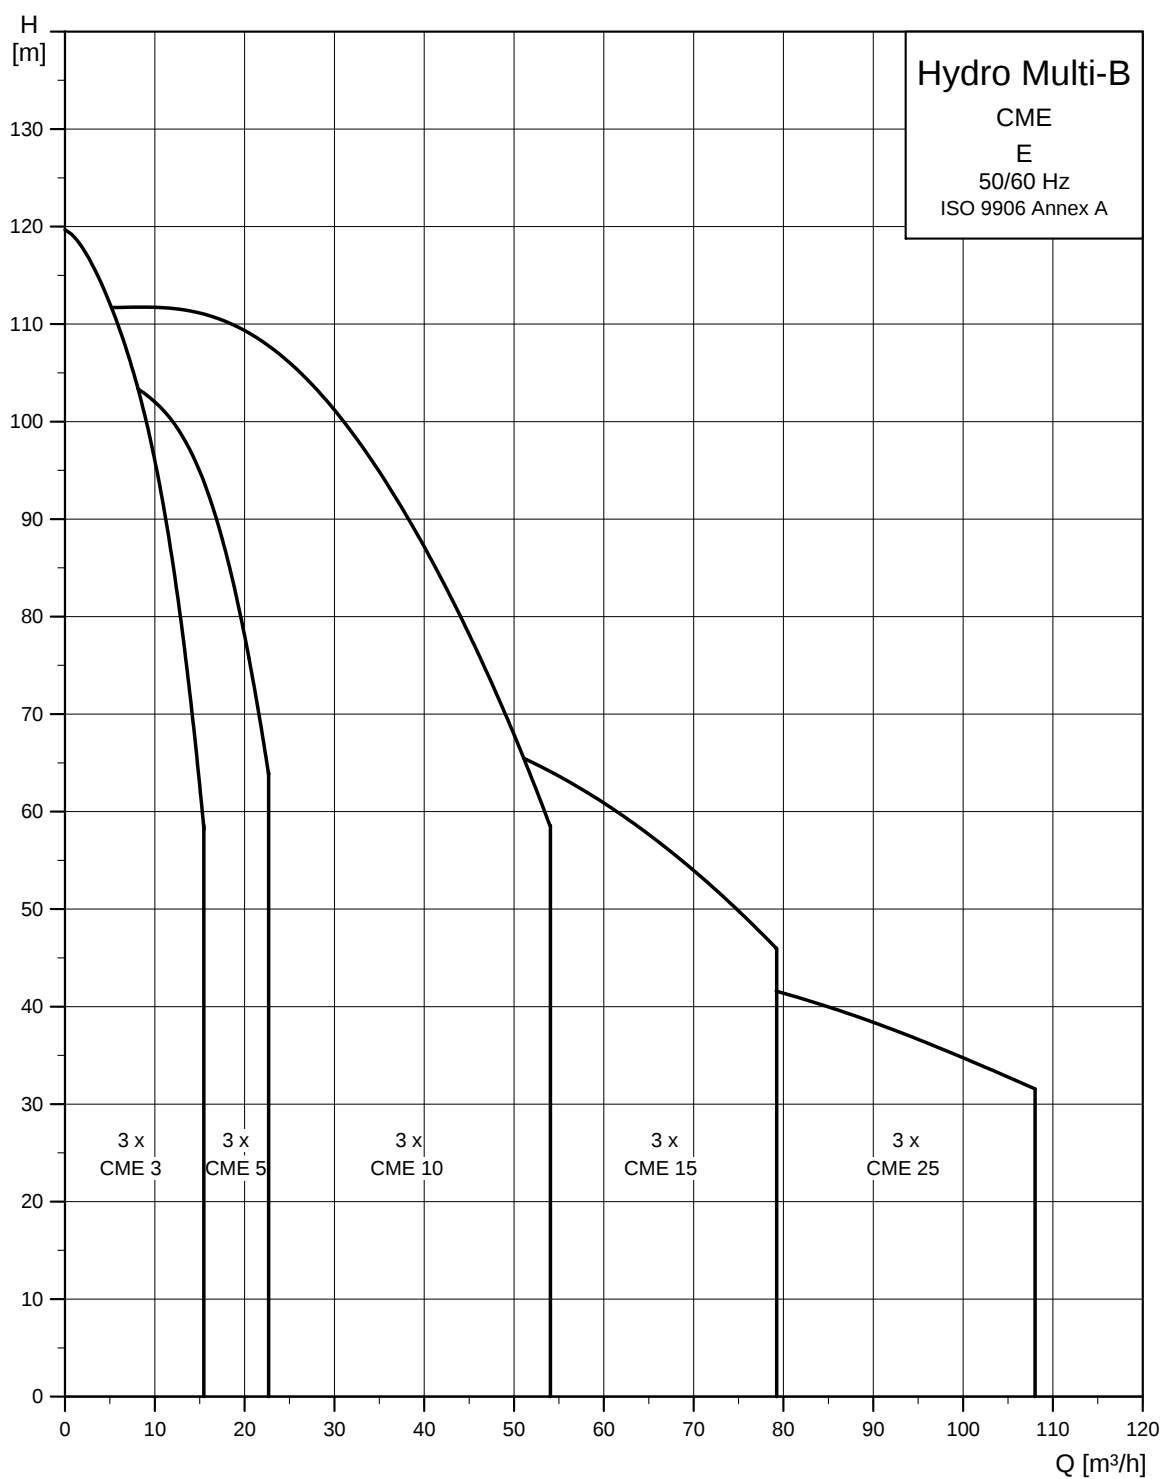


TM05 1197 2411

Note: The performance range is based on the standard range of the CME pumps.

Product range

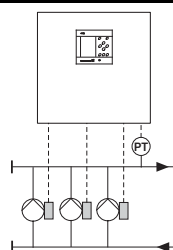

TM03 0993 0905

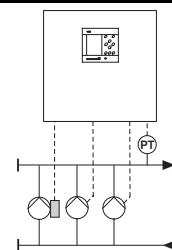

TM03 0996 0905

Control variant	Hydro Multi-B E	Hydro Multi-B ES
Hydraulic data		
Maximum head [m]	120	125
Flow rate [m ³ /h]	0 to 108	0 to 108
Liquid temperature [°C]	0 to +60	0 to +60
Maximum operating pressure [bar]	16	16
Pump and motor data		
Number of pumps	2 or 3	2 or 3
Motor power [kW]	0.55 to 7.5	0.55 to 7.5
Shaft seal		
AQQE (SiC/SiC/EPDM)	•	•
Materials		
CM(E) 3 to CM(E) 25: Stainless steel (EN/DIN 1.4301/AISI 304)	•	•
Manifold: Stainless steel	•	•
Manifold: Galvanised steel ¹⁾	○	○
Pipework connection		
Union	R 2 to R 2 1/2	R 2 to R 2 1/2
DIN flange	DN 80 to DN 100	DN 80 to DN 100
Functions		
Constant-pressure control	•	•
Pump cascade control	•	•
Automatic pump changeover	•	•
Stop function	•	•
Integrated frequency converter	•	• ²⁾
Water shortage protection	○	○
Bus communication	○	○
Redundant primary sensor	○	○
Standby pumps	○	○
Tank-filling software	○	○

• Available as standard.

○ Optional.

¹⁾ Galvanised-steel manifolds are standard in some countries. For further information, contact Grundfos.

²⁾ Only one pump with integrated frequency converter.

Type key

Code	Example	Hydro Multi-B	ES	U	/G	1 CME 10-8 I	2 CM 10-8 A	3 x 380 V, 50 Hz
Type range								
System variants								
E	Two or three pumps with integrated frequency converter							
ES	One pump with integrated frequency converter and one or two mains-operated pumps							
Application								
[-]	Constant-pressure boosting							
U	Tank filling							
Manifold/base frame material								
[-]	Stainless steel (EN 1.4301, AISI 304)/mild steel (Q235)							
G	Galvanised steel/mild steel (Q235)							
OM	Other materials							
Number of pumps with integrated frequency converter, pump type and pump material								
A	Cast iron (EN-GJL-200)							
I	Stainless steel (EN 1.4301/AISI 304)							
G	Stainless steel (EN 1.4401/AISI 316)							
Number of mains-operated pumps, pump type and pump material								
A	Cast iron (EN-GJL-200)							
I	Stainless steel (EN 1.4301/AISI 304)							
G	Stainless steel (EN 1.4401/AISI 316)							
Supply voltage, frequency								

Operating conditions

Maximum operating pressure

As standard, the maximum operating pressure is 16 bar.

Temperatures

Liquid temperature: 0 °C to +60 °C.

Ambient temperature: 0 °C to +40 °C.

Relative air humidity

Maximum 95 %.

3. Construction

Pump

The Grundfos CM and CME pumps are non-self-priming, horizontal, multistage, end-suction centrifugal pumps. The pumps are of the close-coupled type. CM pumps are fitted with mains-operated motors whereas the motor of CME pumps has an integrated frequency converter. Both CM and CME pumps have mechanical shaft seals.

CM



Fig. 2 Grundfos CM pumps

CME

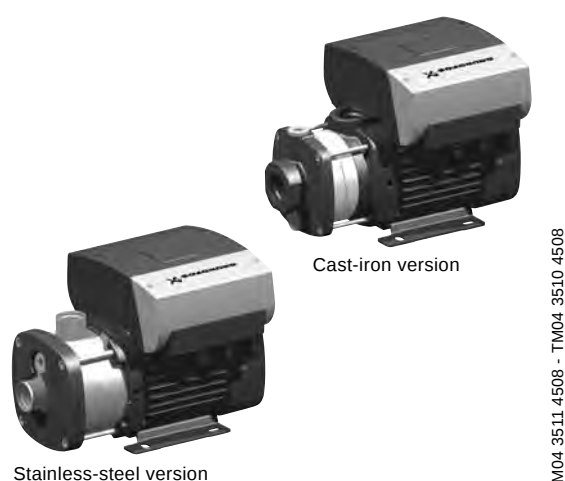


Fig. 3 Grundfos CME pumps

The compactness of the Hydro Multi-B is only achievable due to the unique combination of size and performance offered by the Grundfos CM(E) pumps. Certain dimensions of the CM(E) pumps are 30 % smaller than those of corresponding pumps with identical performance.

For further details on the pumps, see the following data booklets:

Title	Publication number
CM, CME	96903467
Grundfos E-pumps	96570076

The data booklets are available on www.grundfos.com (WebCAPS). See also page 45.

Manifold

A stainless-steel suction manifold is fitted on the suction side of the pumps.

A stainless-steel discharge manifold is fitted on the discharge side of the pumps.

An isolating valve and a non-return valve are fitted between the discharge manifold and the individual pumps. The non-return valve can be fitted on the suction side on request.

As an alternative, Hydro Multi-B is available with galvanised-steel manifolds in some countries. For further information, contact Grundfos.

The suction manifold is secured to the base frame by special supports that keep the manifold in the right position and ensure that no stress is transferred to the pump.

Control cabinet and CU 323

The control cabinet contains all the necessary electrical components to control the pumps. The CU 323 is located in the cabinet front.

The CU 323 is the control panel of the Hydro Multi-B and features two digital displays, two system indicator lights and three additional indicator lights per pump in the system. Furthermore, it has indicator lights for water shortage and sensor fault. The CU 323 has four buttons plus one button per pump in the system.

The control panel enables manual setting and change of parameters such as setpoint, start/stop of system or individual pumps, resetting of alarms and monitoring of system performance.

The CU 323 comes with software for constant-pressure boosting as standard, but tank-filling software is available on request.

Base frame

The Hydro Multi-B booster system has a common base frame. The pumps are secured to the base frame by bolts. The control cabinet is secured to the base frame by means of a stand.

System components

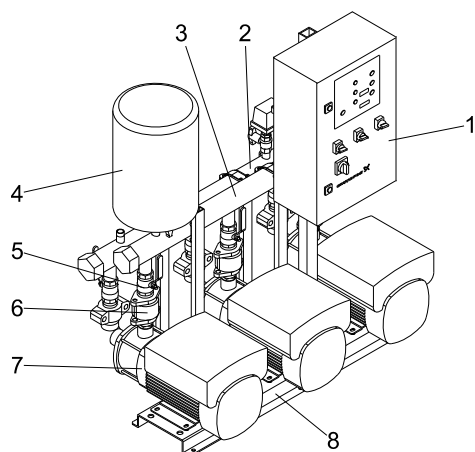


Fig. 4 Front view of Hydro Multi-B booster system

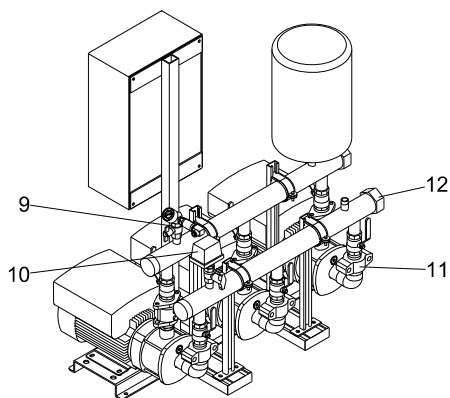
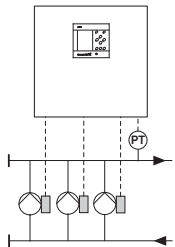
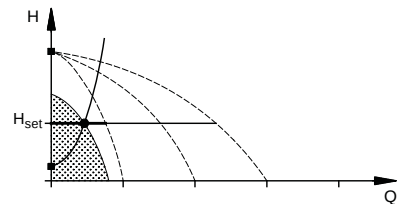
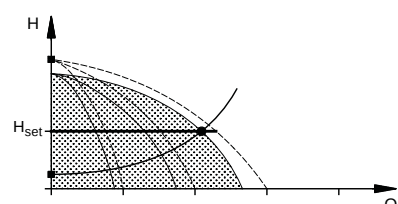
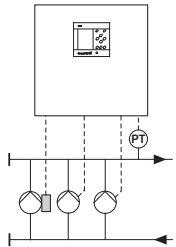
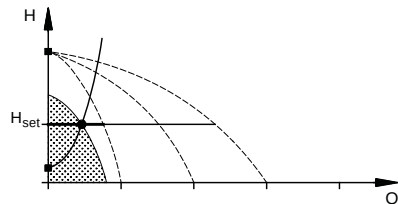
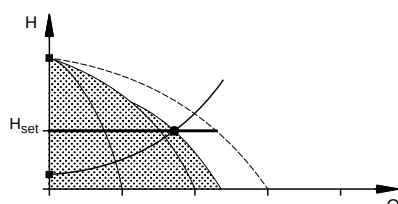


Fig. 5 Rear view of Hydro Multi-B booster system

Pos.	Description	Quantity
1	Control cabinet	1
2	Suction manifold	1
3	Discharge manifold	1
4	Diaphragm tank	1
5	Isolating valve	2 per pump
6	Non-return valve	1 per pump
7	Pump	2 or 3
8	Base frame	1
9	Pressure transmitter and pressure gauge	1
10	Pressure switch or inlet pressure sensor (optional)	1
11	Flexible clamp connection	1 per pump
12	Screw cap or blanking flange	2

4. Functions

Control variants

Control variant E	Control variant ES
Two or three speed-controlled CME pumps	One speed-controlled CME pump and one or two mains-operated CM pumps
 One CME pump in operation.  Three CME pumps in operation. 	 One CME pump in operation.  One CME pump and two CM pumps in operation. 
- Control variant E for constant-pressure applications maintains a constant pressure through continuous adjustment of the speed of the pumps. - The system performance is adjusted to the demand by cutting the required number of pumps in and out and through parallel speed control of the pumps in operation. - Changeover among the pumps is automatic and depends on load, time and fault.	- Control variant ES for constant-pressure applications maintains a constant pressure through continuous adjustment of the speed of the CME pump. The other pumps are cut in or out according to demand and to achieve a performance corresponding to the consumption. - The CME pump always starts first and will be the last to stop. If the pressure cannot be maintained by the pump, one or both CM pumps will be cut in. - Changeover among the mains-operated pumps is automatic and depends on load, time and fault.

Overview of functions

Control variants	Constant-pressure boosting		Tank filling	
	E	ES	E	ES
Functions via the CU 323 control panel				
Pump cascade control	•	•	-	-
Automatic pump changeover	•	•	•	•
Standby pumps	○	○	○ ¹⁾	○ ¹⁾
Redundant primary sensor	○	○	○	○
Digital input for external start/stop relay	•	•	•	•
Water shortage protection	○	○	○	○
Alarm and operation outputs	•	•	•	•
Motor protection	•	•	•	•
Maximum pressure protection	•	•	-	-
Protection in case of sensor fault	•	•	•	•
Protection in case of high tank level	-	-	•	•
Button lock function	•	•	•	•
Communication				
CIM module (CIM = Communication Interface Module)	○	○	○	○
External GENIbus connection (option)	○	○	○	○

• Standard.

○ On request.

- Not available.

¹⁾ In systems with more than two pumps, one is standby pump as standard.

Description of selected functions

Pump cascade control

The Hydro Multi-B automatically ensures that the required number of pumps are running so that the system demand is met in the most efficient way. Furthermore, the speed-controlled pumps in the system are ramped up and down according to the demand, thus offering perfect constant-pressure control.

Water shortage protection

The inlet pressure of the booster system or the level in a tank, if any, on the inlet side is monitored. If the inlet pressure or the water level is too low, all pumps will be stopped.

The pressure or level can be monitored by one of the following:

- float switch
- analog sensor
- external electrode relay
- pressure transmitter
- pressure switch.

Furthermore, the system can be set to be reset and restarted manually or automatically after a water shortage situation.

Stop function and low-flow mode

The stop function makes it possible to stop the last pump in operation if there is no or a very small consumption. This function also prevents heating of the pumped liquid.

The operation of Hydro Multi-B is continuously monitored to detect a low flow rate. If the CU 323 detects no or a low flow rate ($Q < Q_{\min}$), it will change from normal constant-pressure operation to on/off control of the last pump in operation. As long as the flow rate is lower than $Q_{\min}$, the pump will run in on/off operation. If the flow rate is increased to more than $Q_{\min}$, the system will return to normal constant-pressure operation.

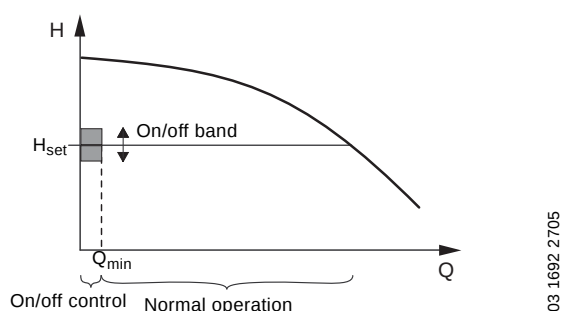


Fig. 6 On/off band

Automatic pump changeover

The CU 323 automatically ensures an equal number of operating hours of the pumps by always cutting in the pump with the lowest number of operating hours. This function also ensures that, if a running pump fails, the next available pump will be started.

Standby pumps

This function makes it possible to limit the maximum performance of the Hydro Multi-B by selecting one or more pumps as standby pumps.

If a three-pump system has one standby pump, maximum two pumps are allowed to operate at a time.

If one of the two pumps in operation has a fault and is stopped, the standby pump will be started. The performance of the booster system is thus not reduced.

The status as standby pump alternates between all pumps.

This function is optional and available on request.

Note: This function must be configured by a Grundfos service engineer.

Tank filling

If the booster system is ordered for tank filling, the CU 323 automatically controls the pumps in sequence so that the tank is filled in a safe and controlled manner.

Note: Tank filling is not standard, but special software is available on request.

Protection functions

- maximum number of starts and stops per hour
- minimum time between start and stop
- water shortage protection
- protection in case of sensor fault
- maximum-pressure alarms
- motor protection.

Communication options

As an option, the Hydro Multi-B can be fitted with a communication module that enables it to communicate with a SCADA system or a mobile phone.

5. Installation

Mechanical installation

Location

The Hydro Multi-B must be installed in a well ventilated room to ensure sufficient cooling of the pumps and the control cabinet.

Note: The booster system is not designed for outdoor installation and must not be exposed to direct sunlight. The booster system should have a 1-metre clearance on all sides for inspection and removal.

Pipework

Arrows on the pump base show the direction of flow of water through the pump.

Note: The pipework connected to the booster system must be of adequate size.

Connect the pipes to the manifolds of the booster system. Either end can be used. Apply sealing compound to the unused end of the manifold, and fit the screw cap. For manifolds with flanges, fit a blanking flange with gasket.

It is advisable to install pipe supports for the suction and discharge pipes. See fig. 7.

To achieve optimum operation and minimise noise and vibration, it may be necessary to consider vibration dampening of the booster system.

Noise and vibration are generated by the rotations in the motor and pump and by the flow in pipework and fittings. The effect on the environment is subjective and depends on correct installation and the state of the other parts of the system.

If booster systems are installed in blocks of flats or the first consumer on the line is close to the booster system, it is advisable to fit expansion joints on the suction and discharge pipes to prevent vibration being transmitted through the pipework.

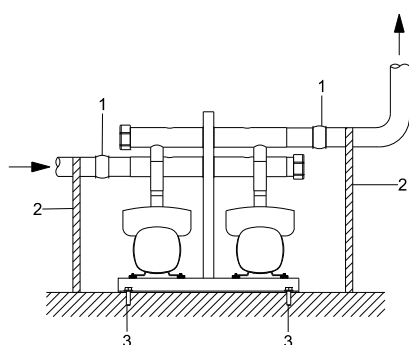


Fig. 7 Example showing the position of expansion joints, pipe supports and mounting bolts

Pos.	Description
1	Expansion joint
2	Pipe support
3	Mounting bolts

Note: Expansion joints, pipe supports and mounting bolts shown in fig. 7 above are not supplied with a standard booster system.

The pipes must be fastened to parts of the building to ensure that they cannot move or be twisted.

Foundation

The booster system should be positioned on an even and solid surface, such as a concrete floor or foundation. The booster system must be bolted to the floor or foundation.

Note: As a rule of thumb, the weight of a concrete foundation should be 1.5 x the weight of the booster system.

Expansion joints

Expansion joints provide these advantages:

- Absorption of thermal expansion and contraction of pipework caused by variations in liquid temperature.
- Reduction of mechanical influences in connection with pressure surges in the pipework.
- Isolation of structure-borne noise in the pipework (only rubber bellows expansion joints).

Note: Expansion joints must not be installed to compensate for inaccuracies in the pipework such as centre displacement of flanges.

Fit expansion joints at a distance of minimum 1 to 1.5 times the nominal flange diameter from the manifold on the suction as well as on the discharge side. This prevents the development of turbulence in the expansion joints, resulting in better suction conditions and a minimum pressure loss on the discharge side.

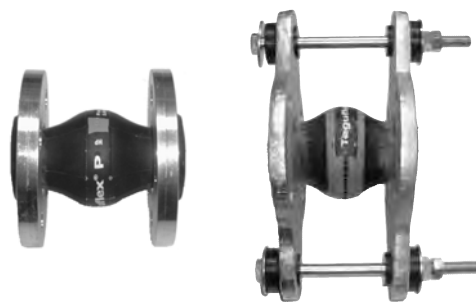


Fig. 8 Examples of rubber bellows expansion joints with and without limiting rods

Expansion joints with limiting rods can be used to minimise the forces caused by the expansion joints. Expansion joints with limiting rods are always recommended for flanges larger than DN 100.

The pipes should be anchored so that they do not stress the expansion joints, manifolds and the pump. Follow the supplier's instructions and pass them on to advisers or pipe installers.

Electrical installation

The electrical installation must be carried out by an authorised person in accordance with local regulations and the relevant wiring diagram.

- The electrical installation of the booster system must be carried out in accordance with enclosure class IP54.
- Make sure that the booster system is suitable for the power supply to which it is to be connected.
- Make sure that the wire cross-section corresponds to the specifications in the wiring diagram.
- ES systems should be protected against phase failure.

6. Sizing

When sizing a booster system, the following must be taken into account:

- The performance of the booster system must meet the highest possible demand, both in terms of flow rate and pressure.
- The booster system must not be oversized. This is important in relation to installation and operating costs.

You can size Grundfos Hydro Multi-B booster systems via WebCAPS, WinCAPS or this data booklet.

Sizing in WebCAPS or WinCAPS (recommended)

We recommend that you size your Hydro Multi-B booster system in WebCAPS or WinCAPS, which are selection programs offered by Grundfos.

For further information, see page 45.

WebCAPS and WinCAPS feature a user-friendly and easy-to-use virtual guide which leads you through the selection of the optimum booster system for the application in question.



TM04 4111 0709

Fig. 9 Sizing in WebCAPS

Sizing via this data booklet

There are seven steps:

1. Maximum flow requirement
2. Required discharge pressure
3. System layout
4. Consumption profile and load profile
5. Inlet pressure
6. Selection of booster system
7. Accessories.

1. Maximum flow requirement

Total consumption and maximum flow rate depend on the application in question. The maximum flow requirement can be calculated by means of the table below which is based on statistical data.

Consumer	Unit	Q_{year}	Consumption period d	Q_{day}	fd	$Q(m)_{\text{day}}$	ft	Max. flow rate
		m^3/year	days/year	m^3/day		m^3/day		m^3/h
Residence building	Residence (2.5 persons)	183	365	0.5	1.3	0.65	1.7	0.046
Office building	Employee	25	250	0.1	1.2	0.12	3.6	0.018
Shopping centre	Employee	25	300	0.08	1.2	0.1	4.3	0.018
Supermarket	Employee	80	300	0.27	1.5	0.4	3.0	0.05
Hotel	Bed	180	365	0.5	1.5	0.75	4.0	0.125
Hospital	Bed	300	365	0.8	1.2	1.0	3.0	0.12
School	Pupil	8	200	0.04	1.3	0.065	2.5	0.007

Example: Hotel with 300 beds

Number of beds: n.

Total annual consumption: $Q_{\text{year}} \times n$.

Consumption period: d.

Average consumption per day: $(Q_{\text{year}} \times n)/d$.

Yearly maximum consumption: $Q(m)_{\text{day}} = fd \times Q_{\text{day}}$.

Maximum flow requirement per hour: $Q_{\text{max}} = \text{max. flow rate/hour} \times \text{number of beds}$.

Calculation

n = 300 beds.

$Q_{\text{year}} \times n = 180 \times 300 = 54,000 \text{ m}^3/\text{year}$.

d = 365 days/year.

$(Q_{\text{year}} \times n)/d = 54,000/365 = 148 \text{ m}^3/\text{day}$.

$Q(m)_{\text{day}} = fd \times Q_{\text{day}} = 1.5 \times 148 = 222 \text{ m}^3/\text{day}$.

$Q_{\text{max}} = \text{Max. flow rate/hour} \times \text{number of beds} = 0.125 \times 300 = 37.5 \text{ m}^3/\text{h}$.

2. Required discharge pressure

The required discharge pressure, p_{set} , of the Hydro Multi-B can be calculated from the following formula:

$$p_{\text{set}} = p_{\text{tap}(\text{min})} + p_f + (h_{\text{max}}/10.2)$$

$$p_{\text{boost}} = p_{\text{set}} - p_{\text{in}(\text{min})}$$

Key

p_{set} = Required discharge pressure [bar].


$p_{\text{tap}(\text{min})}$ = Required minimum pressure at the highest tapping point [bar].

p_f = Total pipe friction loss [bar].

h_{max} = Height from booster discharge port to highest tapping point [metres].

$p_{\text{in}(\text{min})}$ = Minimum inlet pressure [bar].

p_{boost} = Required boost [bar].

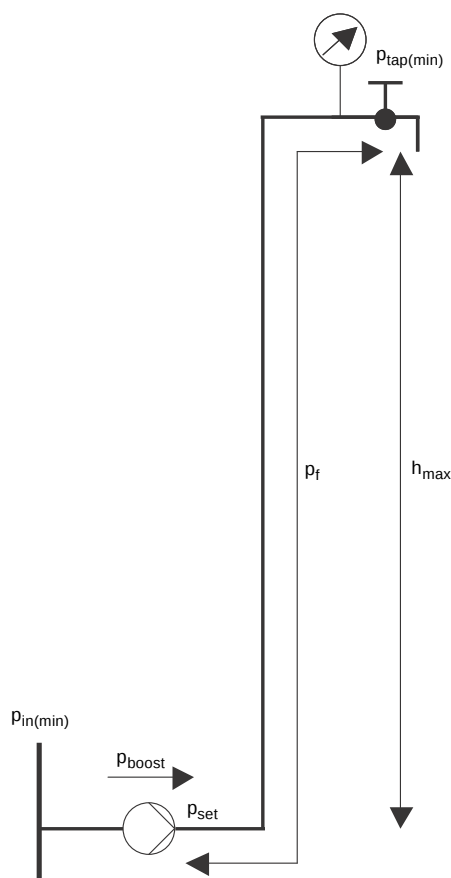

TM04 4105 0709

Fig. 10 Calculation of required discharge pressure

Calculation

$$p_{\text{tap}(\text{min})} = 2 \text{ bar}$$

$$p_f = 1.2 \text{ bar}$$

$$h_{\text{max}} = 12.5 \text{ metres}$$

$$p_{\text{in}(\text{min})} = 2 \text{ bar}$$

$$p_{\text{set}} = 2 + 1.2 + (12.5/10.2) = \mathbf{4.4 \text{ bar}}$$

$$p_{\text{boost}} = 4.4 - 2 = 2.4 \text{ bar.}$$

3. System layout

Not relevant for Hydro Multi-B.

4. Consumption profile and load profile

Not relevant for Hydro Multi-B.

5. Inlet pressure

The inlet pressure must be taken into consideration to ensure safe operation.

The values for inlet pressure and operating pressure should not be considered individually, but should always be compared.

6. Selection of booster system

Select the booster system on the basis of these factors: maximum flow requirement, required discharge pressure, load profile, number of pumps required, possible standby pumps, etc.

7. Accessories

When the optimum Hydro Multi-B booster system has been selected, consider whether accessories are required.

Example

Water shortage protection


Any booster system **must** be protected against water shortage.

The inlet conditions determine the type of water shortage protection to be used:

- If the system draws water from a tank or well, select a float switch, analog sensor or external electrode relay.
- If the system has an inlet pressure, select a pressure transmitter or a pressure switch.

Understanding the curve charts

The x-axis showing the flow rate (Q) in m³/h is common to all the curves; the y-axis showing the head (H) in metres has been adapted to the individual pump type.

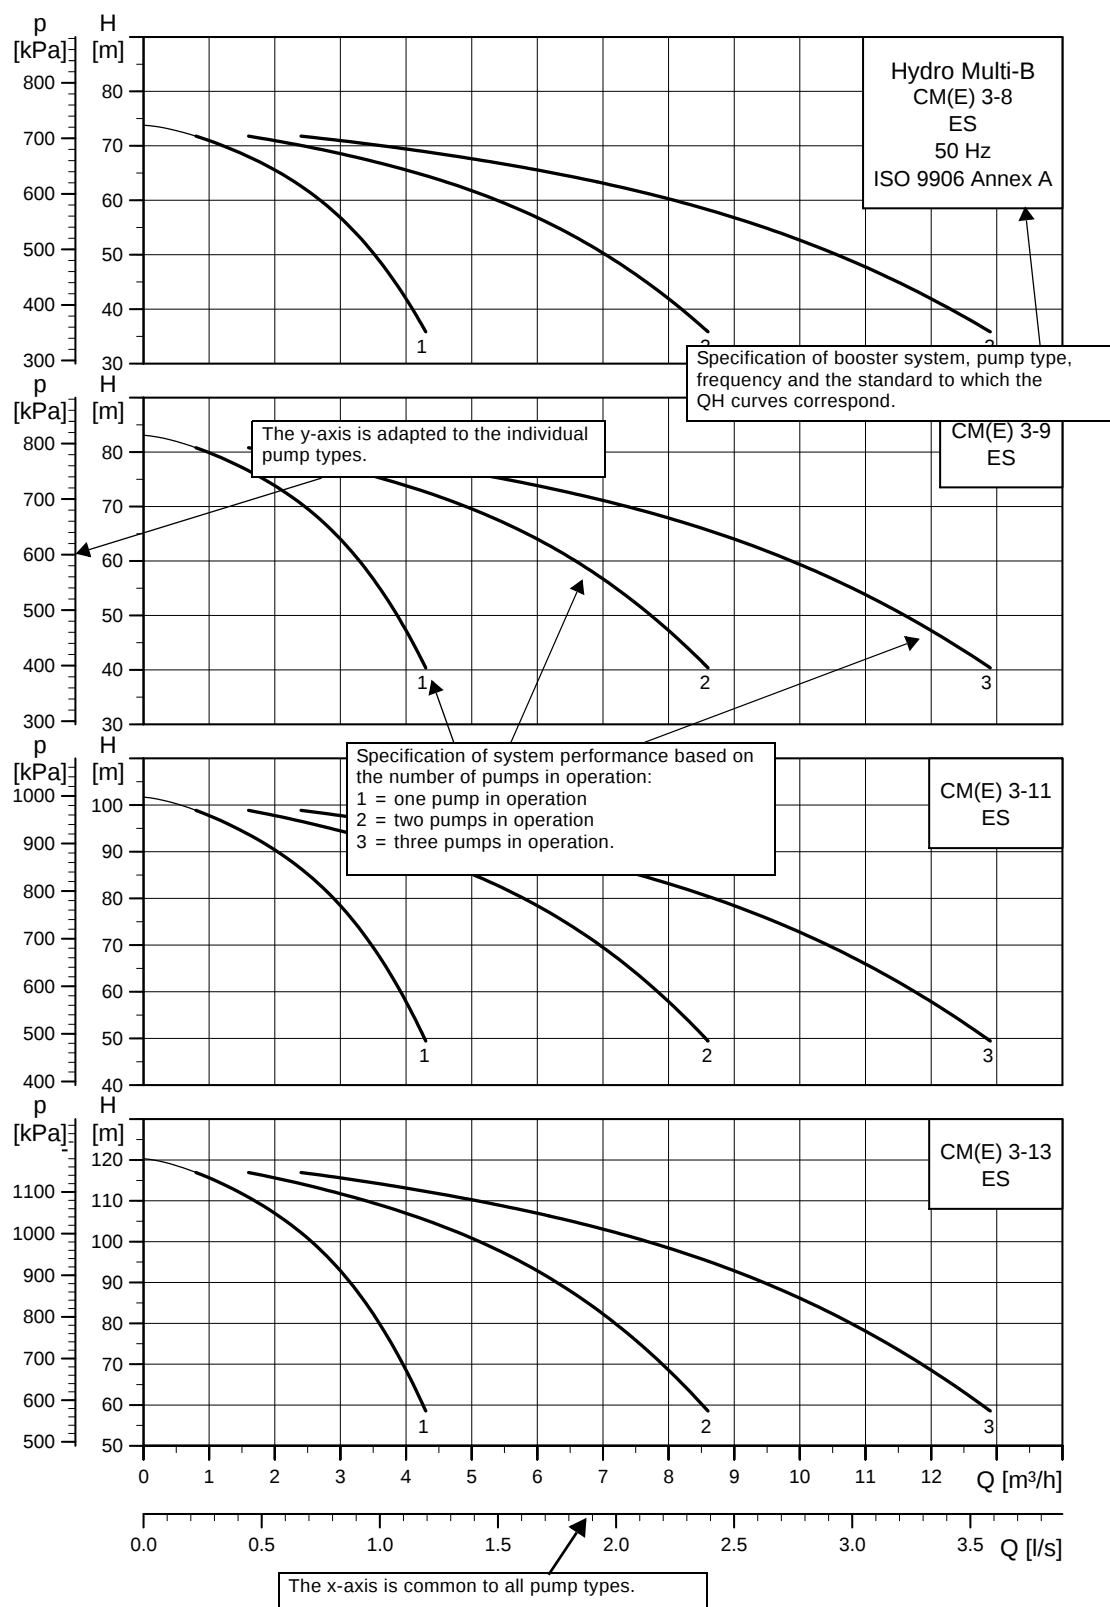

TM05 1199 2411

Fig. 11 Understanding the curve charts

How to select a system, example

- A flow rate of 37.5 m³/h is required.
- A head of 44 metres is required.


Draw a vertical line from the specified flow rate.

Draw a horizontal line from the head required.

The intersection of the two lines gives the number of pumps required for the system, i.e. three CME 15-3 pumps.

The pump type best meeting this specification is found by means of the y-axis, for instance three CME 15-3 pumps.

Only booster systems with performance ranges within the hatched area in the example should be selected.

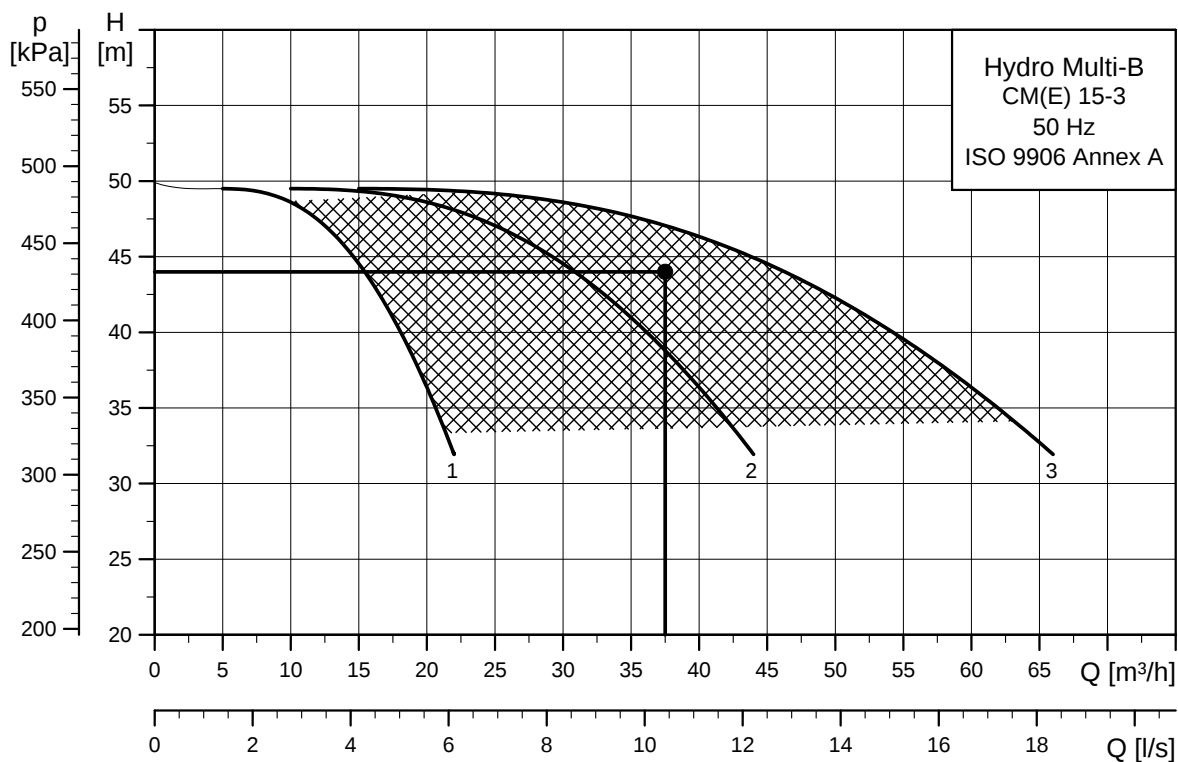

TM05 1213 2411

Fig. 12 Example of selection of system

7. Curve conditions

How to read the curve charts

The guidelines below apply to the curves shown on the following pages:


- Tolerances to ISO 9906, Annex A, if indicated.
- Measurements have been made with airless water at a temperature of +20 °C.
- The curves apply to the following kinematic viscosity: $\nu = 1 \text{ mm}^2/\text{s}$ (1 cSt).
- The QH curves apply to fixed speeds of 2900 min^{-1} (50 Hz) and 3480 min^{-1} (60 Hz).

Note: Please refer to WebCAPS for pump curves which include the characteristic of the selected motor. In WebCAPS, it is also possible to adjust the curves, depending on the density and viscosity.

The conversion between head H (m) and pressure p (kPa) applies to a water density of $\rho = 1000 \text{ kg/m}^3$.


8. Performance curves

Hydro Multi-B ES with CM(E) 3, 50 Hz

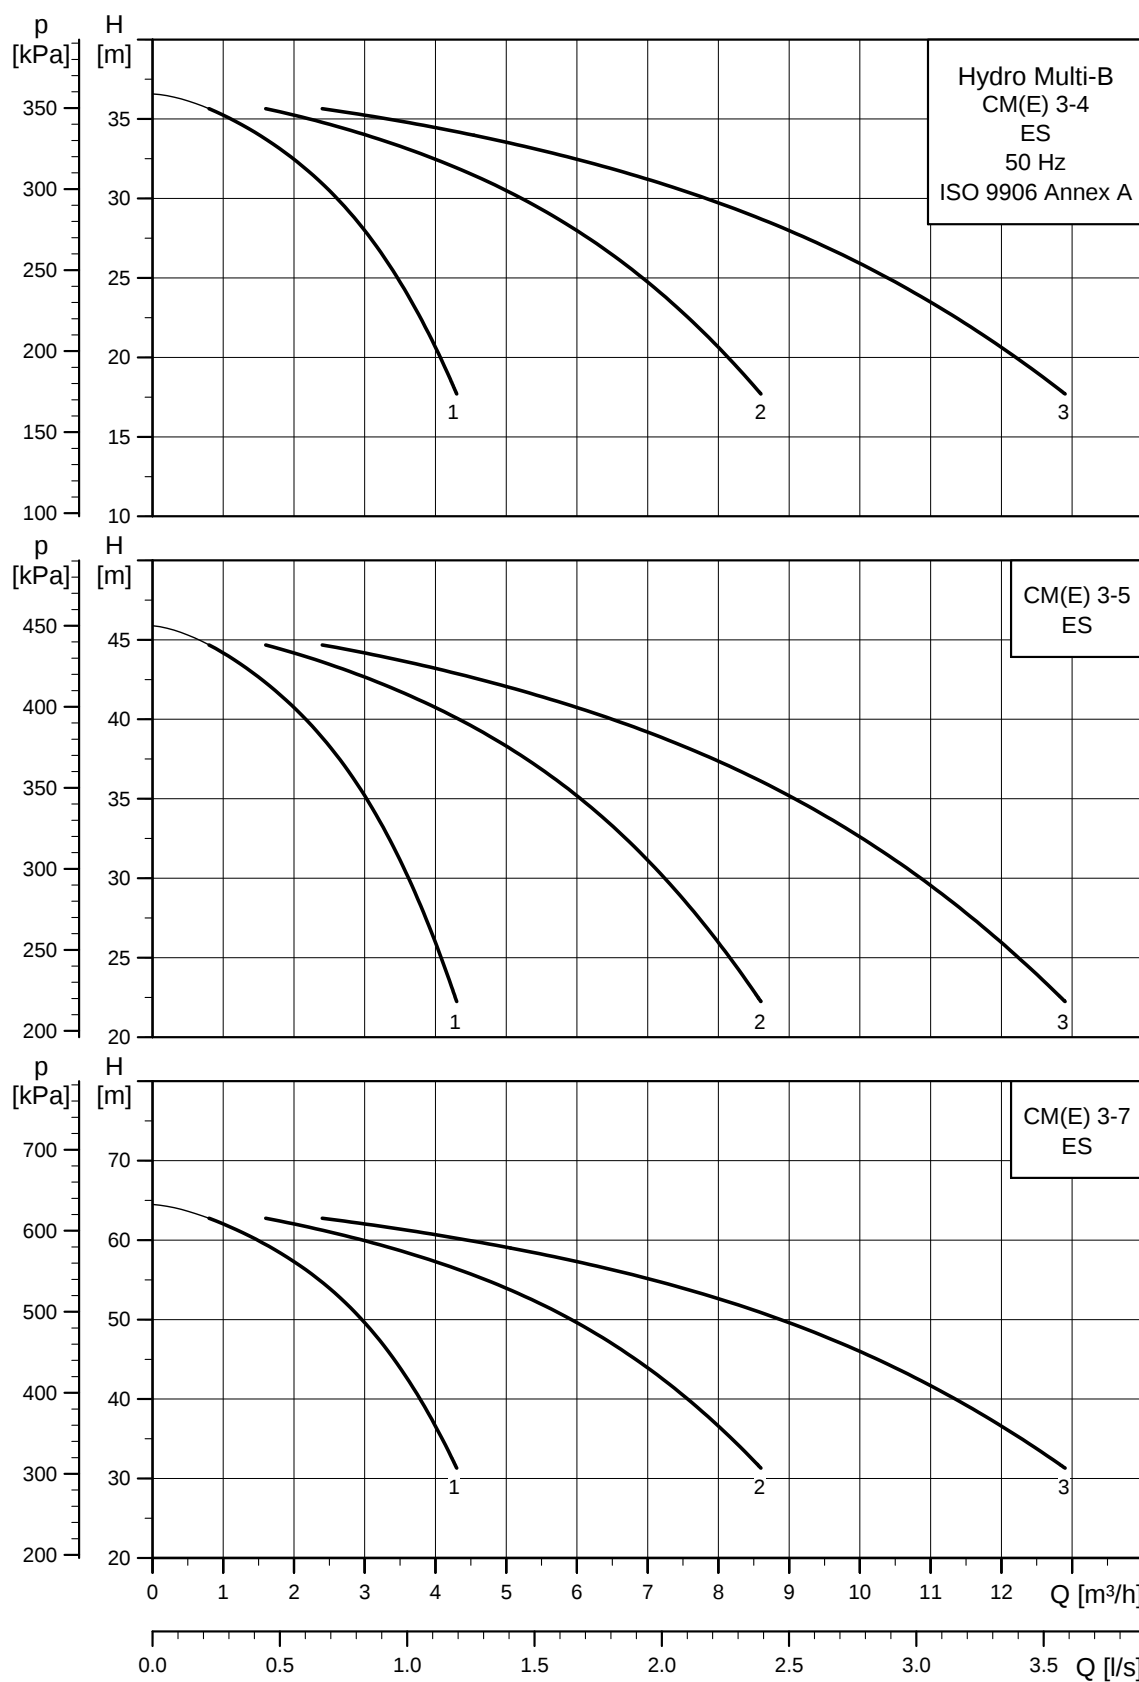


TM05 1198 2411

Hydro Multi-B ES with CM(E) 3, 50 Hz

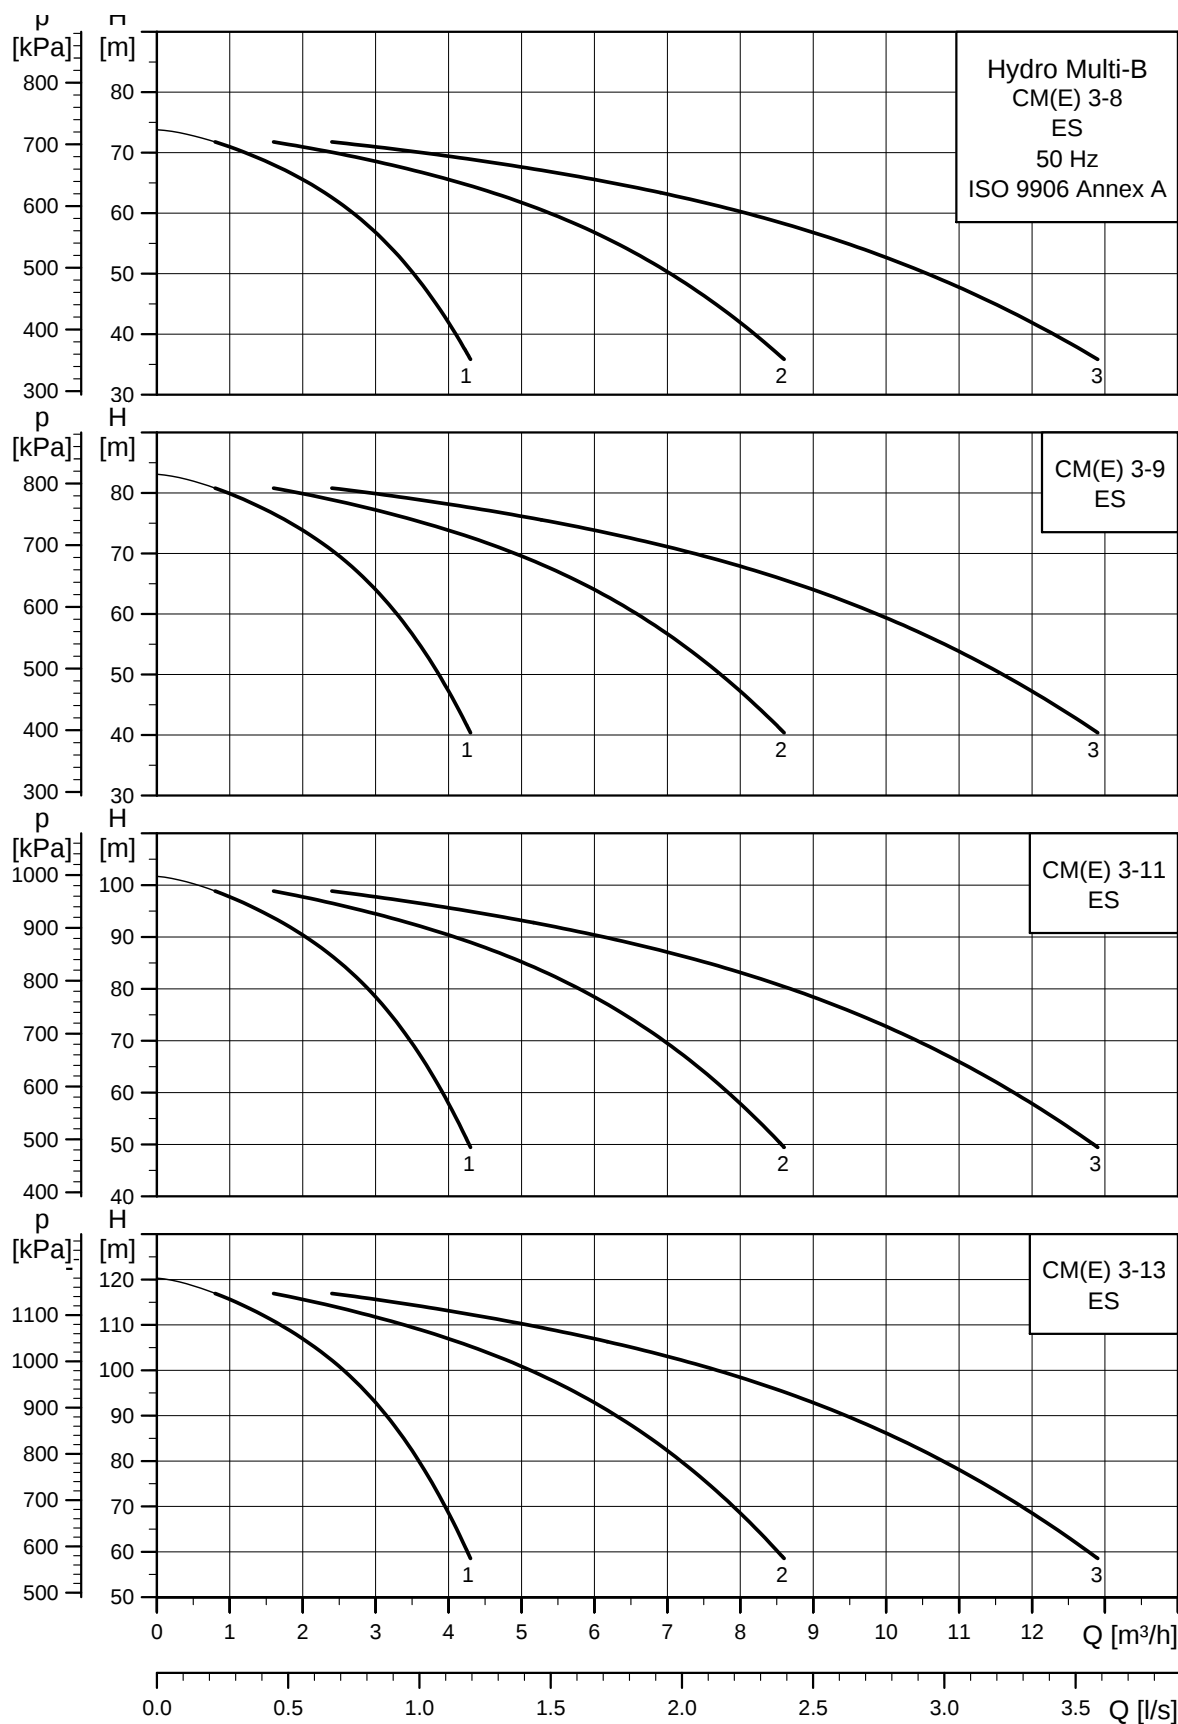


TM05 1199 2411

Hydro Multi-B ES with CM(E) 5, 50 Hz

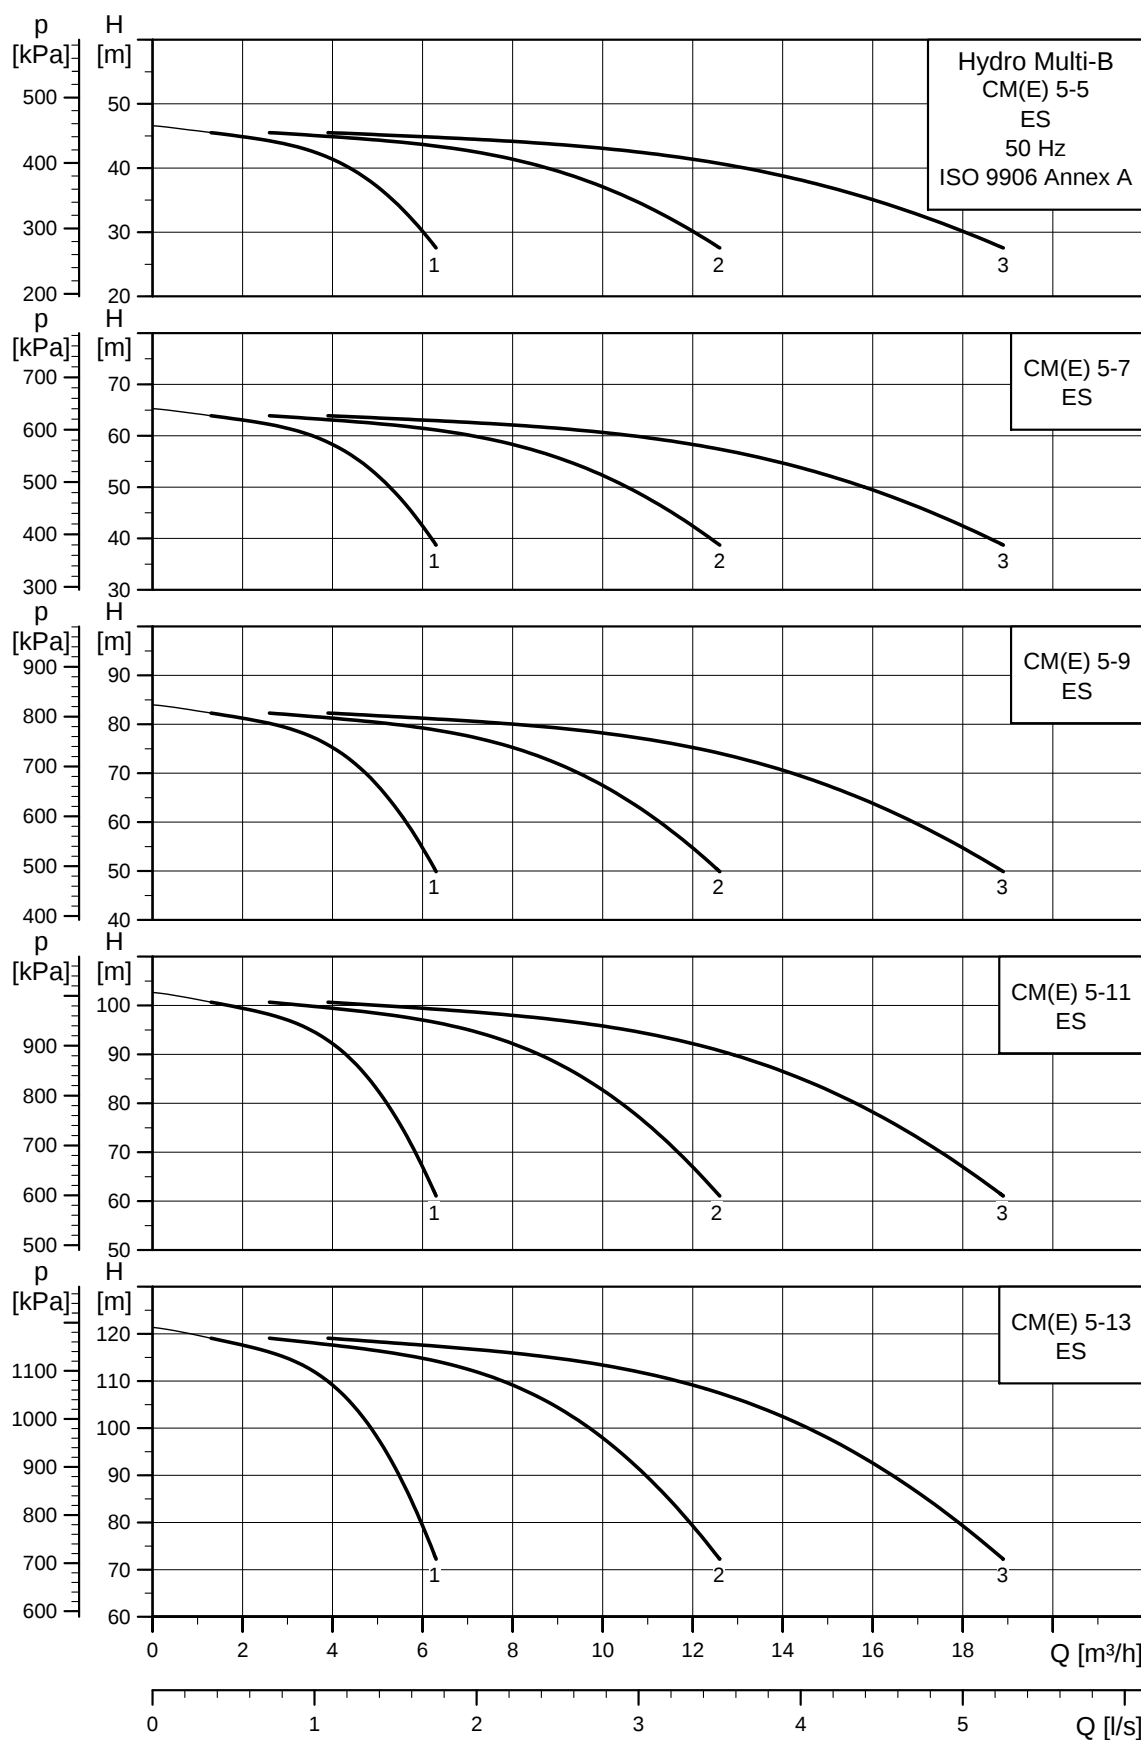



TM05 1200 2411

Hydro Multi-B ES with CM(E) 10, 50 Hz

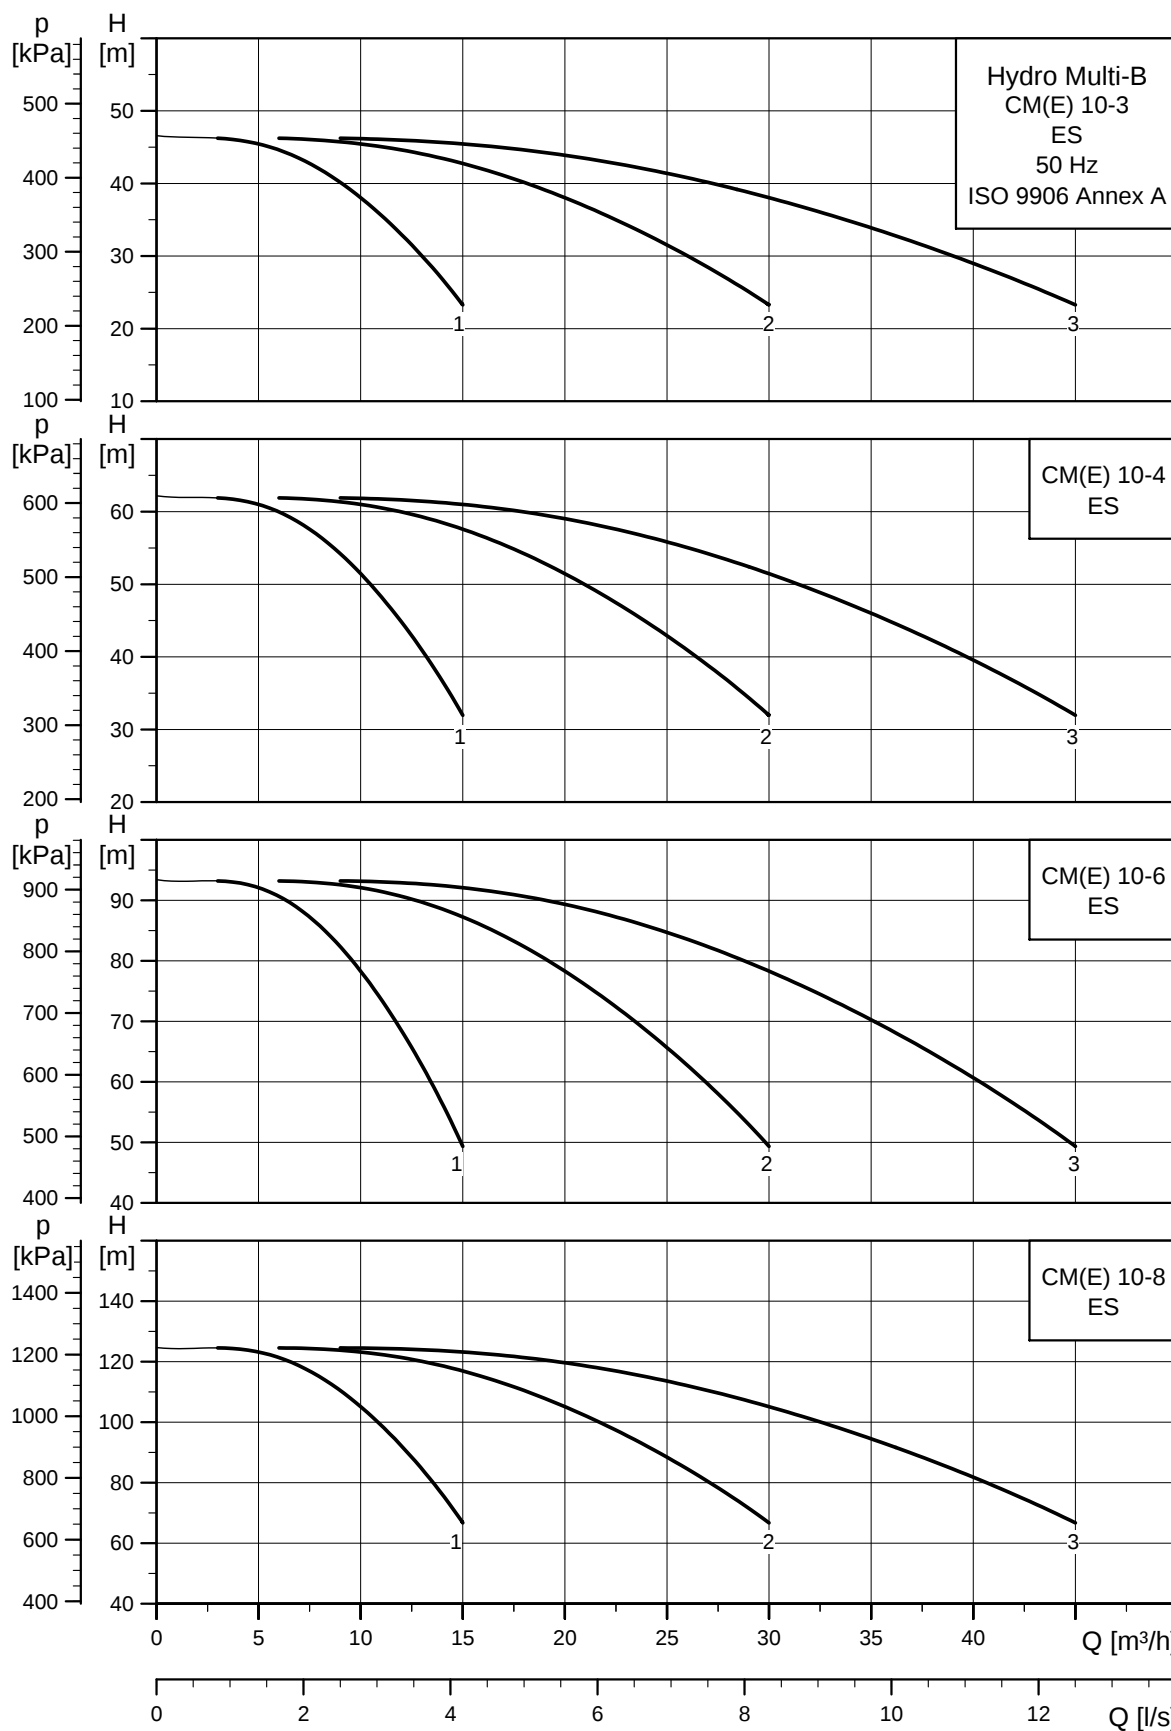



TN05 1201 2411

Hydro Multi-B ES with CM(E) 15, 50 Hz

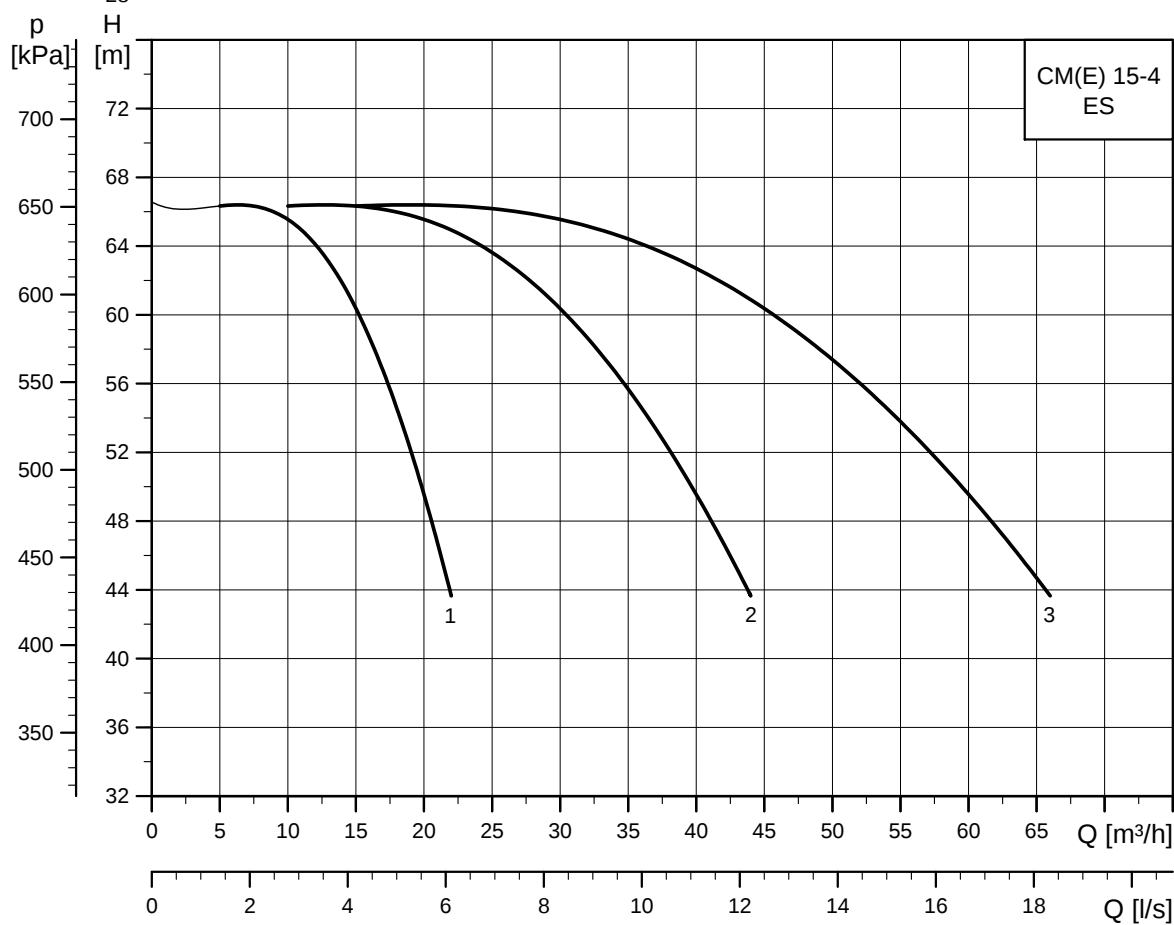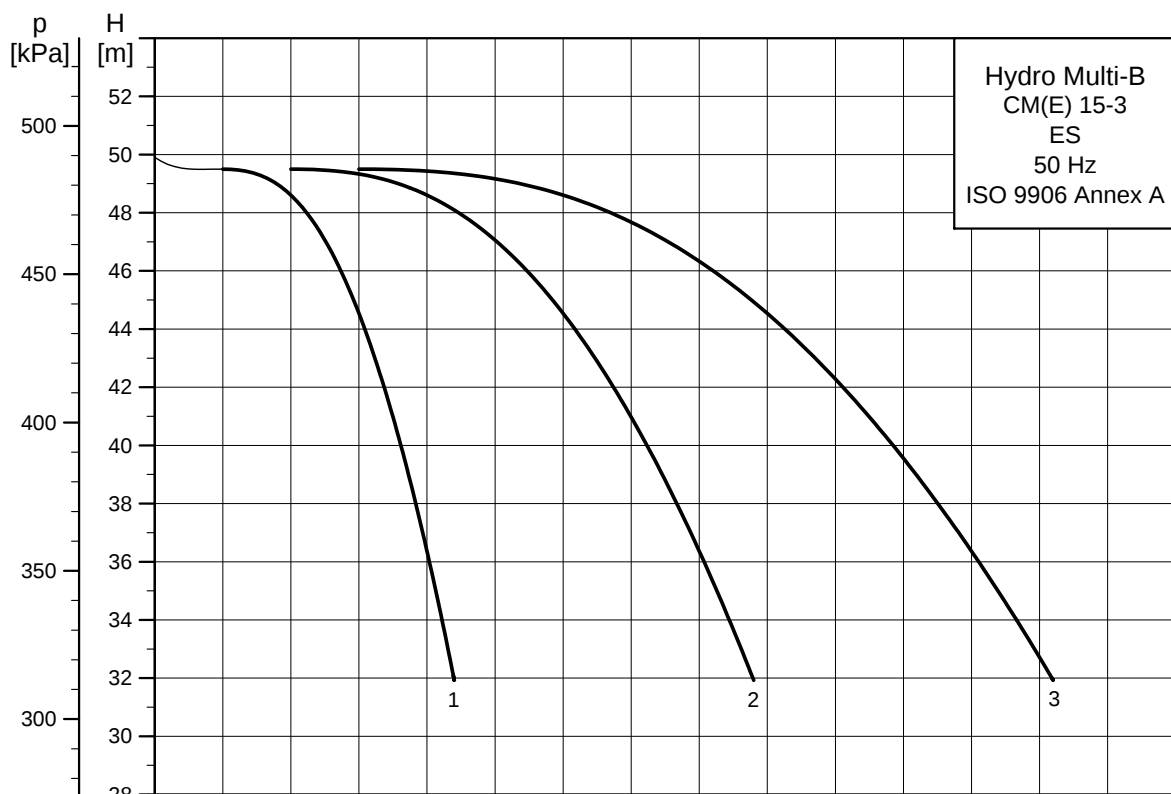


TM05 1202 2411

Hydro Multi-B ES with CM(E) 25, 50 Hz

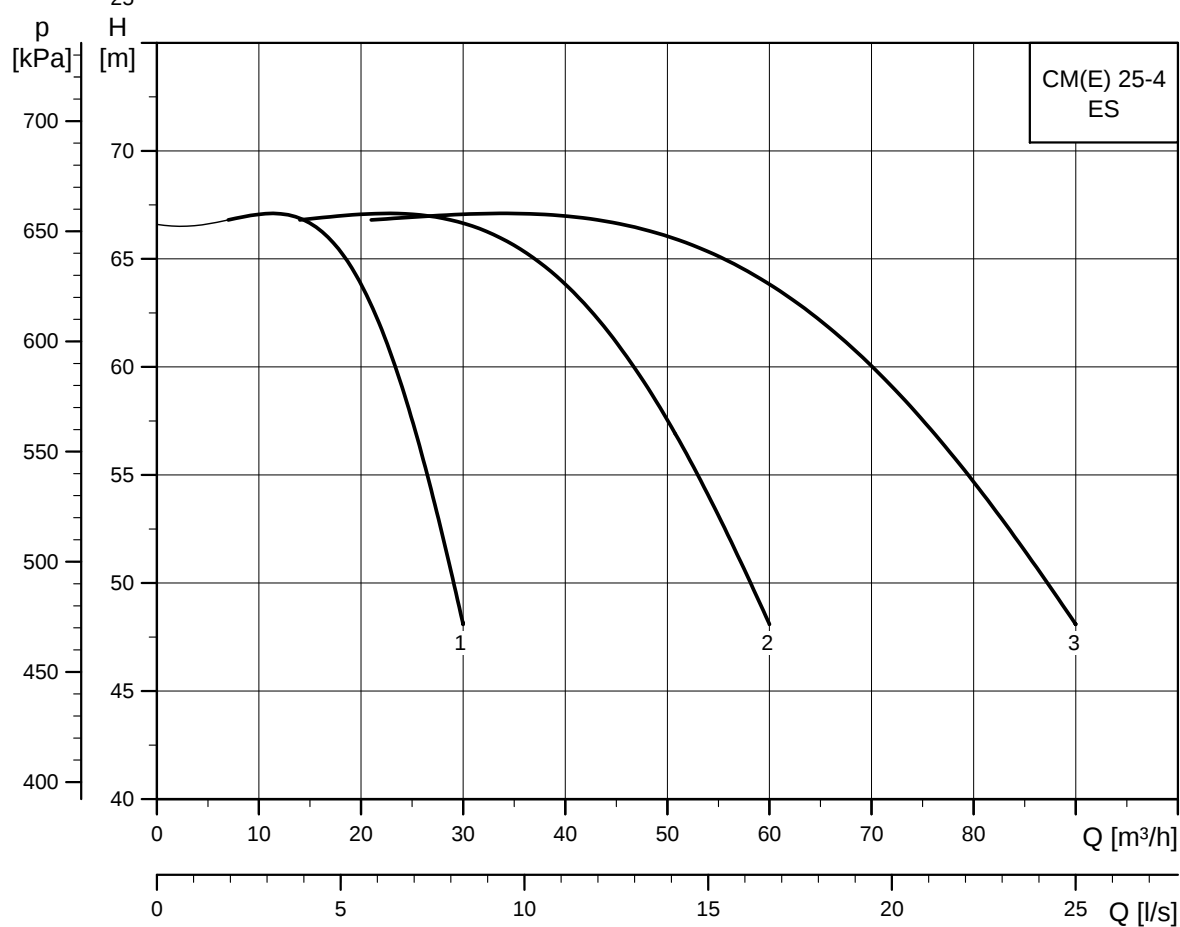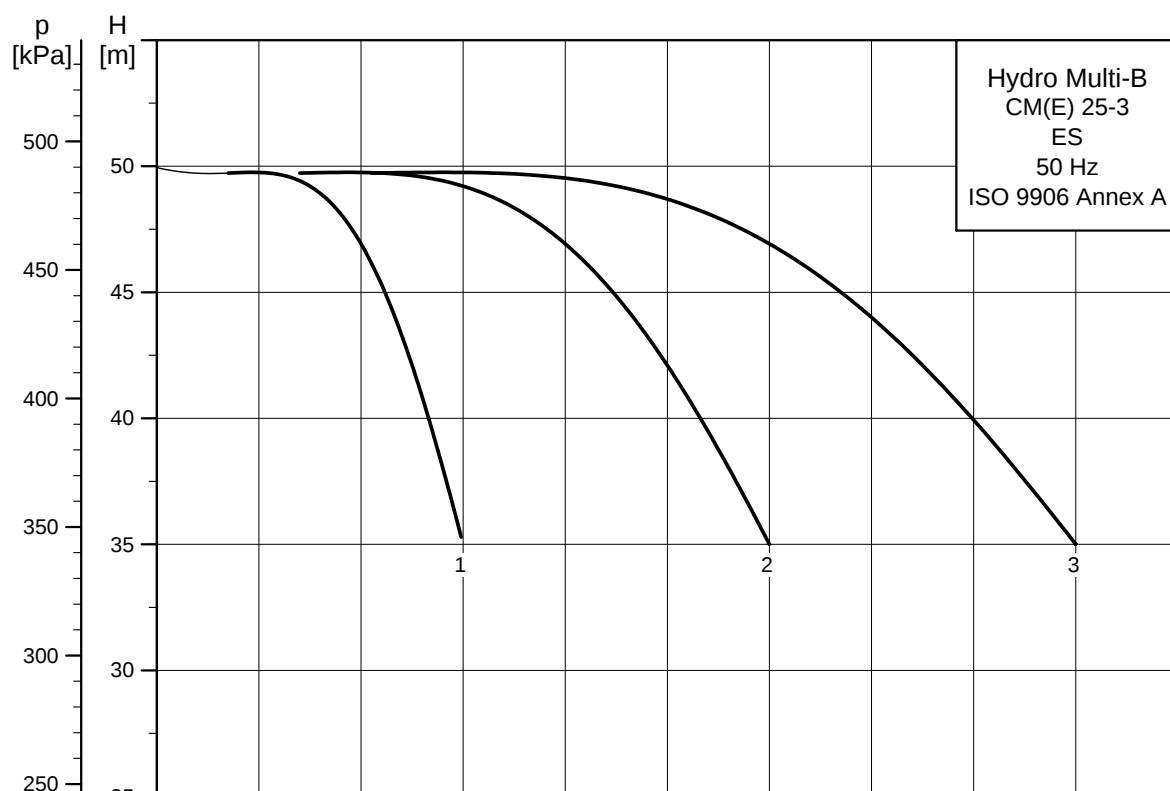


TM05 1203 2411

Hydro Multi-B ES with CM(E) 3, 60 Hz

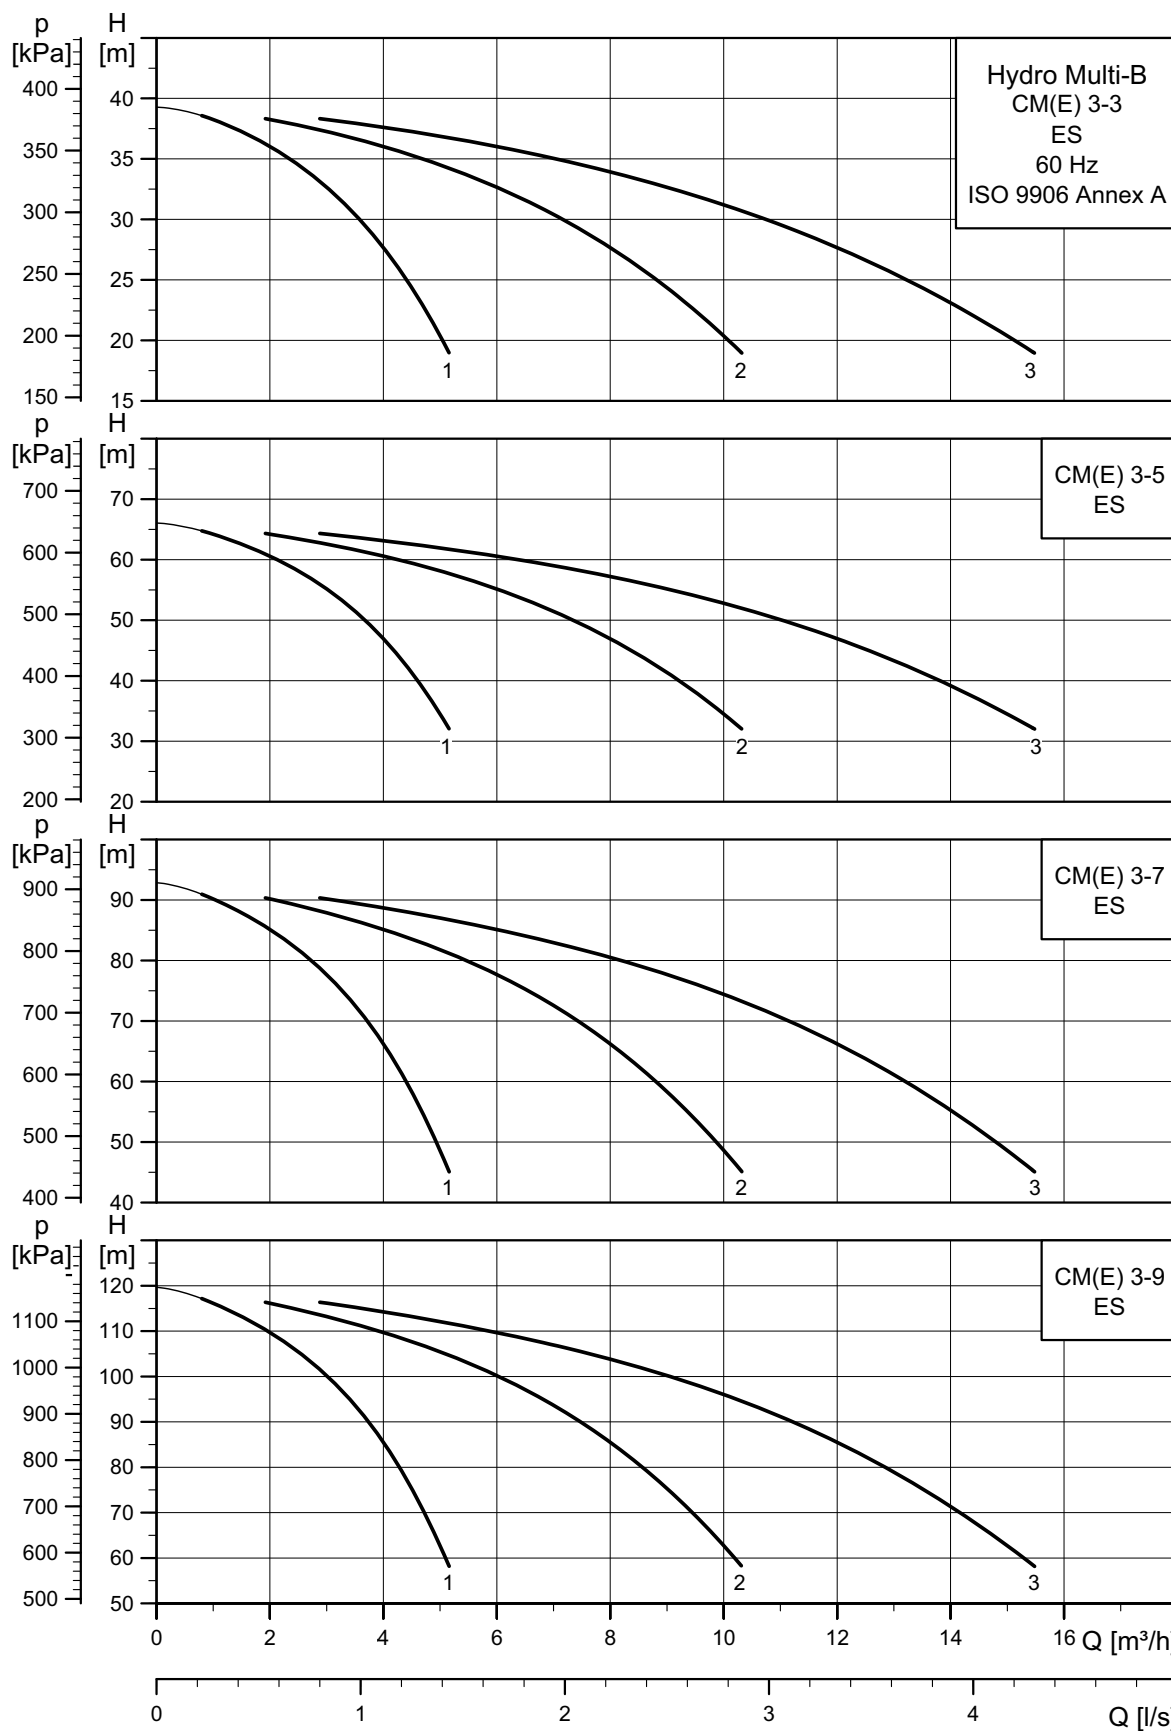


TM05 1401 2711

Hydro Multi-B ES with CM(E) 5, 60 Hz

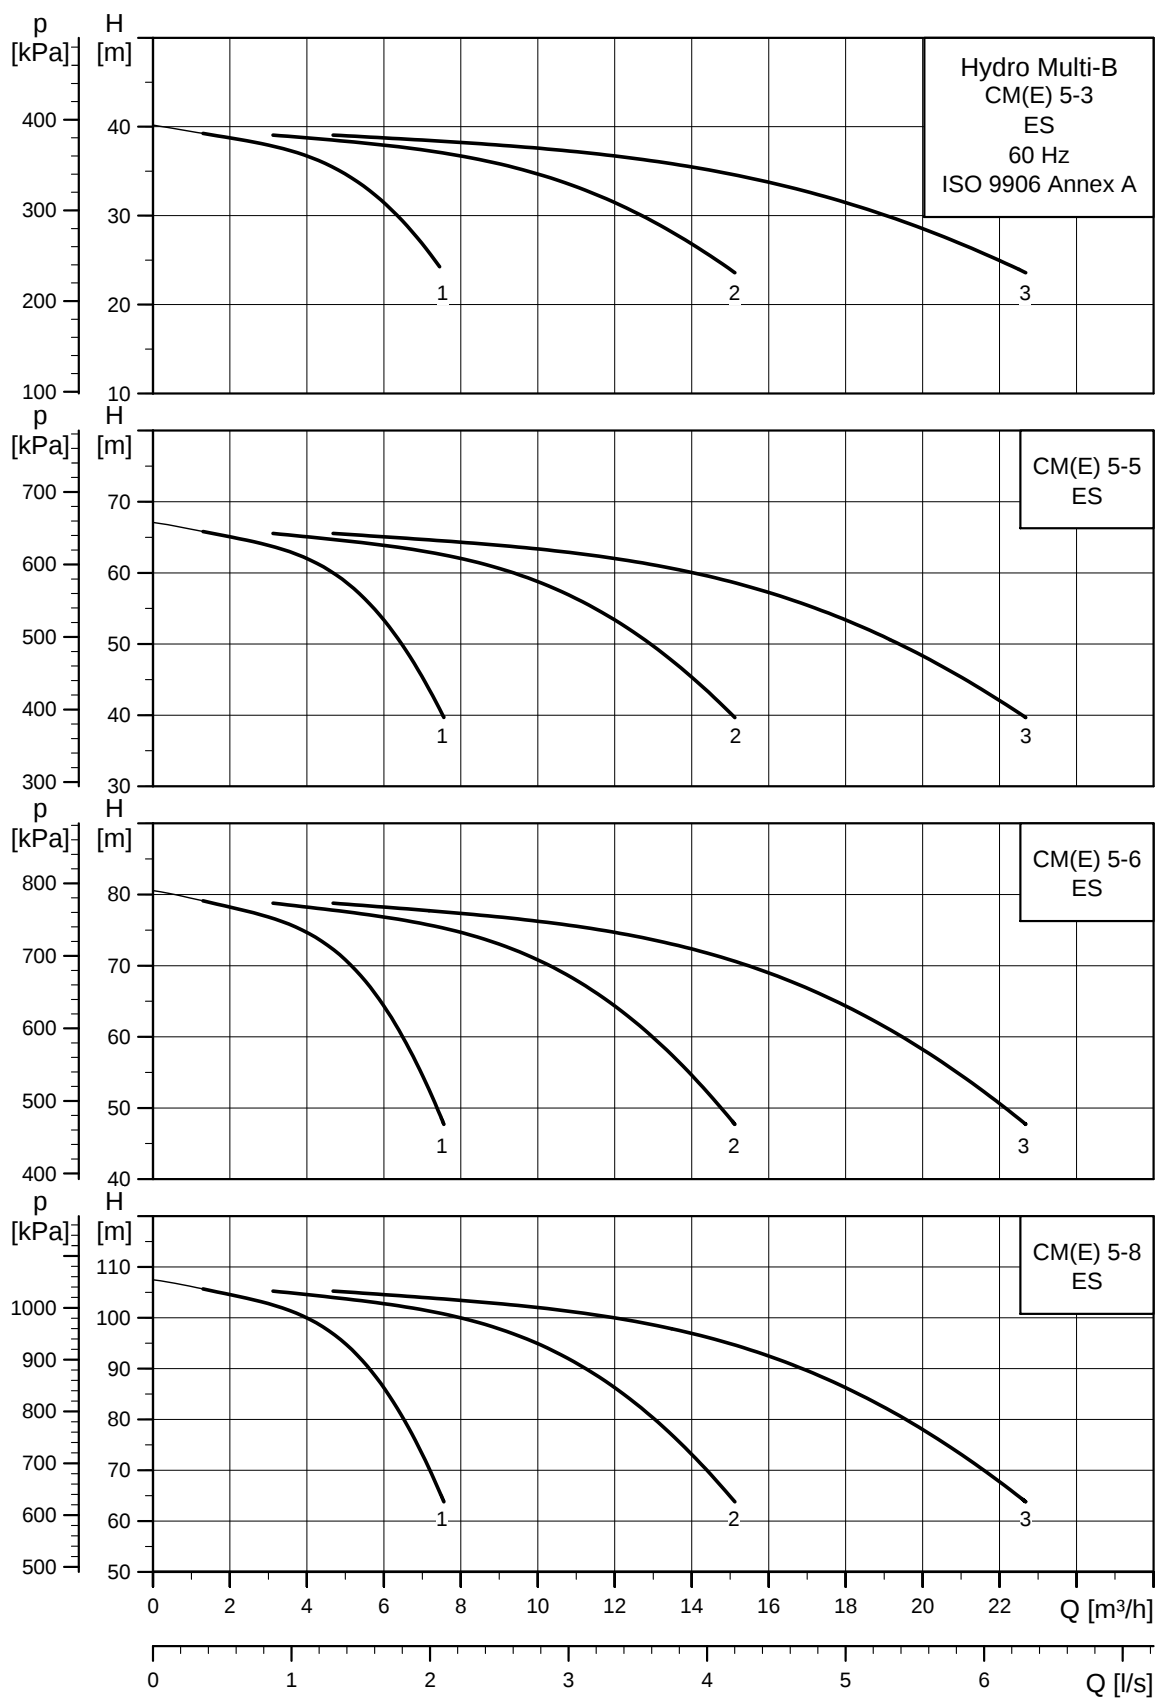


TM05 1204 2411

Hydro Multi-B ES with CM(E) 10, 60 Hz

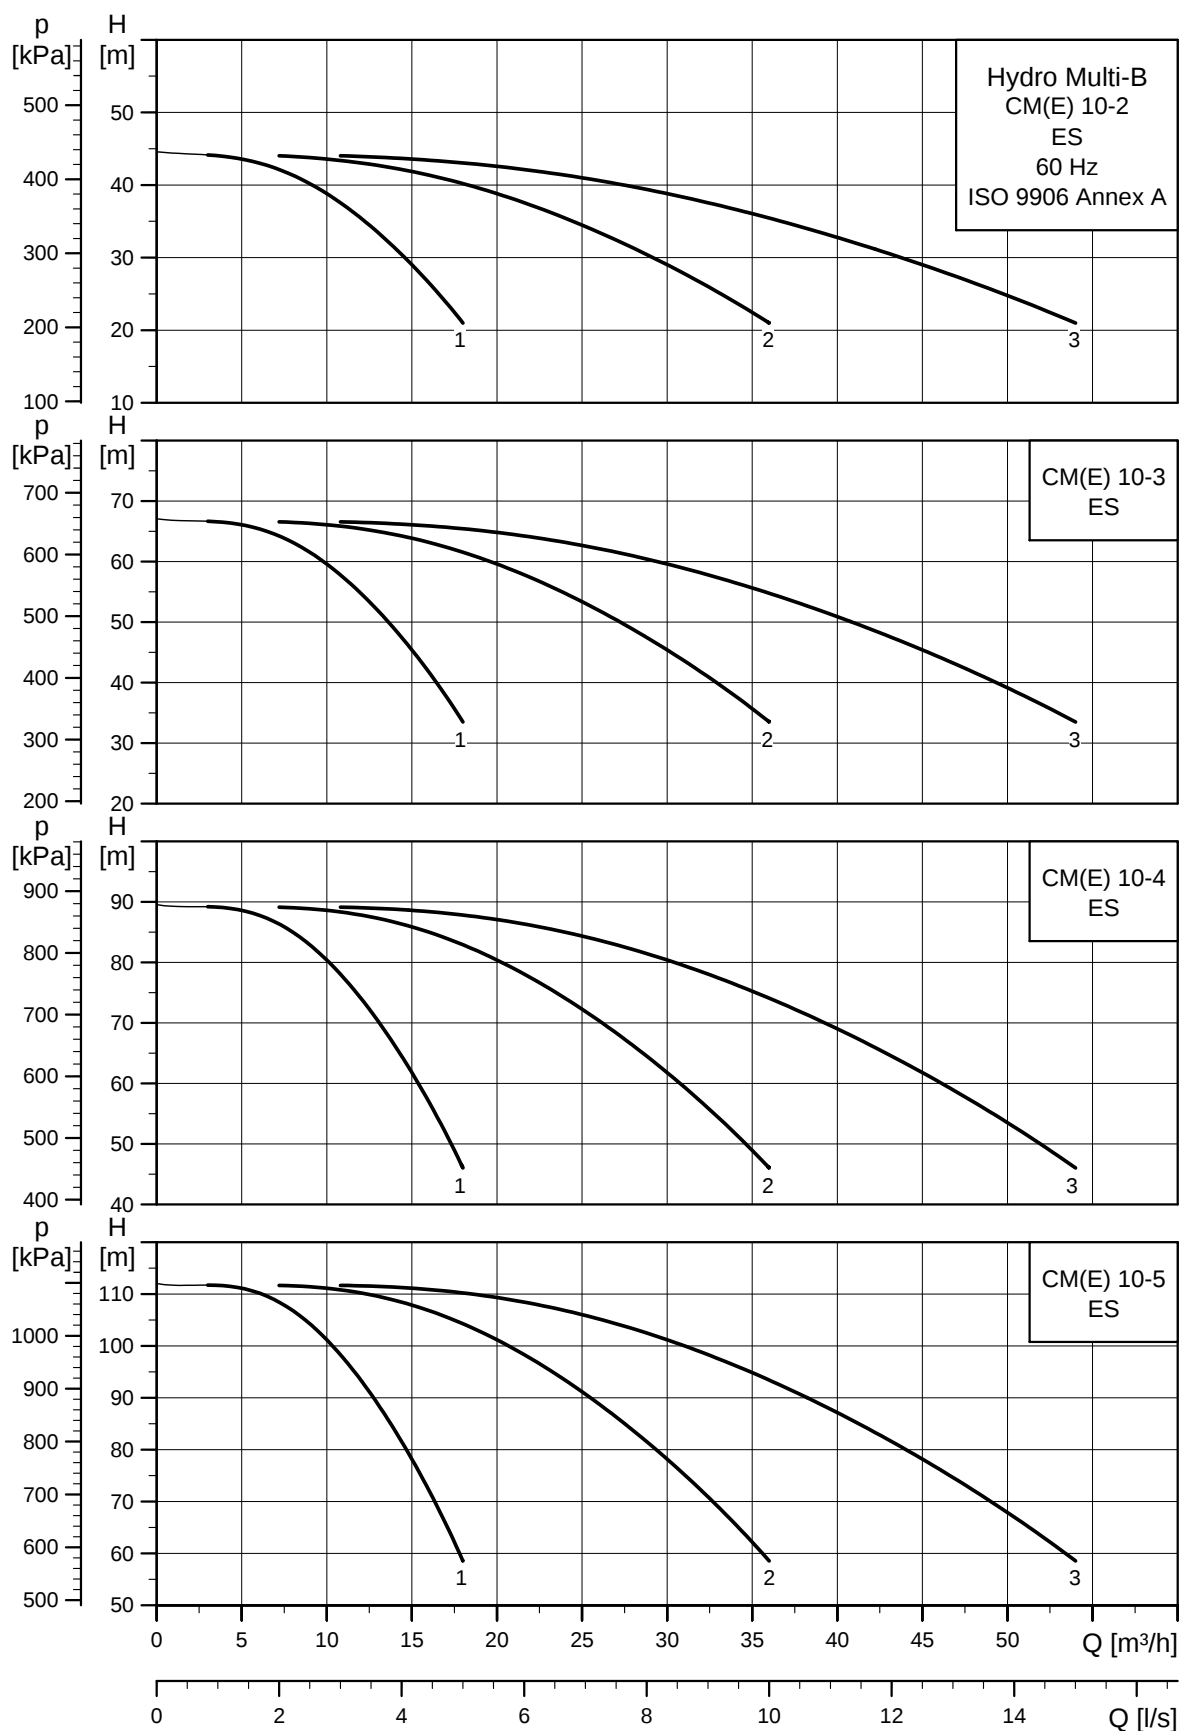


TM05 1205 2411

Hydro Multi-B ES with CM(E) 15, 60 Hz

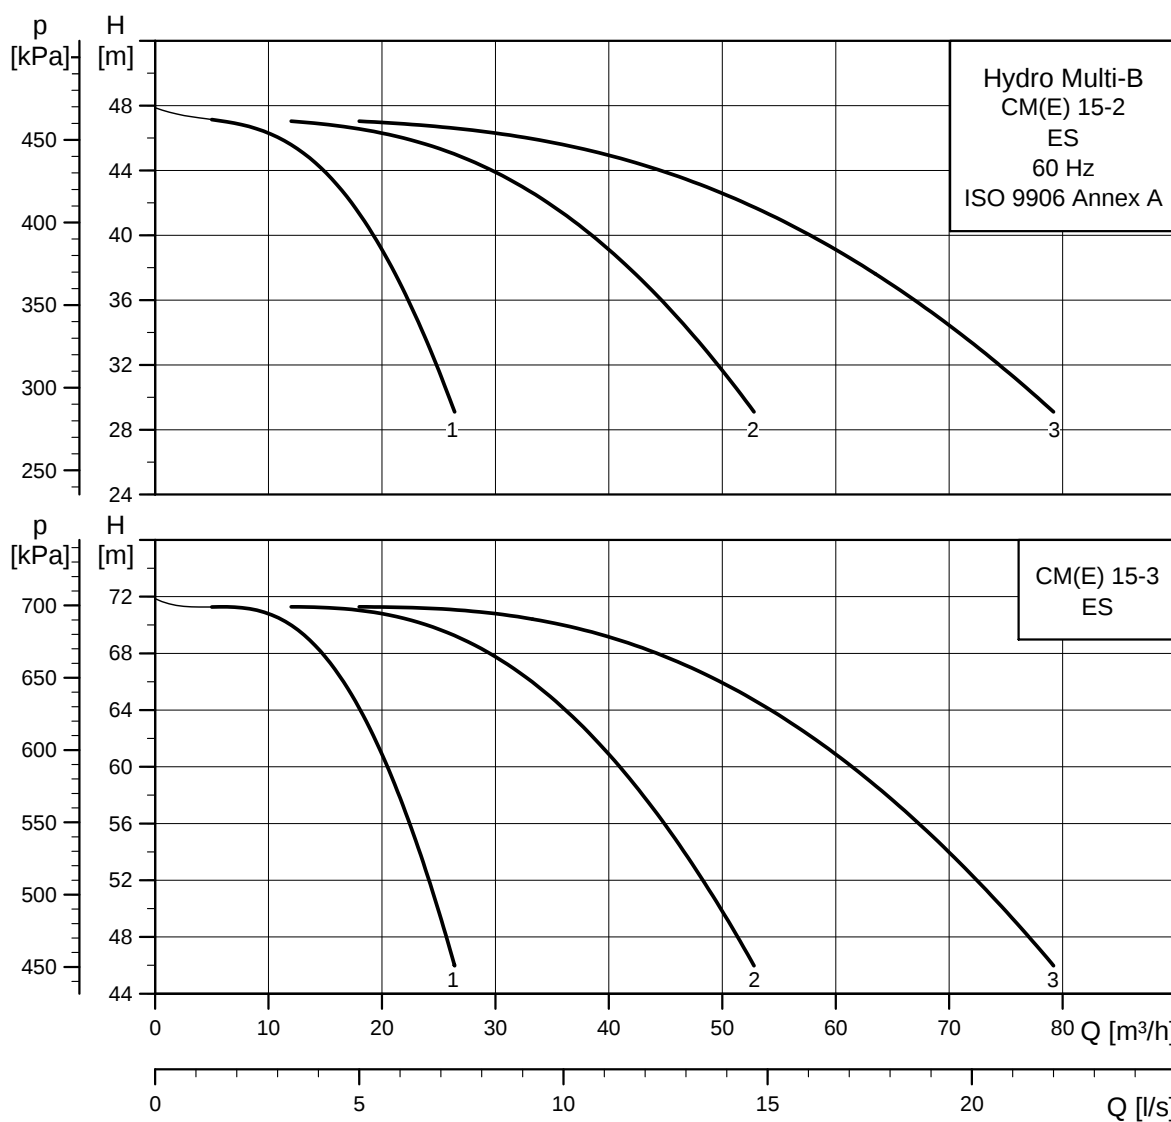


TM05 1206 2411

Hydro Multi-B ES with CM(E) 25, 60 Hz

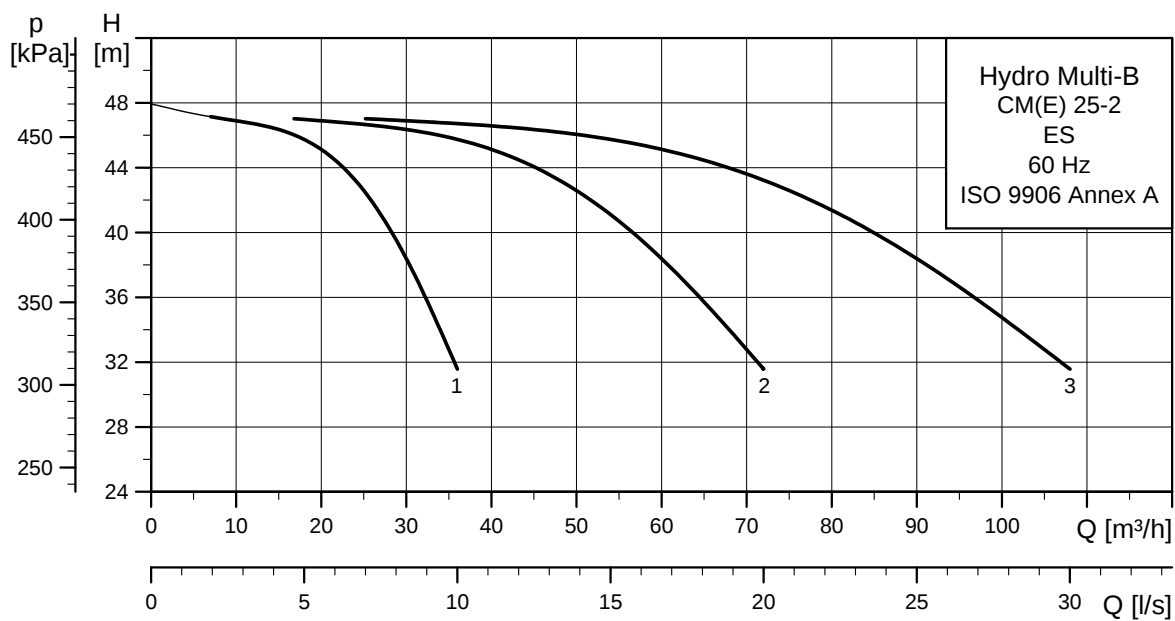


TM05 1207 2411

Hydro Multi-B E with CME 3

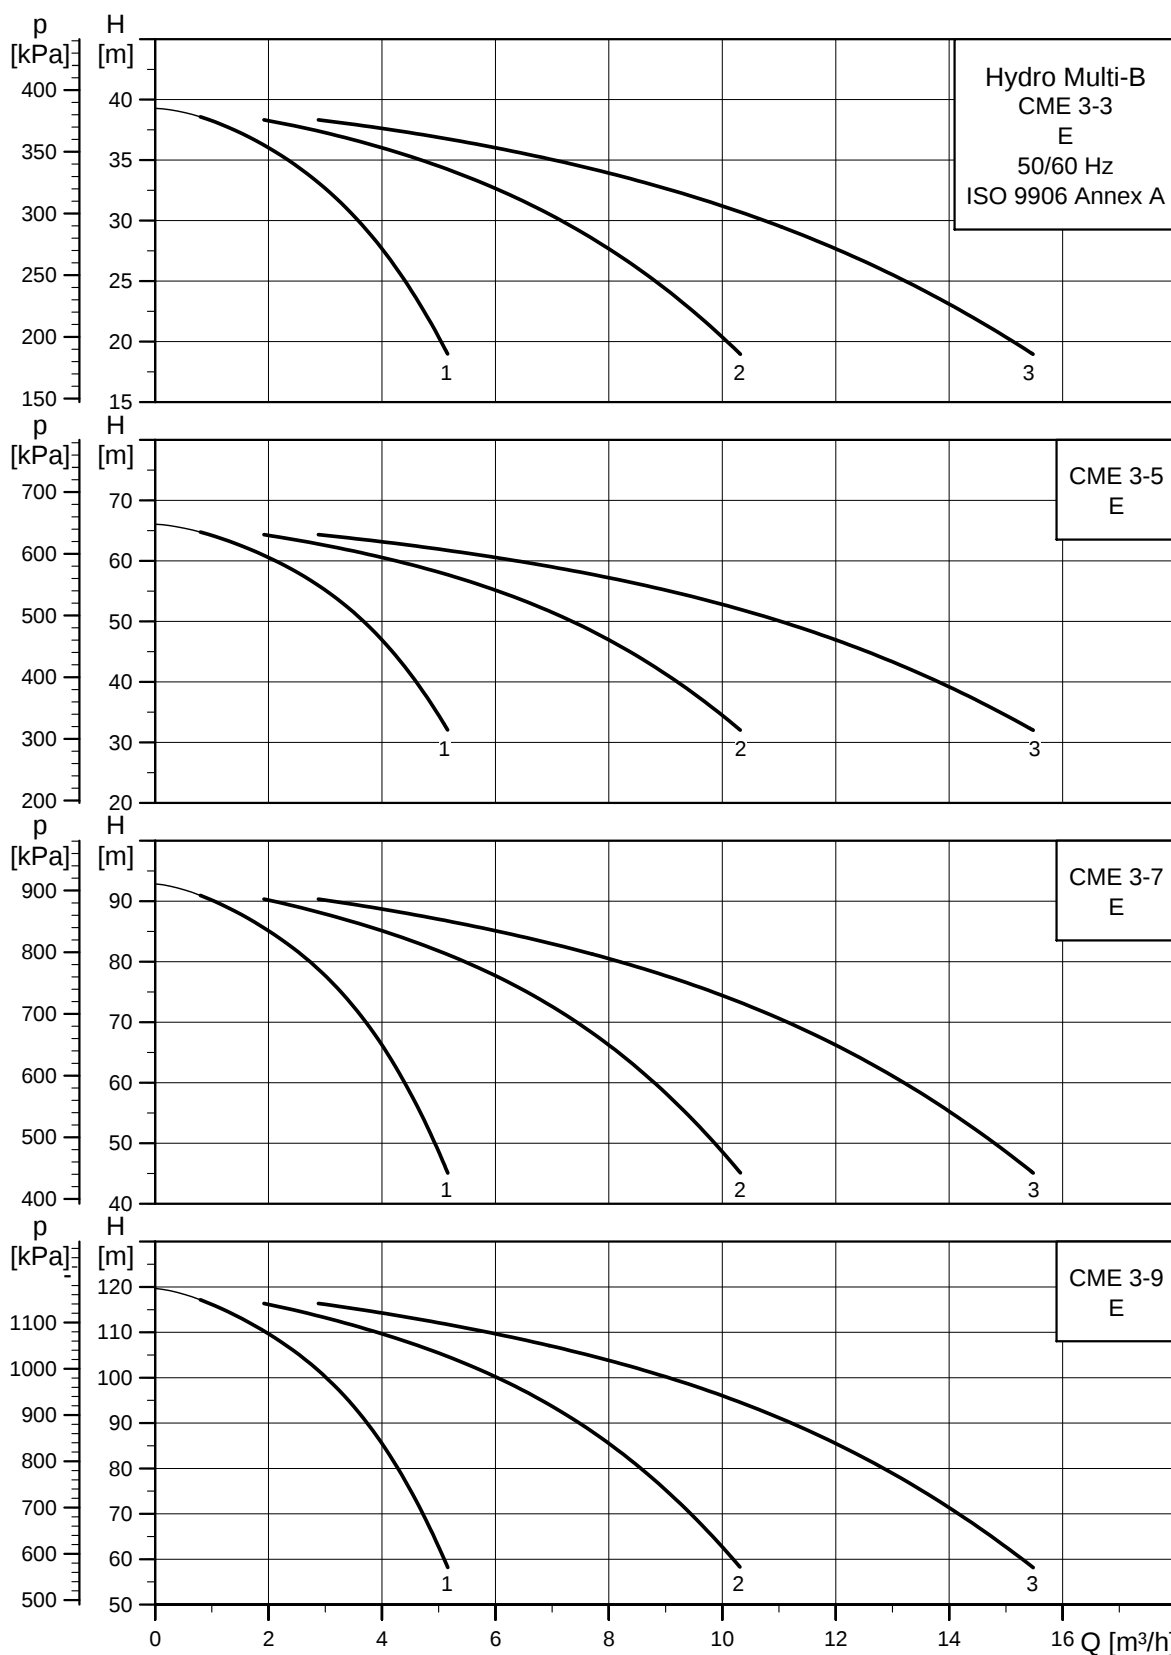


Hydro Multi-B E with CME 5

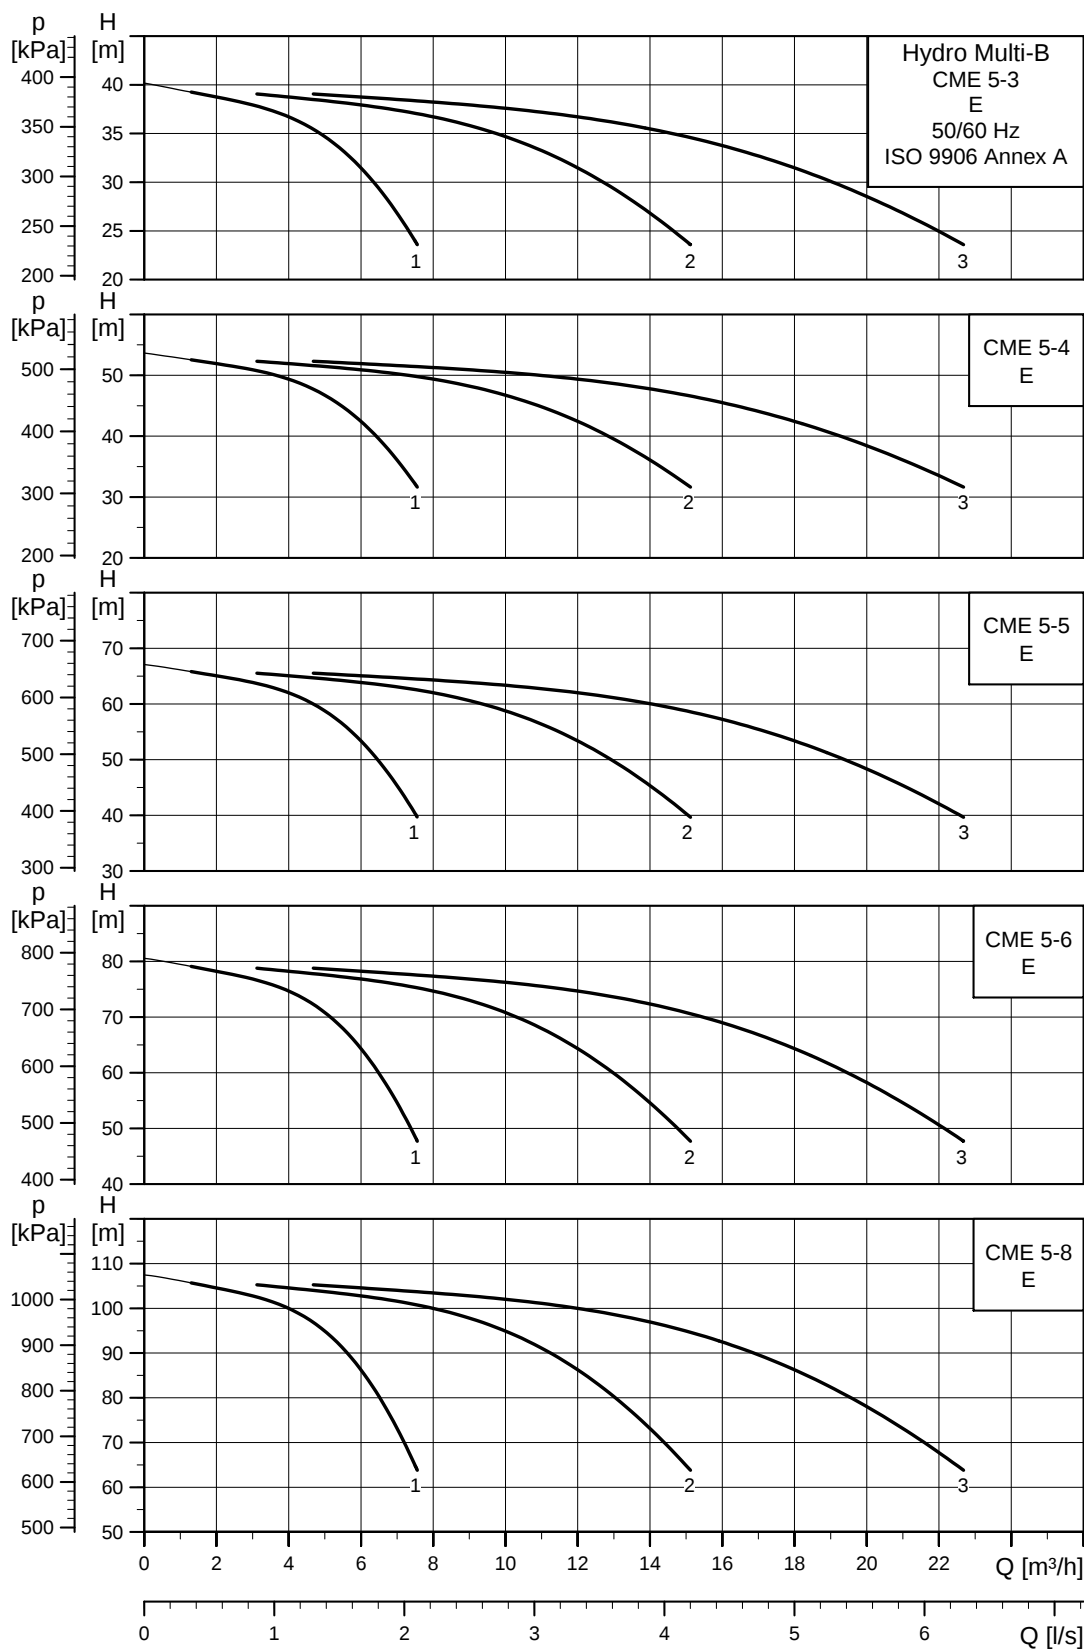


TM05 1209 2411

Hydro Multi-B E with CME 10

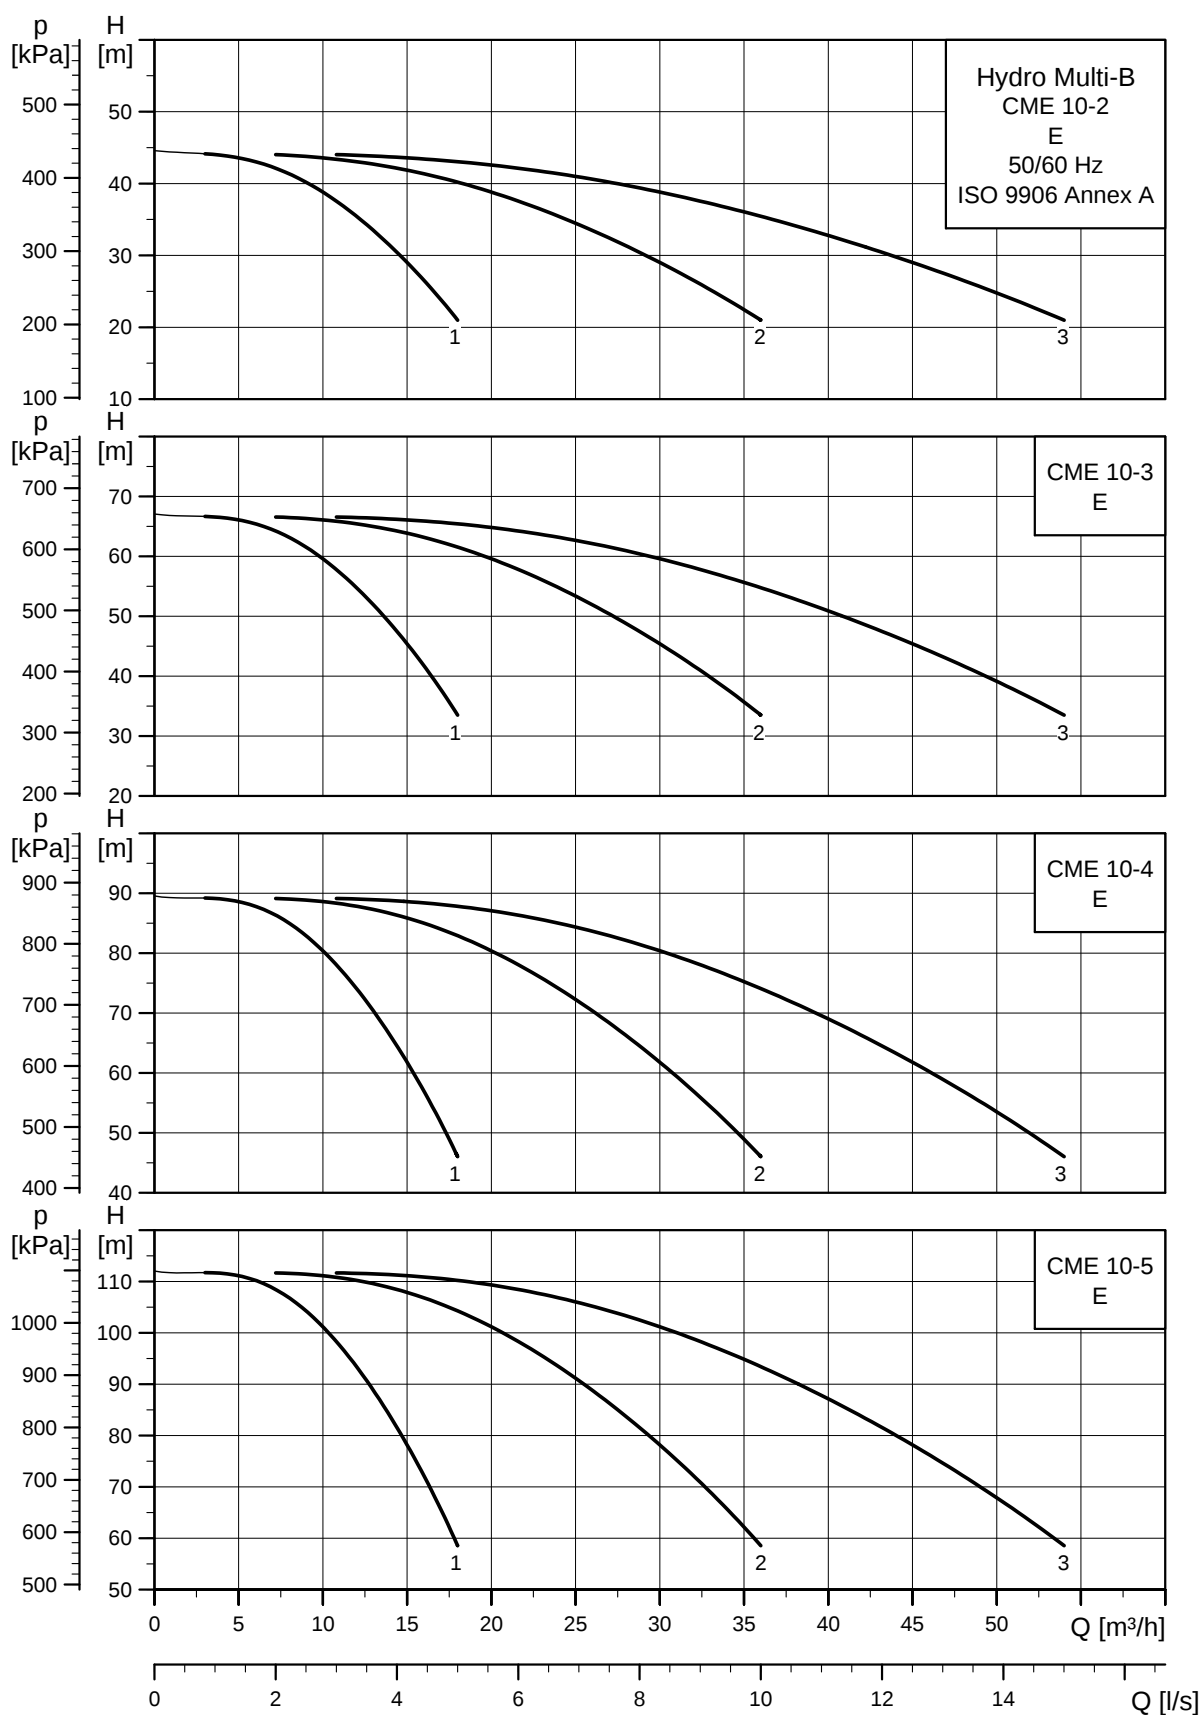


TM05 1210 2411

Hydro Multi-B E with CME 15

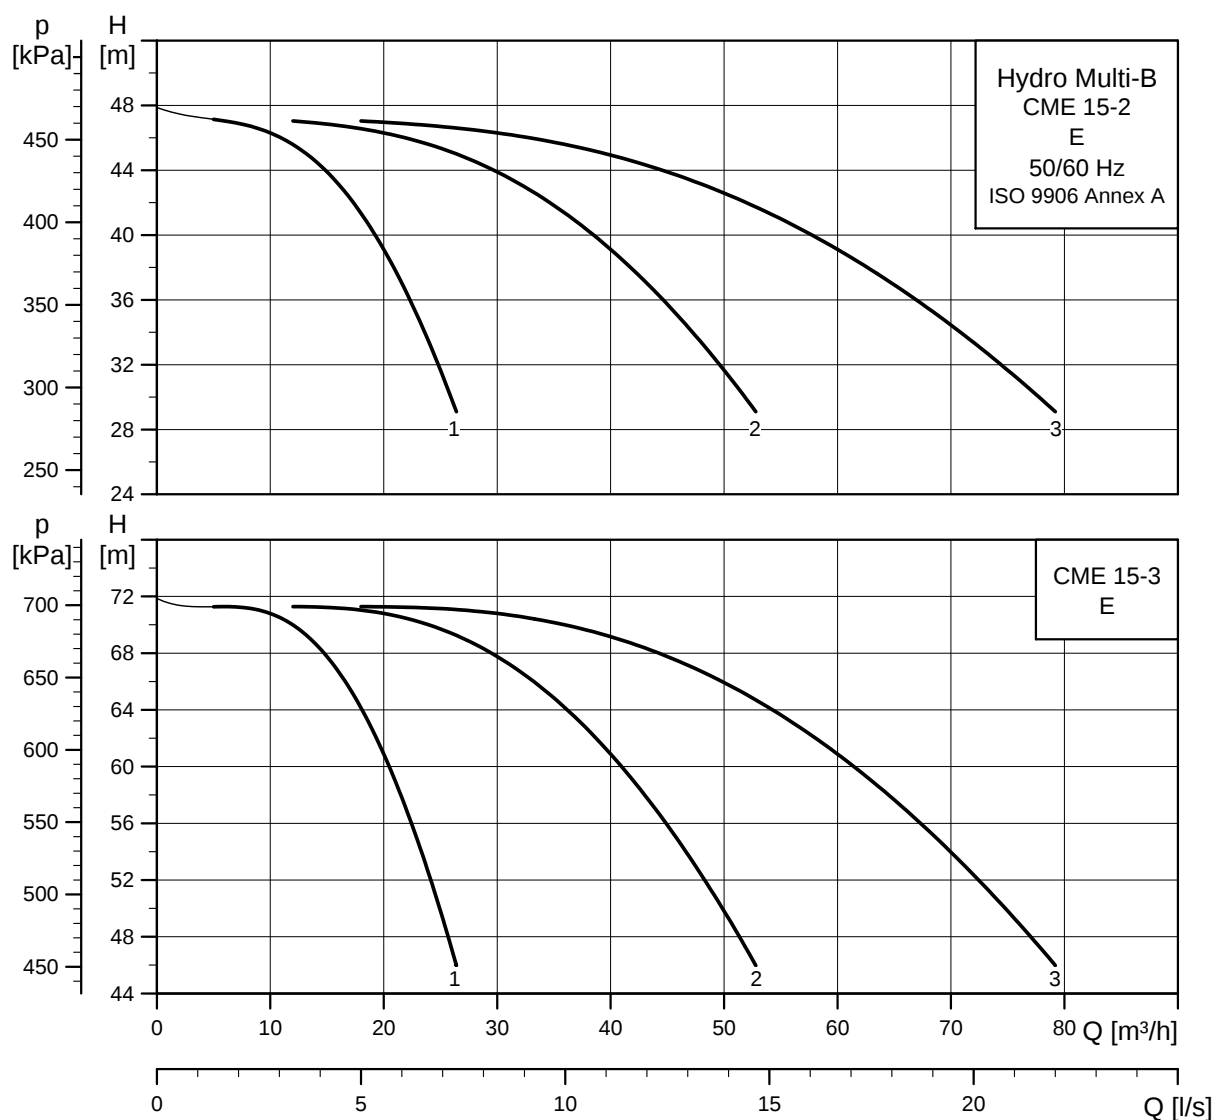

TM05 1211 2411

Hydro Multi-B E with CME 25

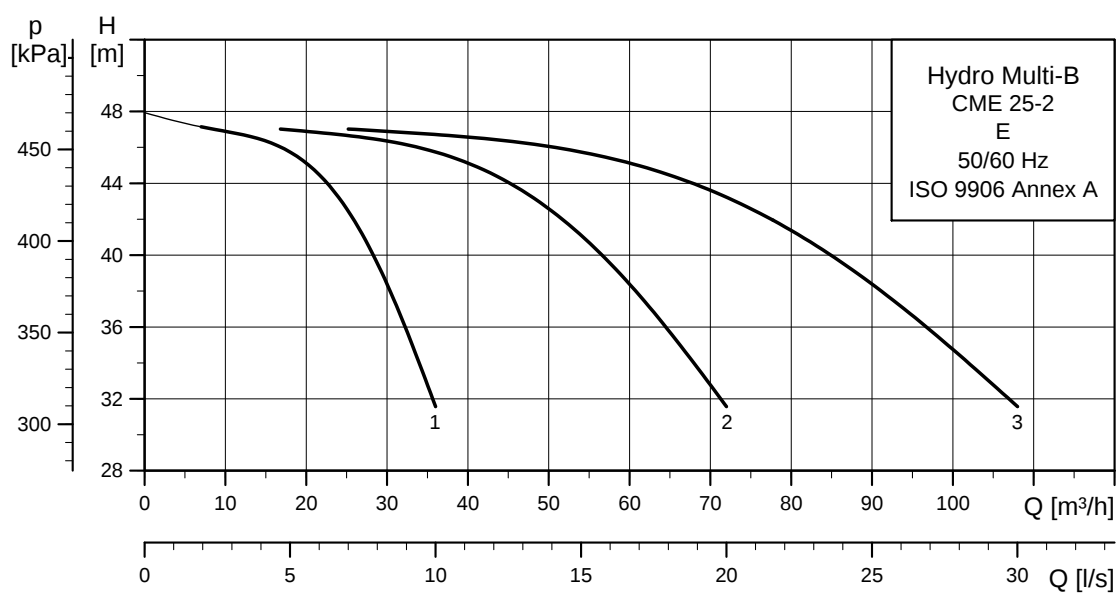

TM05 1212 2411

9. Technical data

Dimensional sketches

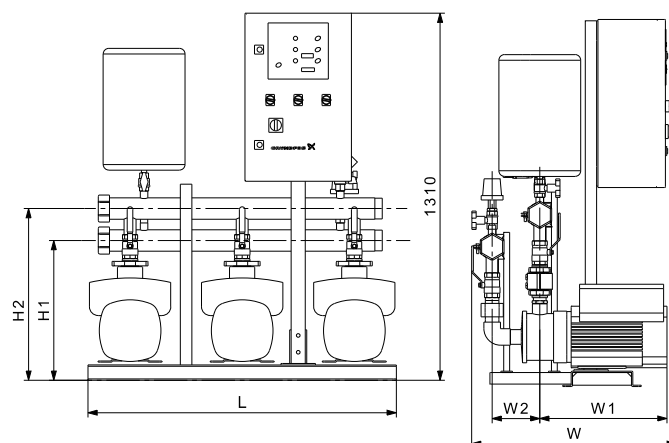


Fig. 13 Hydro Multi-B booster system with three CM(E) pumps

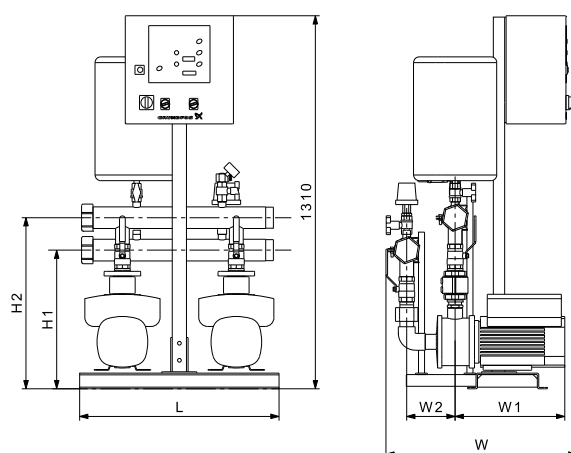


Fig. 14 Hydro Multi-B booster system with two CM(E) pumps

TM05 0552 1311

TM05 0551 1311

Electrical data, dimensions and weights

Hydro Multi-B ES with CM(E), 50 Hz

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 3-4	U2	0.55	4.9	R 2	700	653	234	183	405	489	8	92
	CM(E) 3-5	U1	0.55	5.02 / 3.7	R 2	700	629	234	194	409	499	8	94
	CM(E) 3-7	U2	1.1	9.2	R 2	700	701	274	231	409	499	8	107
	CM(E) 3-8	U1	1.1	8.92 / 7.1	R 2	700	737	274	267	409	499	8	114
	CM(E) 3-9	U2	1.1	10.2	R 2	700	737	294	267	409	499	8	114
	CM(E) 3-11	U2	1.5	6.8	R 2	700	784	323	303	424	514	8	123
3	CM(E) 3-13	U2	1.5	6.8	R 2	700	838	323	357	424	514	8	124
	CM(E) 3-4	U2	0.55	6.1	R 2	1100	618	234	183	405	499	8	130
	CM(E) 3-5	U1	0.55	6.07 / 3.4	R 2	1100	630	234	195	409	499	8	134
	CM(E) 3-7	U2	1.1	11.3	R 2	1100	666	274	231	409	499	8	149
	CM(E) 3-8	U1	1.1	10.43 / 7.1	R 2	1100	702	274	267	409	499	8	159
	CM(E) 3-9	U2	1.1	13.3	R 2	1100	702	294	267	409	499	8	157
	CM(E) 3-11	U2	1.5	10.3	R 2	1100	767	323	303	424	514	8	175
	CM(E) 3-13	U2	1.5	10.3	R 2	1100	821	323	357	424	514	8	177

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 5-5	U2	1.1	10.2	R 2	700	665	294	170	416	499	18	116
	CM(E) 5-5	U1	1.1	8.92 / 7.1	R 2	700	665	274	170	416	499	18	117
	CM(E) 5-7	U2	1.5	6.8	R 2	700	713	323	206	431	514	18	122
	CM(E) 5-9	U2	2.2	9.75	R 2	700	749	363	242	431	514	18	133
	CM(E) 5-11	U2	2.2	9.75	R 2	700	785	363	278	431	514	18	134
	CM(E) 5-13	U2	3.0	12.95	R 2	700	824	381	332	441	524	18	140
3	CM(E) 5-5	U2	1.1	6.1	R 2	1100	605	294	170	416	499	18	160
	CM(E) 5-5	U1	1.1	6.07 / 3.4	R 2	1100	605	274	170	416	499	18	162
	CM(E) 5-7	U2	1.5	11.3	R 2	1100	670	323	206	431	514	18	173
	CM(E) 5-9	U2	2.2	10.43 / 7.1	R 2	1100	706	363	242	431	514	18	187
	CM(E) 5-11	U2	2.2	13.3	R 2	1100	742	363	278	431	514	18	189
	CM(E) 5-13	U2	3.0	10.3	R 2	1100	814	381	332	441	524	18	202

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 10-3	U2	2.2	9.75	R 2 1/2	700	667	385	170	487	601	24	168
	CM(E) 10-4	U2	3.0	12.95	R 2 1/2	700	714	402	200	487	601	24	175
	CM(E) 10-6	U2	4.0	16.3	R 2 1/2	700	786	402	260	487	601	24	180
	CM(E) 10-8	U2	5.5	22.8	R 2 1/2	700	846	454	320	499	613	24	196
3	CM(E) 10-3	U2	2.2	14.9	R 2 1/2	1100	657	385	170	479	592	24	229
	CM(E) 10-4	U2	3.0	19.7	R 2 1/2	1100	704	402	200	487	601	24	243
	CM(E) 10-6	U2	4.0	24.5	R 2 1/2	1100	786	402	260	487	601	24	254
	CM(E) 10-8	U2	5.5	34.6	R 2 1/2	1100	846	454	320	499	613	24	287

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 15-3	U2	4.0	16.3	DN 80	700	741	454	188	524	744	35	203
	CM(E) 15-4	U2	5.5	22.8	DN 80	700	771	454	218	524	744	35	219
3	CM(E) 15-3	U2	4.0	24.5	DN 100	1100	751	454	188	524	744	35	258
	CM(E) 15-4	U2	5.5	34.6	DN 100	1100	780	454	218	524	744	35	290

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 25-3	U2	5.5	22.8	DN 80	700	741	454	188	524	744	35	217
	CM(E) 25-4	U2	7.5	30.6	DN 80	700	771	454	218	524	744	35	218
3	CM(E) 25-3	U2	5.5	34.6	DN 100	1100	750	454	188	524	744	35	287
	CM(E) 25-4	U2	7.5	46.2	DN 100	1100	780	454	218	524	744	35	289

ES system with one CME pump and one or two CM pumps.

Supply voltage U1: 3 x 380-415 V - 10 %/+ 10 %, N, PE.

Supply voltage U2: 3 x 380-415 V - 5 %/+ 5 %, PE.

Maximum current in neutral conductor, Max. I_0 [A], applies to booster systems with single-phase pumps.

Dimensions may vary by ± 10 mm.

35-litre diaphragm tank will be delivered separately with the system.

Hydro Multi-B ES with CM(E), 60 Hz

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 3-3	U2	1.1	9.0	R 2	700	661	274	165	409	499	8	92
	CM(E) 3-3	U1	1.1	10.8 / 8.1	R 2	700	661	274	165	409	499	8	93
	CM(E) 3-5	U2	1.1	9.8	R 2	700	665	274	195	409	499	8	95
	CM(E) 3-5	U1	1.1	15.9 / 14.2	R 2	700	665	274	195	409	499	8	97
	CM(E) 3-7	U2	1.5	7.3	R 2	700	712	323	231	424	514	8	119
3	CM(E) 3-9	U2	2.2	10.6	R 2	700	748	363	267	424	514	8	125
	CM(E) 3-3	U2	1.1	10.9	R 2	1100	606	274	165	405	499	8	131
	CM(E) 3-3	U1	1.1	13.5 / 8.1	R 2	1100	601	274	165	409	489	8	133
	CM(E) 3-5	U2	1.1	12.5	R 2	1100	630	274	195	409	499	8	135
	CM(E) 3-5	U1	1.1	21.3 / 14.2	R 2	1100	630	274	195	409	499	8	139
	CM(E) 3-7	U2	1.5	11.3	R 2	1100	695	323	231	424	514	8	171
	CM(E) 3-9	U2	2.2	16.6	R 2	1100	731	363	267	424	514	8	177
Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 5-3	U2	1.1	9.8	R 2	700	676	274	143	413	489	18	100
	CM(E) 5-3	U1	1.1	15.9 / 14.2	R 2	700	676	274	143	413	489	18	101
	CM(E) 5-5	U2	2.2	10.6	R 2	700	678	363	170	431	514	18	127
	CM(E) 5-6	U2	2.2	10.6	R 2	700	713	363	206	431	514	18	129
	CM(E) 5-8	U2	3.0	15.6	R 2	700	734	381	242	441	524	18	141
3	CM(E) 5-3	U2	1.1	12.5	R 2	1100	601	274	143	413	489	18	141
	CM(E) 5-3	U1	1.1	21.3 / 14.2	R 2	1100	601	274	143	413	499	18	145
	CM(E) 5-5	U2	2.2	16.6	R 2	1100	634	363	170	431	514	18	180
	CM(E) 5-6	U2	2.2	16.6	R 2	1100	670	363	206	431	514	18	182
	CM(E) 5-8	U2	3.0	25.0	R 2	1100	724	381	242	441	524	18	203
Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 10-2	U2	2.2	10.6	R 2 1/2	700	667	385	170	487	601	24	146
	CM(E) 10-3	U2	5.5	20.4	R 2 1/2	700	706	454	170	499	613	24	177
	CM(E) 10-4	U2	5.5	25.5	R 2 1/2	700	726	454	200	499	613	24	185
	CM(E) 10-5	U2	5.5	25.5	R 2 1/2	700	786	454	260	499	613	24	188
3	CM(E) 10-2	U2	2.2	16.6	R 2 1/2	1100	667	385	170	487	601	24	208
	CM(E) 10-3	U2	5.5	29.8	R 2 1/2	1100	696	454	180	491	613	24	248
	CM(E) 10-4	U2	5.5	40.0	R 2 1/2	1100	726	454	200	499	613	24	265
	CM(E) 10-5	U2	5.5	40.0	R 2 1/2	1100	786	454	260	499	613	24	270
Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 15-2	U2	5.5	20.4	DN 80	700	751	454	188	524	744	35	198
	CM(E) 15-3	U2	7.5	29.5	DN 80	700	741	454	188	524	744	35	210
3	CM(E) 15-2	U2	5.5	29.8	DN 100	1100	751	454	188	524	744	35	253
	CM(E) 15-3	U2	7.5	44.0	DN 100	1100	751	454	188	524	744	35	273
Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CM(E) 25-2	U2	7.5	29.5	DN 80	700	741	454	188	524	744	35	210
3	CM(E) 25-2	U2	7.5	44.0	DN 100	1100	751	454	188	524	744	35	273

ES system with one CME pump and one or two CM pumps.

Supply voltage U1: 3 x 380-415 V - 10 %/+ 10 %, N, PE.

Supply voltage U2: 3 x 380-415 V - 5 %/+ 5 %, PE.

Maximum current in neutral conductor, Max. I_0 [A], applies to booster systems with single-phase pumps.

Dimensions may vary by ± 10 mm.

35-litre diaphragm tank will be delivered separately with the system.

Hydro Multi-B E with CME, 50/60 Hz

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CME 3-3	U1	1.1	10.0 / 7.1	R 2	700	660	274	165	405	499	8	97
	CME 3-5	U1	1.1	10.0 / 7.1	R 2	700	664	274	194	409	499	8	98
	CME 3-7	U2	1.5	6.6	R 2	700	716	323	231	424	514	8	124
	CME 3-9	U2	2.2	9.2	R 2	700	752	363	267	424	514	8	133
3	CME 3-3	U1	1.1	12.3 / 7.1	R 2	1100	611	274	165	405	489	8	140
	CME 3-5	U1	1.1	12.3 / 7.1	R 2	1100	633	274	195	409	499	8	142
	CME 3-7	U2	1.5	9.9	R 2	1100	695	323	231	424	514	8	181
	CME 3-9	U2	2.2	13.8	R 2	1100	731	363	267	424	514	8	195

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N / I_0 [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CME 5-3	U1	1.1	10.0 / 7.1	R 2	700	642	274	143	413	499	18	103
	CME 5-4	U2	1.5	6.6	R 2	700	663	323	152	431	514	18	127
	CME 5-5	U2	2.2	9.2	R 2	700	675	363	170	431	514	18	136
	CME 5-6	U2	2.2	9.2	R 2	700	717	363	206	431	514	18	138
	CME 5-8	U2	3.0	12.4	R 2	700	724	381	242	441	524	18	145
3	CME 5-3	U1	1.1	12.3 / 7.1	R 2	1100	581	274	143	413	489	18	148
	CME 5-4	U2	1.5	9.9	R 2	1100	616	363	152	431	514	18	185
	CME 5-6	U2	2.2	13.8	R 2	1100	670	363	206	431	514	18	201
	CME 5-8	U2	3.0	18.6	R 2	1100	724	381	242	441	524	18	212

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CME 10-2	U2	2.2	9.2	R 2 1/2	700	657	385	170	487	601	24	155
	CME 10-3	U2	5.5	22.0	R 2 1/2	700	695	454	170	499	613	24	197
	CME 10-4	U2	5.5	22.0	R 2 1/2	700	726	454	200	499	613	24	199
	CME 10-5	U2	5.5	22.0	R 2 1/2	700	786	454	260	499	613	24	202
3	CME 10-2	U2	2.2	13.8	R 2 1/2	1100	657	385	170	487	601	24	226
	CME 10-3	U2	5.5	33.0	R 2 1/2	1100	695	454	170	499	613	24	290
	CME 10-4	U2	5.5	33.0	R 2 1/2	1100	726	454	200	499	613	24	292
	CME 10-5	U2	5.5	33.0	R 2 1/2	1100	786	454	260	499	613	24	297

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CME 15-2	U2	5.5	22.0	DN 80	700	741	454	188	524	744	35	219
	CME 15-3	U2	7.5	30.0	DN 80	700	742	454	188	524	744	35	228
3	CME 15-2	U2	5.5	33.0	DN 100	1100	751	454	188	524	744	35	295
	CME 15-3	U2	7.5	45.0	DN 100	1100	752	454	188	524	744	35	309

Number of pumps	Pump type	Voltage [V]	Motor [kW]	Max. I_N [A]	Connection	L [mm]	W [mm]	W1 [mm]	W2 [mm]	H1 [mm]	H2 [mm]	Tank [l]	Weight [kg]
2	CME 25-2	U2	7.5	30.0	DN 80	700	740	454	188	524	744	35	228
3	CME 25-2	U2	7.5	45.0	DN 100	1100	752	454	188	524	744	35	309

E system with two or three CME pumps.

Supply voltage U1: 3 x 380-415 V - 10 %/+ 10 %, N, PE.

Supply voltage U2: 3 x 380-415 V - 5 %/+ 5 %, PE.

Maximum current in neutral conductor, Max. I_0 [A], applies to booster systems with single-phase pumps.

Dimensions may vary by ± 10 mm.

35-litre diaphragm tank will be delivered separately with the system.

10. Optional equipment

All optional equipment must be specified when ordering the Hydro Multi-B booster system as it must be fitted from factory prior to delivery.

Redundant primary sensor



TM04 4125 0809

Fig. 15 Redundant primary sensor

In order to increase the reliability, a redundant primary sensor can be connected as back-up sensor for the primary sensor.

Note: The redundant primary sensor must be of the same type as the primary sensor.

Description	Range [bar]	Product number
Redundant primary sensor	10	97747435
	16	97747434

Water shortage protection

Any booster system must be protected against water shortage.

The inlet conditions determine the type of water shortage protection to be used:

- If the system draws water from a tank or well, select a float switch, analog sensor or external electrode relay.
- If the system has an inlet pressure, select a pressure transmitter or a pressure switch.

Description	Parameter	Product number
Float switch	5 m ¹⁾	96020142
	10 m ¹⁾	96819727
Pressure transmitter	0 ~ 4 bar	96020074
	0 ~ 6 bar	96020066
Pressure switch	0 ~ 6 bar	96433641

¹⁾ Cable length.

Non-return valve

As standard, non-return valves are fitted on the discharge side of the pumps of the booster system.

In systems with a suction lift, we recommend to install non-return valves on the suction side of the pumps to prevent water shortage.

Description	Product number
Non-return valve on suction side	97896859

Note: If a non-return valve is installed on the suction side, the height (H1) of the suction manifold will differ from the values stated in section 9. *Technical data*, pages 38 to 41.

CIM communication module

The CU 323 can be connected to an external communication network via an add-on fieldbus CIM module.

Module	Fieldbus protocol	Location	Product number
CIM 050	RS-485	In the CU 323	96824631
CIM 110	LON		96824789
CIM 200	Modbus		96824796
CIM 250	GSM		96824795
CIM 300	BACnet		96943639

For further information about communication via CIM modules, data transfer and fieldbus protocols, see the CIM documentation available on www.grundfos.com (WebCAPS).

Phase failure monitoring

The booster system should be protected against phase failure.

Description	Location	Product number
Phase failure monitoring	In control panel	91767242

Beacon

The beacon illuminates in case of a system alarm.

Description	Location	Product number
Beacon	On top of the control cabinet	91763002
	External ¹⁾	

¹⁾ Cable not included.

Acoustic alarm

The acoustic alarm sounds in case of a system alarm.

Description	Location	Product number
Acoustic alarm	In control cabinet	91763001

External transformer

An external transformer can provide isolated power supply for the CU 323 and relay in both tank-filling and pressure-boosting systems.

Description	Location	Product number
External transformer	In control panel	91073191

High-level lamp

The pilot lamp in the cabinet front illuminates if the pressure or level becomes too high.

Description	Product number
Pilot lamp (red)	91767281

Pilot lamp indicating alarm

A pilot lamp in the cabinet front illuminates in case of a system alarm.

Description	Product number
Pilot lamp (red)	91767281

Pilot lamp indicating operation

A pilot lamp in the cabinet front is on when the system is in operation.

Description	Product number
Pilot lamp (green)	91767280

11. Accessories

All accessories can be retrofitted to the Hydro Multi-B booster system.

Foot valve



TM04 4128 0809

Fig. 16 Foot valves

The booster system must be protected against dry running.

Foot valves are typically used in minor booster systems with a suction lift. For example when the Hydro Multi-B draws water from a break tank placed at a lower geodetic height than the booster system.

Foot valves are designed to ensure optimum suction conditions.

Description	Connection	Product number
Foot valve	Rp 2	956120
	Rp 3	956130
	Rp 4	956449

Float switch

In tank-filling systems, the float switches are installed in the tank to indicate the hydrostatic level of empty or full.

Description	Cable length [m]	Product number
Float switch	5	96020142
	10	96819727

Analog sensor

In tank-filling systems, the analog sensor is installed at the bottom of the tank to monitor the hydrostatic level.

Description	Level [m]	Product number
Analog sensor	1	97949405
	5	97949406

Additional documentation


The publication numbers below refer to the printed documentation for Hydro Multi-B (group versions).

Document	Publication number
Installation and operating instructions	97822771
Quick guide	97850363

In addition to the printed documentation, Grundfos offers product information in WebCAPS on www.grundfos.com. See also page 45.

12. Further product documentation

WebCAPS

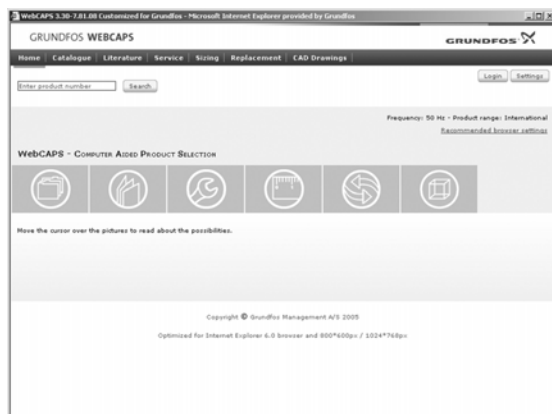


WebCAPS is a **Web-based Computer Aided Product Selection** program available on www.grundfos.com.

WebCAPS contains detailed information on more than 220,000 Grundfos products in more than 30 languages.

Information in WebCAPS is divided into six sections:


- Catalogue
- Literature
- Service
- Sizing
- Replacement
- CAD drawings.

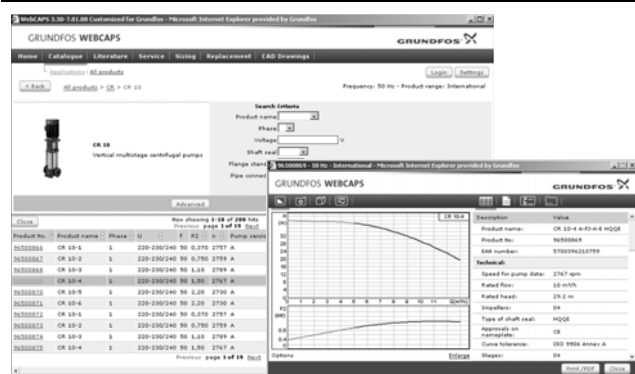

Catalogue

Based on fields of application and pump types, this section contains the following:

- technical data
- curves (QH, Eta, P1, P2, etc.) which can be adapted to the density and viscosity of the pumped liquid and show the number of pumps in operation
- product photos
- dimensional drawings
- wiring diagrams
- quotation texts, etc.

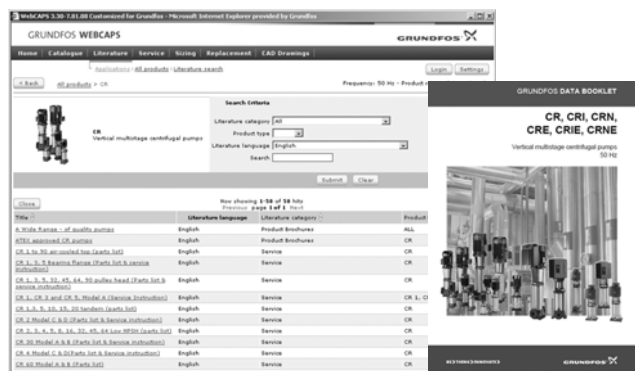

Literature

This section contains all the latest documents of a given pump, such as

- data booklets
- installation and operating instructions
- service documentation, such as Service kit catalogue and Service kit instructions
- quick guides
- product brochures.



Service

This section contains an easy-to-use interactive service catalogue. Here you can find and identify service parts of both existing and discontinued Grundfos pumps.


Furthermore, the section contains service videos showing you how to replace service parts.



Sizing

This section is based on different fields of application and installation examples and gives easy step-by-step instructions in how to size a product:


- Select the most suitable and efficient pump for your installation
- Carry out advanced calculations based on energy consumption, payback periods, load profiles, life cycle costs, etc.
- Analyse your selected pump via the built-in life cycle cost tool
- Determine the flow velocity in wastewater applications, etc.

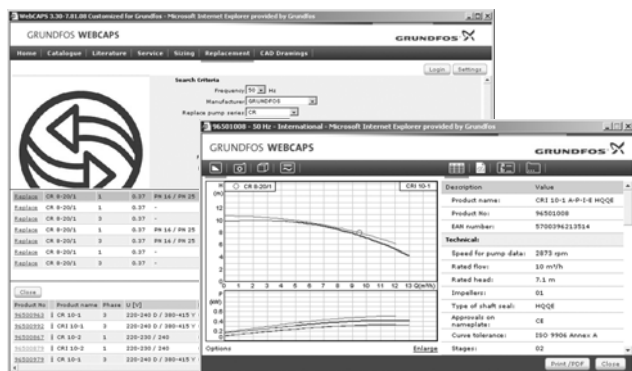

Replacement

In this section you find a guide to selecting and comparing replacement data of an installed pump in order to replace the pump with a more efficient Grundfos pump. The section contains replacement data of a wide range of pumps produced by other manufacturers than Grundfos.

Based on an easy step-by-step guide, you can compare Grundfos pumps with the one you have installed on your site. When you have specified the installed pump, the guide will suggest a number of Grundfos pumps which can improve both comfort and efficiency.

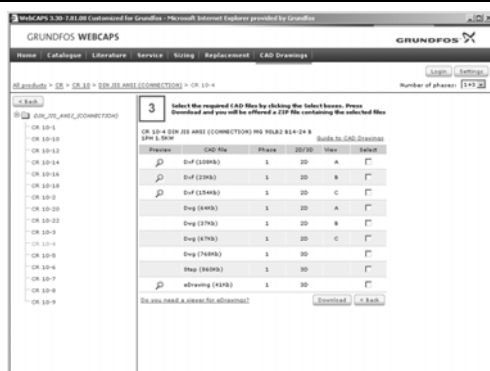

CAD drawings

In this section, it is possible to download 2-dimensional (2D) and 3-dimensional (3D) CAD drawings of most Grundfos pumps.

These formats are available in WebCAPS:

2-dimensional drawings:

- .dxf, wireframe drawings
- .dwg, wireframe drawings.

3-dimensional drawings:

- .dwg, wireframe drawings (without surfaces)
- .stp, solid drawings (with surfaces)
- .eprt, E-drawings.

WinCAPS



Fig. 17 WinCAPS CD-ROM

WinCAPS is a **Windows-based Computer Aided Product Selection** program containing detailed information on more than 220,000 Grundfos products in more than 30 languages.

The program contains the same features and functions as WebCAPS, but is an ideal solution if no internet connection is available.

WinCAPS is available on CD-ROM and updated once a year.

Subject to alterations.



97896424 0811
97896424 0711

GB

ECM: 1078990

The name Grundfos, the Grundfos logo, and the payoff Be-Think-Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.