

78. SPK

SPK 1, 2, 4

50/60 Hz, Models C, D

Coupling complete

	Kit No	495081	415060	415061	415314
Pos.	Motor/pump shaft diameter [mm]	11/12	14/12	19/12	15.8/12
	Description				NEMA
8	Coupling half	2	2	2	2
9	Screw	4	4	4	4
10	Pin	1	1	1	1

Metal terminal box

All with MG 71/80 motor	
Pos.	Kit No
	Description
	405179
164a	Terminal box with gasket
164	Terminal box cover with gasket
166	Screw
175	Screw
176	Terminal complete

Rectangular flange

Pos.	Kit No
	Description
	395104
12	Flange
39	O-ring
35	Screw


Shaft seal

Pos.	Kit No	395008	985726	395091	985720	96765115	97730107
	Description	CVBV	AQBK	AUVV	AUUK	AQVQ	AUUE
37a	Gasket	1	1	1	1	1	1
105	Shaft seal complete	1	1	1	1	1	1

Wear parts

	Kit No	395090	395089
Pos.	Number of stages	1-8	9-23
	Description		
4a	Bearing chamber	1	3
9	Coupling screw	4	4
10	Coupling pin	1	1
36	Nut	2	2
37a	Gasket	1	1
45	Neck ring	7	21
47a	Bearing ring	1	3
61	Spacer	1	1
62	Stop ring	1	1
66	Washer	1	1
66a	Washer	2	2
67	Lock nut	1	1

SPK 1, 2, 4

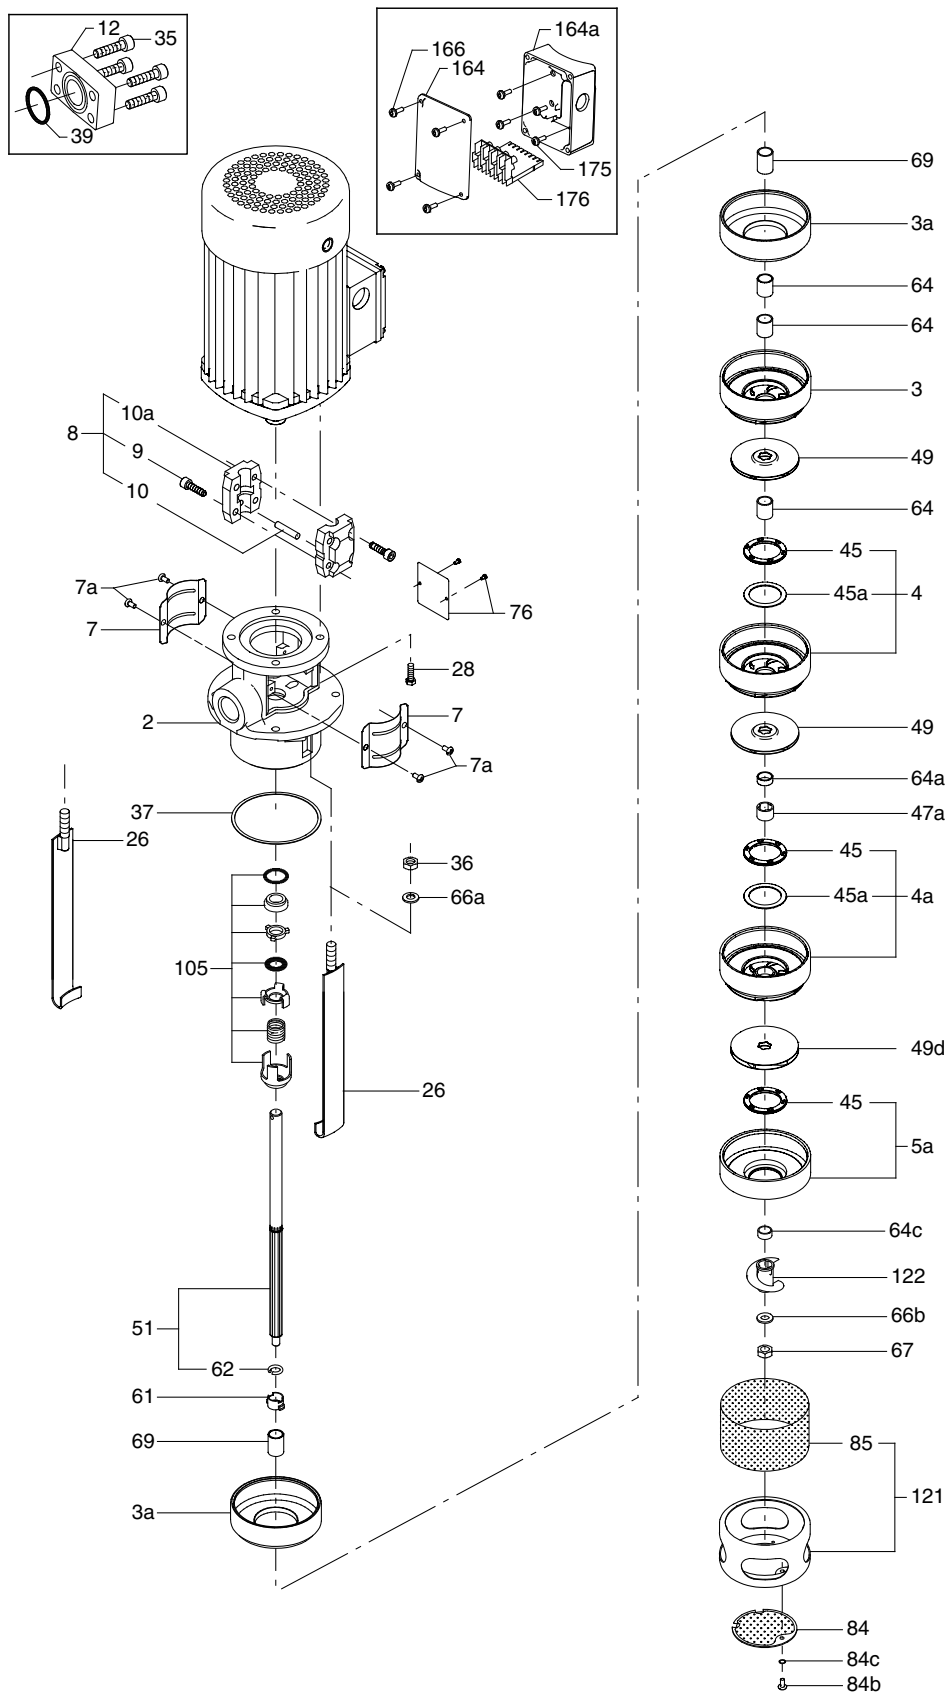

SPK 8

Coupling complete

	Kit No	415078	415079	415062	415314	415315
Pos.	Motor/pump shaft diameter [mm]	14/12	19/12	24/12	15.8/12	28.5/12
	Description	NEMA				
8	Coupling half	2	2	2	2	2
9	Screw	4	4	4	4	4
10	Pin	1	1	1	1	1

Metal terminal box

All with MG 71/80 motor		
Pos.	Kit No	405179
	Description	
164a	Terminal box with gasket	1
164	Terminal box cover with gasket	1
166	Screw	4
175	Screw	4
176	Terminal complete	1

Rectangular flange

Pos.	Kit No	405178
	Description	
12	Counter flange	1
39	O-ring	1
35	Screw	4





Shaft seal

Pos.	Kit No	395008	985726	395091	985720	96765115	97730107
	Description	CVBV	AQBK	AUUV	AUUK	AQQV	AUUE
37a	Gasket	1	1	1	1	1	1
105	Shaft seal complete	1	1	1	1	1	1

Wear parts

Number of impellers		1	2-3	5	7-9	12-15	9
			incl.	excl.	excl.		
			SPK 8-5/5	SPK 8-5/5	SPK 8-12/9		SPK 8-12/9
Pos.	Only pump length L = 1005 mm			SPK 8-15/2-3			SPK 8-15/5-15
	Kit No	395093	395094	395095	395096	395097	395098
	Number of stages	1-15	2-15	7-15	7-15	12-15	12
	Description						
4a	Bearing chamber	1	1	2	2	3	3
9	Coupling screw	4	4	4	4	4	4
10	Coupling pin	1	1	1	1	1	1
36	Nut	2	2	2	2	2	2
37a	Gasket	1	1	1	1	1	1
45	Neck ring	1	4	4	7	12	13
47a	Bearing ring	1	1	2	2	3	3
61	Spacer	1	1	1	1	1	1
62	Stop ring	1	1	1	1	1	1
66	Washer	1	1	1	1	1	1
66a	Washer	2	2	2	2	2	2
67	Lock nut	1	1	1	1	1	1

SPK 8

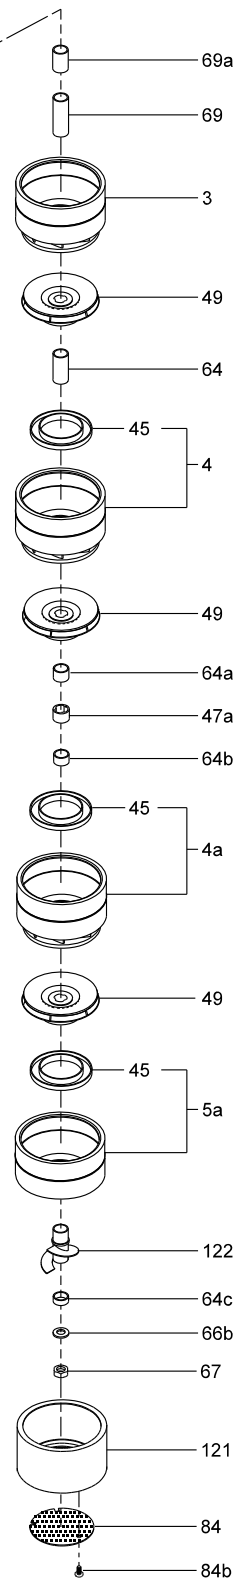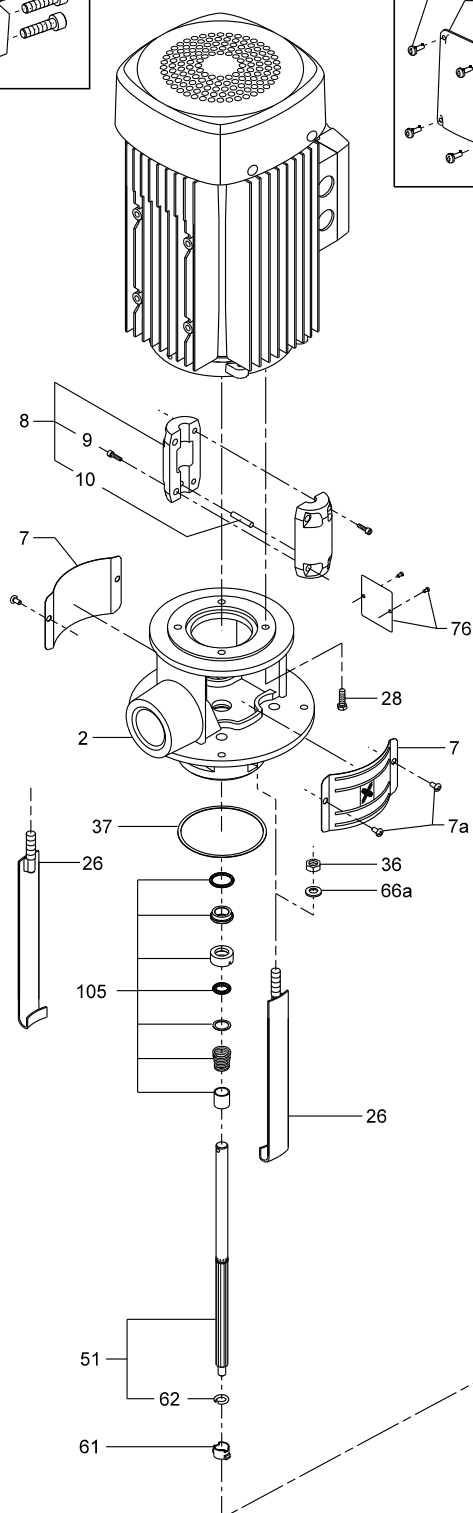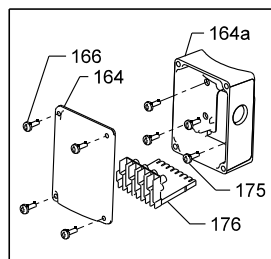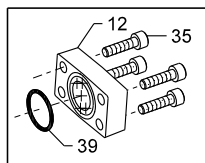

TM02 5311 2502