

LENNTECH

info@lennotech.com Tel. +31-152-610-900
www.lennotech.com Fax. +31-152-616-289

Betafine™ T Series Cartridge Filters

The Betafine T cartridge, formerly known as TSM, is a durable and versatile pleated media cartridge offering the ultimate in submicron filtration. Long life, high flow rates and excellent particle retention makes the Betafine T cartridge an excellent choice either for a prefilter to membrane filters or for final filtration.

Charge modification enhances the particle removal efficiency of the nominally rated Betafine T filter. Contaminants too small to be mechanically strained are electrokinetically adsorbed by the Betafine T media. Because it is a depth filter, the tortuous matrix allows for high contaminant loading capabilities.

Betafine T filter cartridges are available in two grades, 050TG and 100TG with particle retention ratings of 0.5 µm and 1.0 µm respectively based upon their mechanical straining efficiencies. The design of Betafine T filters provide excellent solutions for high performance removal of fine solids from high flowing liquids. Materials of construction provide broad chemical compatibility.



Applications

The Betafine T cartridge can be applied to many filtration applications. It can be used to solve numerous fluid contamination problems. Below is a partial listing of typical applications.

Beverages

- Final polishing of distilled spirits

Food Processing

- Catalyst and microbial removal, polishing filter prior to bottling

Cosmetics

- Perfumes and aftershave lotions, assuring stability and shelf life through removal of colloidal haze and bacteria

Chemical

- Catalyst removal, photographic solutions and magnetic tape coatings filtration

Air and Gas

- Air filtration and particle contamination removal from various gases

Fluid Power

- Hydraulic fluids

For more information contact:

info@lennotech.com


www.lennotech.com

Tel. +31-15-261.09.00


Fax. +31-15-261.62.89

3M


Standard Cartridge

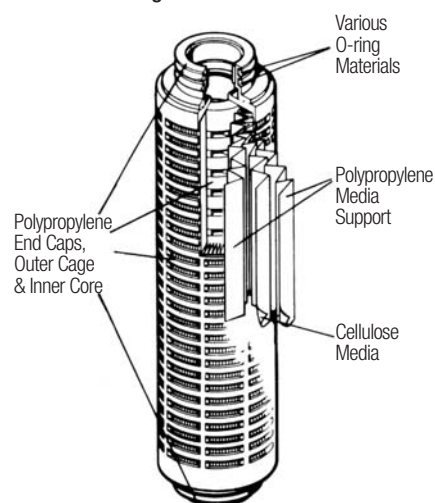

Air Flow Rate Betafine T 050TG and 100TG Cartridges

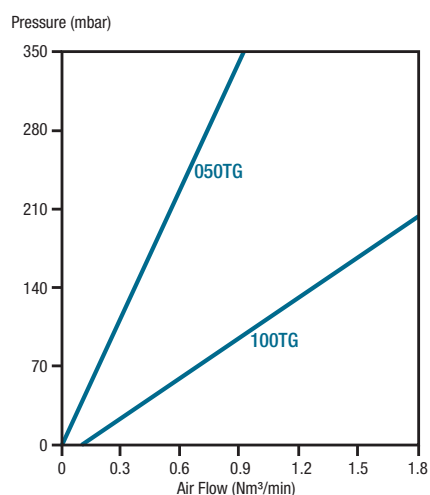

Water Flow Rate Betafine T 050TG and 100TG Cartridges

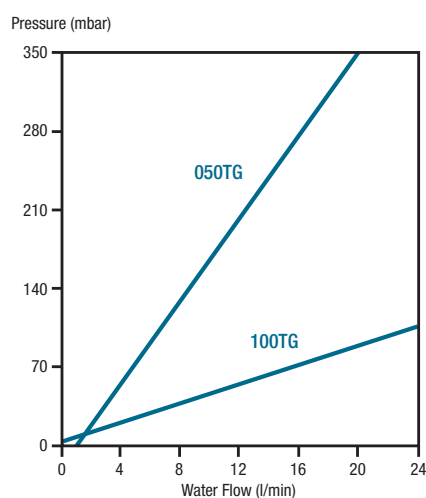

Cartridge Construction

The Betafine T cartridge is constructed with a pleated media composed of cellulose and inorganic filter aids completely free of asbestos or glass microfibers. Cartridges core, case, end caps and media support mesh materials are polypropylene.

Multiple cartridge lengths of various end cap styles are produced by thermal bonding to eliminate the need for adapters. No adhesives are used in the cartridge assembly process. All materials used are FDA listed in the CFR 21 for food contact.

Operating Conditions	
Maximum Continuous Operating Temperature:	85 °C
Maximum Operating Differential Pressure:	3.5 bar at 25 °C
Sterilisation:	autoclaving (121 °C, 30 min.)
	in line steaming (126 °C, 30 min.)
	chemical sterilisation
Rinsing:	30 litres per 10" cartridge

Extractables

Inorganic and organic extractable levels for Betafine T cartridges are tabulated below. Cartridges were rinsed with 30 litres of deionized water and samples collected. Inorganic levels were determined by graphite furnace atomic absorption techniques and wet chemical analysis. Organic extractables were quantified by a low temperature carbon analyzer.

Inorganics	
Extractable levels	Substance
<1 ppb	Ca, Fe, Cr, Mn, Zn, Co, Al
<10 ppb	K, Ni, P04, NO3, F
<50 ppb	Si, Cu
<100 ppb	S04, HCO3
<500 ppb	Cl, Na
Organics	
Total Carbon and Total Organic Carbon	< 1.6 ppm
Purgeable Organic Carbon	< 1.0 ppb

Pyrogenicity

Testing by LAL Gel Clot methods after recommended rinsing procedures produce results of less than 1 EU/ml.

Maximum particle removal efficiency

The Betafine T cartridge is a highly efficient nominally rated filter. In addition to mechanical straining efficiencies, the Betafine T cartridge is charge modified to provide submicron filtration. Studies with AC Fine Test Dust have shown Betafine T cartridges will provide excellent particle retention and high contaminant-holding capacity. These results demonstrate the combined effects of electrokinetic and mechanical straining adsorption.

Test results						
Betafine T 100TG						
Flow Rate (l/min)	Pressure (bar)	Particle Removal Efficiency %				
		>0,5 µm	>1 µm	>10 µm	>20 µm	>25 µm
11.4	0.2	99.35	96.95	96.55	97.65	98.58
7.6	3.2	99.99	99.99	99.99	99.99	99.99
3.8	4.0	99.99	99.99	99.99	99.99	99.99
0.0	4.1	99.99	99.99	99.99	99.99	99.99
Betafine T 050TG						
Flow Rate (l/min)	Pressure (bar)	Particle Removal Efficiency %				
		>0,5 µm	>1 µm	>10 µm	>20 µm	>25 µm
11.4	0.3	99.64	99.89	99.95	99.98	99.99
7.6	2.3	99.99	99.99	99.99	99.99	99.99
3.8	3.7	99.99	99.99	99.99	99.99	99.99
0.0	4.1	99.99	99.99	99.99	99.99	99.99



Contaminant Holding Capacity per 10" element:

Betafine T 100TG – 225 grams

Betafine T 050TG – 260 grams

When used as a prefilter prior to membrane filtration, Betafine T cartridges can extend the useful life of the membrane significantly.

Betafine T 100TG is effective for prefiltration of 0.45 µm membrane and Betafine T 050TG is effective for prefiltration of 0.2 µm membrane.

Particulate matter

Betafine T cartridges have been examined for particulate matter that may be extracted during normal cartridge use. The test was designed using the USP XXI procedure for Particulate Matter in Injections as a guide. In all cases, the cartridges did not exceed the USP XXI limit of not greater than 50 particles per ml that are larger than or equal to 10 microns.

Cartridge specifications

Nominal filtration rate: 050TG = 0.5 µm
100TG = 1.0 µm

Filtration area: 0.56 m²

Betafine T media is manufactured according to the procedures described in 3M Purification's Drug Master Files on record at the National Center for Drugs and Biologics.

Betafine T media is non-toxic in accordance with USP Class VI systemic injection testing. Therefore, it is suitable for use as a prefilter in the processing of parenteral drug products in accordance with the FDA.


Basic Cartridge Design	Nominal Cartridge Length	Gasket or O-Ring Material*	Nominal Micron Rating	Formulation	Control Grade
70002 70003 70005 70006 70012** 70025 70026 70048***	01 02 03 04	A - Silicone (MVQ) B - Fluorocarbon (FMP) C - Ethylene Propylene (EPDM) D - Nitrile (NBR)	050 -0,5 µm 100 -1,0 µm	T	G - General Purpose

* ISO Designation


** Only in nominal lengths 01, 02 and 03

*** Only in nominal length 01 and 02


Note: Betafine T is new name for TSM.

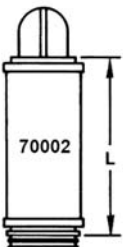


Single open end Code 7 (226) O-Ring Bayonet Lock Pall		
Nominal Ctg Length	70002	L (mm)
01		259
02		506
03		754
04		1002

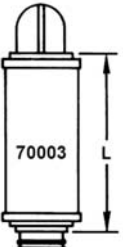


Single open end Code 8 (222) O-Ring 3M Purification & Pall		
Nominal Ctg Length	70003	L (mm)
01		260
02		507
03		755
04		1002

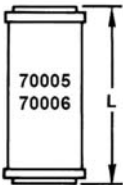


Double open end Flat Gasket Filterite & Pall (70005) Pall & Gelman (70006)			
Nominal Ctg Length	70005	70006	L (mm)
01			248
02			495
03			743
04			991

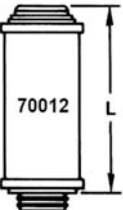


Single open end (222) O-Ring 3M Purification & Millipore		
Nominal Ctg Length	70012	L (mm)
01		260
02		559
03		787

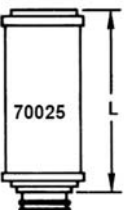

Single open end Code 3 (222) O-Ring Pall		
Nominal Ctg Length	70025	L (mm)
01		260
02		507
03		755
04		1002

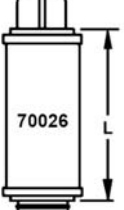

Single open end (216) (218) O-Ring Sartorius		
Nominal Ctg Length	70026	L (mm)
01		252
02		500
03		748
04		995

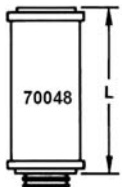

Single open end (222) O-Ring 3M Purification		
Nominal Ctg Length	70048	L (mm)
01		253
02		501

Important Notice

3M Purification MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Since a variety of factors can affect the use and performance of a 3M Purification product in a particular application, some of which are uniquely within the user's knowledge and control, user is responsible for determining whether or not the 3M Purification product is fit for a particular purpose and suitable for user's method of application.

Limited Warranty

3M Purification warrants it this product to be free from defects in material and workmanship during normal use for a period of one (1) year from the date of shipment from the factory. If the Product(s) is (are) defective within this warranty period, your exclusive remedy and 3M Purification's sold obligations shall be, at 3M Purification's option, to replace or repair the Product(s) or refund the original purchase price of the Product(s). This warranty does not apply to failures that result from abuse, misuse, alternation or damage not caused by 3M Purification or failure to properly follow installation and use instructions.

Limitation of Liability: 3M Purification will not be liable for any loss or damage arising from the use of the Product(s), whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may have other rights which vary from state to state, or country to country.

3M and Betafine are registered trademarks of 3M Company used under license.

LENNTECH

info@lenntech.com Tel. +31-152-610-900

www.lenntech.com Fax. +31-152-616-289



For more contact addresses visit our website www.3m.eu/filtration or www.3mpurification.com/international.

Data may be subject to change without further notice.

© 3M 2010. All rights reserved.

DOC10129
LITCTBFT1.EU - 0810

Nevertheless this should help as cross reference table chart for Cuno filters nomenclature.

7000201A050TG	7000301A050TG	7000401A050TG	7000501A050TG	7000601A050TG	7001201A050TG	7002501A050TG	7002601A050TG	7004801A050TG
7000201A100TG	7000301A100TG	7000401A100TG	7000501A100TG	7000601A100TG	7001201A100TG	7002501A100TG	7002601A100TG	7004801A100TG
7000201B050TG	7000301B050TG	7000401B050TG	7000501B050TG	7000601B050TG	7001201B050TG	7002501B050TG	7002601B050TG	7004801B050TG
7000201B100TG	7000301B100TG	7000401B100TG	7000501B100TG	7000601B100TG	7001201B100TG	7002501B100TG	7002601B100TG	7004801B100TG
7000201C050TG	7000301C050TG	7000401C050TG	7000501C050TG	7000601C050TG	7001201C050TG	7002501C050TG	7002601C050TG	7004801C050TG
7000201C100TG	7000301C100TG	7000401C100TG	7000501C100TG	7000601C100TG	7001201C100TG	7002501C100TG	7002601C100TG	7004801C100TG
7000201D050TG	7000301D050TG	7000401D050TG	7000501D050TG	7000601D050TG	7001201D050TG	7002501D050TG	7002601D050TG	7004801D050TG
7000201D100TG	7000301D100TG	7000401D100TG	7000501D100TG	7000601D100TG	7001201D100TG	7002501D100TG	7002601D100TG	7004801D100TG
7000202A050TG	7000302A050TG	7000402A050TG	7000502A050TG	7000602A050TG	7001202A050TG	7002502A050TG	7002602A050TG	7004802A050TG
7000202A100TG	7000302A100TG	7000402A100TG	7000502A100TG	7000602A100TG	7001202A100TG	7002502A100TG	7002602A100TG	7004802A100TG
7000202B050TG	7000302B050TG	7000402B050TG	7000502B050TG	7000602B050TG	7001202B050TG	7002502B050TG	7002602B050TG	7004802B050TG
7000202B100TG	7000302B100TG	7000402B100TG	7000502B100TG	7000602B100TG	7001202B100TG	7002502B100TG	7002602B100TG	7004802B100TG
7000202C050TG	7000302C050TG	7000402C050TG	7000502C050TG	7000602C050TG	7001202C050TG	7002502C050TG	7002602C050TG	7004802C050TG
7000202C100TG	7000302C100TG	7000402C100TG	7000502C100TG	7000602C100TG	7001202C100TG	7002502C100TG	7002602C100TG	7004802C100TG
7000202D050TG	7000302D050TG	7000402D050TG	7000502D050TG	7000602D050TG	7001202D050TG	7002502D050TG	7002602D050TG	7004802D050TG
7000202D100TG	7000302D100TG	7000402D100TG	7000502D100TG	7000602D100TG	7001202D100TG	7002502D100TG	7002602D100TG	7004802D100TG
7000203A050TG	7000303A050TG	7000403A050TG	7000503A050TG	7000603A050TG	7001203A050TG	7002503A050TG	7002603A050TG	7002604B050TG
7000203A100TG	7000303A100TG	7000403A100TG	7000503A100TG	7000603A100TG	7001203A100TG	7002503A100TG	7002603A100TG	7002604B100TG
7000203B050TG	7000303B050TG	7000403B050TG	7000503B050TG	7000603B050TG	7001203B050TG	7002503B050TG	7002603B050TG	7002604C050TG
7000203B100TG	7000303B100TG	7000403B100TG	7000503B100TG	7000603B100TG	7001203B100TG	7002503B100TG	7002603B100TG	7002604C100TG
7000203C050TG	7000303C050TG	7000403C050TG	7000503C050TG	7000603C050TG	7001203C050TG	7002503C050TG	7002603C050TG	7002604D050TG
7000203C100TG	7000303C100TG	7000403C100TG	7000503C100TG	7000603C100TG	7001203C100TG	7002503C100TG	7002603C100TG	7002604D100TG
7000203D050TG	7000303D050TG	7000403D050TG	7000503D050TG	7000603D050TG	7001203D050TG	7002503D050TG	7002603D050TG	7002504C050TG
7000203D100TG	7000303D100TG	7000403D100TG	7000503D100TG	7000603D100TG	7001203D100TG	7002503D100TG	7002603D100TG	7002504C100TG
7000204A050TG	7000304A050TG	7000404A050TG	7000504A050TG	7000604A050TG	7001204A050TG	7002504A050TG	7002604A050TG	7002504D050TG
7000204A100TG	7000304A100TG	7000404A100TG	7000504A100TG	7000604A100TG	7001204A100TG	7002504A100TG	7002604A100TG	7002504D100TG
7000204B								

Netherlands