


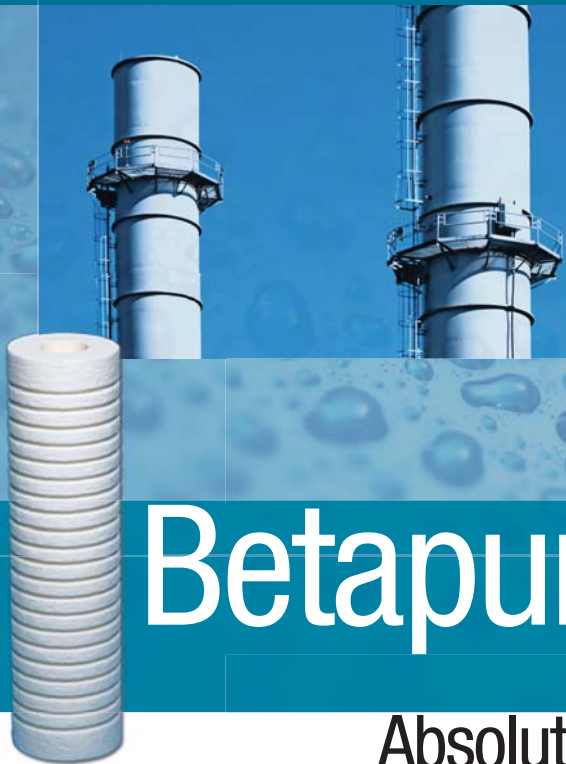

Betapure™ BK-Z2 Series

Absolute-rated Rigid Filter Cartridge

- ☒ New name for Beta-Klean Z2
- ☒ Consistent Performance
- ☒ Significant Life Advantage

Features and Benefits

Absolute-rated, depth cartridge

- Distinct particle size cut off at the specified removal rating.
- Reproducible effluent quality throughout the filter's life

Beta Ratio 1000 rated throughout the cartridge life

- No bypass or unloading at high differential pressure
- Consistent product quality throughout the filter's life

Grooved surface with true graded-density structure

- Significantly longer life
- Dramatic cost savings with optimised yields

No metal or plastic cores

- Reduced disposal costs
- Easy disposal, suitable for incineration or shredding

Available with integral spring end-cap

- Eliminates spring and seal assemblies
- User friendly design ensure positive seal

3M Purification's White Betapure BK-Z2 Series is the next level in resin bonded filtration technology. The best is now better.

White Betapure BK-Z2 Series, formerly known as Beta-Klean Z2, is a range of filter cartridges that provide consistent quality and performance at absolute ratings from 10 to 60 µm.

Consistent Performance

Absolute rated rigid structure Betapure BK-Z2 provides consistent performance. Unlike many competitors, Betapure BK-Z2 does not unload or lose filtration efficiency throughout its usable life.

Significant Life Advantage

Betapure BK-Z2 rigid graded density grooved structure provides a significant life advantage over the competition.

3M Purification provides quality solutions worldwide for the most challenging filtration applications. 3M Purification filtration systems include clarifying filters, pre-filters, final filters, stainless steel housings and engineered skid-mounted systems designed and sized for specific applications.

What is Betapure BK-Z2?

Betapure BK-Z2 Series is a rigid, graded-density filter cartridge constructed primarily of cellulose fibres, glass fibres and a chemically resistant thermosetting resin. The manufacturing process results in more fibres towards the centre core region creating a graded-density structure. The thermosetting resin "bonds" the fibres into a permanent rigid matrix. Betapure BK-Z2 cartridges are grooved to significantly increase the surface area and extend the service life.

Betapure BK-Z2 Series is available with various end fittings to ensure compatibility with a wide range of filter housings (see ordering guide).

Absolute Betapure BK-Z2?

Absolute Betapure BK-Z2 removal ratings are determined for the entire cartridge life using a filter performance test developed by 3M Purification that complies with the general procedure outlined in ASTM STP 975.

3M Purification defines Absolute Rating as "the particle size (x) providing an initial Beta Ratio (β_x) = 1000. At this Beta Ratio the removal efficiency is equal to 99.9%. Beta Ratio (β_x) is defined by the equation:

$$\beta_x = \frac{\text{Cumulative Number of Particles Larger than } x \text{ in the Influent Challenge}}{\text{Cumulative Number of Particles Larger than } x \text{ in the Effluent}}$$

Betapure BK-Z2 filters achieve a minimum Beta x (β_x) value of 1000 at the specified ratings seen in Table 1.

Table 1: Betapure BK-Z2 Series Absolute Ratings	
Grade Designation	$\beta_x = 1000$ (x = Absolute Micron Rating)
Z2 100	10 µm
Z2 200	20 µm
Z2 300	30 µm
Z2 400	40 µm
Z2 600	60 µm

For more information contact:

info@lenntech.com

www.lenntech.com

Tel. +31-15-261.09.00


2 Fax. +31-15-261.62.89

Betapure BK-Z2: Consistent Performance

The initial Beta Ratio for all grades of Betapure BK-Z2 filter cartridges is equal to or greater than 1000 and each cartridge performs at or above this initial value throughout its usable (all the way to plugging) life. This defines Betapure BK-Z2's absolute filtration performance. The Beta Ratio vs. Differential Pressure Graph 1 illustrates how competitive filters do not achieve the consistent performance of Betapure BK-Z2. Filters that show a decrease in Beta Ratio as the differential pressure increases are exhibiting either unloading of previously held contaminants or a loss of filtration efficiency. This inconsistent performance results in a reduction in finished product quality, product yield and an increase in total filtration cost.



Graph 1: Beta Ratio Comparison of Filter Cartridges Rated at 20 Microns

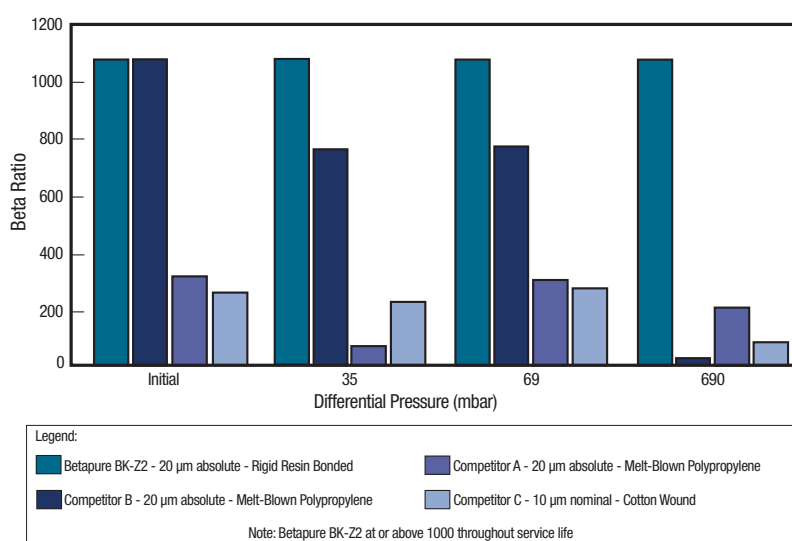

As illustrates Graph 1, the performance of melt-blown polypropylene (Competitor B) degrades rapidly after a small (34.5 mbar) increase in differential pressure, indicating contaminant unloading and a loss of filtration efficiency typical of a compressible structure. Competitor A's melt-blown never approaches a Beta Ratio of 1000 and it shows a decreasing Beta Ratio at high differential pressure. The generic cotton wound, Competitor C, exhibits erratic performance caused by media movement under increasing pressure.

Betapure BK-Z2 exhibits consistent Beta Ratios at all differential pressures.

Scientific Applications Support Services (SASS)

The cornerstone of 3M Purification's philosophy is service to customers, not only in product quality and prompt delivery, but also in problem solving, application support and in the sharing of scientific information. 3M Purification's Scientific Applications Support Services (SASS) group is market-focused group of scientists and engineers who work closely with customers to provide solutions to challenging filtration applications and aid in the selection of the most efficient and economical filter systems. SASS provides a vital link between 3M Purification and users of 3M Purification filter systems.

SASS specialists are skilled in performing on-site testing (pilot or lab bench scale) and are able to relate field test results to full manufacturing scale operations. SASS projects can also be performed in 3M Purification's extensive in-house laboratory facilities. 3M Purification's vast experience with fluid processing operations worldwide provides the knowledge and insight to resolve separation problems promptly and efficiently in a cost-effective, confidential manner.

Figure 1: Betapure BK-Z2 graded density structure


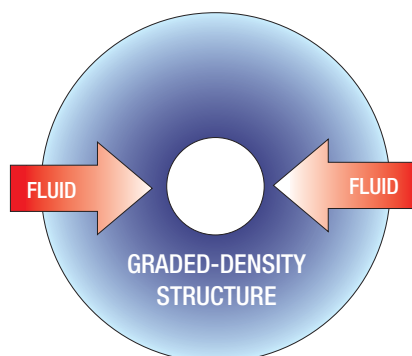


Figure 2: Surface area comparison

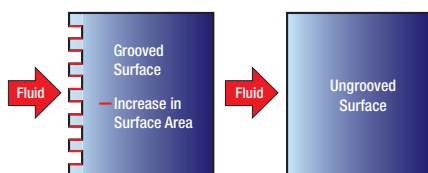

Applications

Betapure BK-Z2 provides consistent reproducible filtration performance and longer life while meeting or exceeding quality specifications in a wide variety of industrial processing applications. Betapure BK-Z2 is particularly well suited for high viscosity fluids and differential pressures to 4.8 bar.

Applications include:

Chemicals

- high purity, electronic, organic, inorganic, monomers, polymers, resins and catalysts

Water

- process, pre-RO, boiler feed, cooling tower and waste water

Pharmaceutical

- solvent clarification/pretreatment

Coatings

- paint, varnish, lacquer, inks, adhesives and wood preservatives

General Industrial

- heating and cooling fluids, brines, detergents, fuel oils, lube oils, cutting oils and agricultural fluids

Rigid Graded-Density Betapure BK-Z2

Betapure BK-Z2 filter cartridges are manufactured using an exclusive process to achieve a true graded-density structure. The 3M Purification manufacturing process results in progressively more fibres towards the centre core region creating a graded-density structure. Each fibre is locked in place by a thermosetting resin binder to create a rigid depth filter matrix that traps larger particles near the outer surface and smaller particles near the cartridge's inside diameter. The overall effect is to greatly improve cartridge service life by retaining particles and deformable contaminants in decreasing particle size ranges as the contaminant particles progress through the cartridge.

High Surface Area Betapure BK-Z2

Betapure BK-Z2 cartridges also feature an optimised groove pattern to increase the surface area by over 65% when compared to ungrooved cylindrical cartridges. The grooved surface prevents premature blinding of the outer surface by large particles and allows full utilisation of the depth structure. Maximum surface area with a true graded-density structure means that Betapure BK-Z2 can provide significantly greater service life than competitive filter cartridges. Extensive laboratory testing demonstrates that Betapure BK-Z2 can provide up to 5 times greater life than competitive filters of comparable efficiency.

Reproducible Cost Effective Filtration

Betapure BK-Z2 is manufactured to rigid specifications and subjected to stringent process and quality controls to ensure consistency in filtration performance and, ultimately, end-user process consistency - run after manufacturing run.

Betapure BK-Z2 Series Product Specifications

Operating Parameters		
Maximum Operating Temperature	Standard (Media Only)	121 °C
	Polyethylene Foam Gasket	93 °C
	Polypropylene end Fitting	82 °C
Maximum Differential Pressure	4.8 bar at 20 °C	
Recommended Change-out Differential Pressure	2.4 bar	

Dimensions	
Inside Diameter	26.9 mm (1 1/16")
Outside Diameter	65.9 mm (2 9/32")
Cartridge Length	9 3/4" through to 40" (248 - 1016 mm)

Table 2: Betapure BK-Z2 Series Product Specifications			
Absolute Rating (µm)	Grade	Fibre	Resin
10 µm	Z2 100	Cellulose/Glass	Melamine
20 µm	Z2 200		
30 µm	Z2 300	Cellulose	
40 µm	Z2 400		
60 µm	Z2 600		

Betapure BK-Z2: Providing Superior Performance and Significant Life Advantage

The data in graphs 2 and 3 were developed through extensive filter performance testing. The 3M Purification Life Advantage data are based on contaminant added values comparing filter elements of comparable particle removal efficiencies.

Betapure BK-Z2 Flow Rates

Flow information for Betapure BK-Z2 in aqueous fluids is located in table 3.

Grade	Absolute Rating (µm)	Specific Δp/ 10" Cartridge ⁽¹⁾ in mbar per l/min	Recommended Maximum Aqueous Flow Rate ⁽²⁾ per 10" Cartridge in l/min
Z2 100	10	6.37	15.1
Z2 200	20	3.46	15.1
Z2 300	30	2.00	18.9
Z2 400	40	1.82	18.9
Z2 600	60	1.64	22.7

⁽¹⁾ Specific aqueous pressure drop at ambient temperature for a single equivalent 10" cartridge. For multiple cartridge lengths, divide total flow by the number of single length equivalents.

⁽²⁾ Optimal efficiency and life is achieved at aqueous flow rates less than the maximum flow indicated.

For liquids other than water, use the formula below in conjunction with the values from column 3 of Table 3. The specific pressure drop values may be effectively used when three of the four variables (Viscosity, Flow, Differential Pressure and Cartridge Grade) are set.


$$\text{Clean } \Delta p \text{ (mbar)} = \frac{(\text{Total system (l/min)}) (\text{Viscosity in Cp}) (\text{Value from table})}{(\text{Number of Equivalent Single Length Cartridges in Housing})}$$

Example of Flow Calculation


Determine pressure drop for water at (56.8 l/min) per 30" Z2300 (30 µm) Betapure BK-Z2 Series cartridge.

Fluid: water (1 cp)
 Flow per 10" cartridge: 56.8 (l/min) ÷ 3 (30" cartridge) = 18.9 l/min
 Specific pressure drop (Table 3): (2.00 mbar/l per min)
 Calculation: (2.00 x 18.9 = 37.8 mbar)

Graph 2: Relative Life 10 micron Betapure BK-Z2 Series vs. Competitive Filters of Comparable Efficiency.

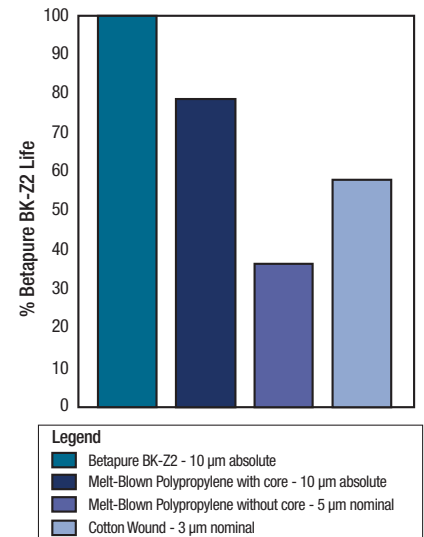

Graph 3: Relative Life 40 micron Betapure BK-Z2 Series vs. Competitive Filters of Comparable Efficiency.

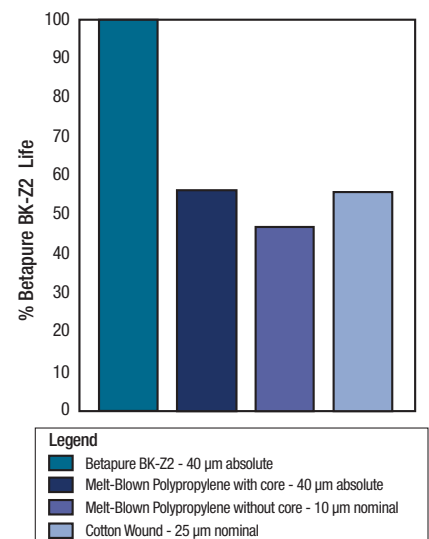



Betapure BK-Z2: Ease of Use

Betapure BK-Z2 Series Chemical Compatibility

Table 4 shows Betapure BK-Z2's wide range of chemical compatibility. Betapure BK-Z2 exhibits excellent resistance to water, organic solvents and petroleum products. The data presented in Table 4 is for general guidance only. Testing under specific application conditions is recommended.

For various end modifications and multi-cartridges, consult your local distributor or 3M Purification representative.

Table 4: Betapure BK-Z2 Series Chemical Compatibility		
Fluid		
Category	Example	Rating
Water	Process	R - 100 °C
	Pre-RO	R - 100 °C
	Boiler Feed	R - 100 °C
	Waste Water	R - 100 °C
Fatty Acids - Oils	Detergents	R - 93 °C
	Mineral Oil	R - 100 °C
	Silicone Oils	L
Organic Solvents	MEK	R
	Benzene	R
	Toluene	R
	Xylene	R
	Alcohols	R
	Dimethyl Formamide (DMF)	R
Petroleum	Lube Oil	R
	Fuel Oil	R
	Waxes	R
Acids	Acetic (100%)	N
	Tannic 10%	R - 60 °C
	Hydrochloric (Muriatic) Acid 5%	N
	Sulphuric 50%	N
	Sulphuric 5%	R - 38 °C
	Nitric 10%	R - 20 °C
Brines and Aqueous Salt Solutions	Sodium Chloride 10%	R
	Sodium Sulphate	R
	Sodium Nitrate 5%	R
Bases	Sodium Hydroxide - 5%	R
	Calcium Hydroxide	R - 38 °C
	Ammonium Hydroxide 30%	R - 38 °C
Oxidisers	Hydrogen Peroxide 90%	N
R = Generally Recommended up to (121°C) unless otherwise noted. N = Not Recommended L = Likely Compatible, test before use		

Waste Management

Betapure BK-Z2 filter cartridges contain no metal or plastic cores. They can be incinerated, shredded, or crushed after use to reduce overall disposal costs.

Betapure BK-Z2 Series Ordering Guide

Cartridge Type	Length*	Grade	Surface	Packaging	Temperature Option	End Modification	Flat Gasket or O-ring material
BK = Betapure BK-Z2	09 = 9 3/4" 10 = 10" 19 = 19 1/2" 20 = 20" 29 = 29 1/4" 30 = 30" 39 = 39" 40 = 40"	Z2 100 Z2 200 Z2 300 Z2 400 Z2 600	G = Grooved U = Ungrooved	1 = Standard Shrink Wrap 2 = Bulk Pack	S = Standard	C = 222 O-Ring & Spear F = 222 O-Ring & Flat Cap N = None R = End Cap with stainless steel	A = Silicone (MVQ)** B = Fluorocarbon (FPM)** C = Ethylene Prop. (EPDM)** D = Nitrile (NBR)** G = Volare Gasket*** N = None***


* Length is multiple of either 9 3/4" or 10"

** ISO Designation

*** Available in N, R end modifications

Note: Betapure BK-Z2 is the new name for Beta-Klean Z2.

Betapure BK-Z2 Series Cartridge End Modifications

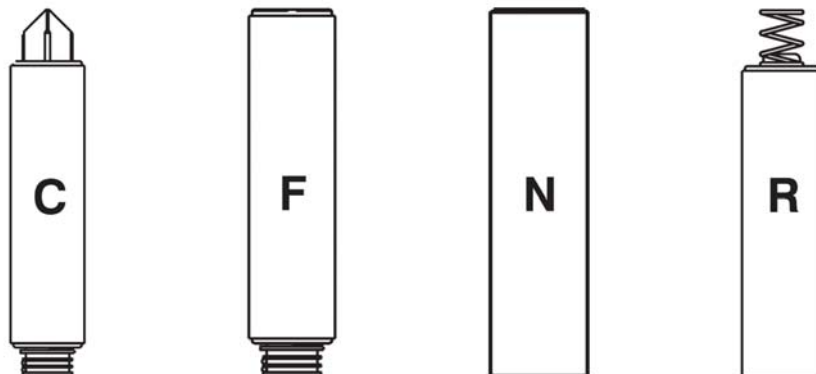

Important Notice

3M Purification MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Since a variety of factors can affect the use and performance of a 3M Purification product in a particular application, some of which are uniquely within the user's knowledge and control, user is responsible for determining whether or not the 3M Purification product is fit for a particular purpose and suitable for user's method of application.

Limited Warranty

3M Purification warrants it this product to be free from defects in material and workmanship during normal use for a period of one (1) year from the date of shipment from the factory. If the Product(s) is (are) defective within this warranty period, your exclusive remedy and 3M Purification's sold obligations shall be, at 3M Purification's option, to replace or repair the Product(s) or refund the original purchase price of the Product(s). This warranty does not apply to failures that result from abuse, misuse, alternation or damage not caused by 3M Purification or failure to properly follow installation and use instructions.

Limitation of Liability: 3M Purification will not be liable for any loss or damage arising from the use of the Product(s), whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may have other rights which vary from state to state, or country to country.



LENNTECH

info@lennotech.com Tel. +31-152-610-900

www.lennotech.com Fax. +31-152-616-289



For more contact addresses visit our website www.3M.eu/filtration or www.3Mpurification.com/international.

Data may be subject to change without further notice.

© 3M 2010. All rights reserved.

The below Cuno -series cartridge filters are all the models that are potentially possible in all variations.
Please note that not all models are actually produced or on stock and some model numbers and names have become obsolete.
Nevertheless this should help as cross reference table chart for Cuno filters nomenclature.

Betapure BK-Z2 series

BK09Z2 100G1S	BK10Z2 100G1S	BK19Z2 100G1S	BK20Z2 100G1S	BK29Z2 100G1S	BK30Z2 100G1S	BK39Z2 100G1S	BK40Z2 100G1S
BK09Z2 100G2S	BK10Z2 100G2S	BK19Z2 100G2S	BK20Z2 100G2S	BK29Z2 100G2S	BK30Z2 100G2S	BK39Z2 100G2S	BK40Z2 100G2S
BK09Z2 100U1S	BK10Z2 100U1S	BK19Z2 100U1S	BK20Z2 100U1S	BK29Z2 100U1S	BK30Z2 100U1S	BK39Z2 100U1S	BK40Z2 100U1S
BK09Z2 100U2S	BK10Z2 100U2S	BK19Z2 100U2S	BK20Z2 100U2S	BK29Z2 100U2S	BK30Z2 100U2S	BK39Z2 100U2S	BK40Z2 100U2S
BK09Z2 200G1S	BK10Z2 200G1S	BK19Z2 200G1S	BK20Z2 200G1S	BK29Z2 200G1S	BK30Z2 200G1S	BK39Z2 200G1S	BK40Z2 200G1S
BK09Z2 200G2S	BK10Z2 200G2S	BK19Z2 200G2S	BK20Z2 200G2S	BK29Z2 200G2S	BK30Z2 200G2S	BK39Z2 200G2S	BK40Z2 200G2S
BK09Z2 200U1S	BK10Z2 200U1S	BK19Z2 200U1S	BK20Z2 200U1S	BK29Z2 200U1S	BK30Z2 200U1S	BK39Z2 200U1S	BK40Z2 200U1S
BK09Z2 200U2S	BK10Z2 200U2S	BK19Z2 200U2S	BK20Z2 200U2S	BK29Z2 200U2S	BK30Z2 200U2S	BK39Z2 200U2S	BK40Z2 200U2S
BK09Z2 300G1S	BK10Z2 300G1S	BK19Z2 300G1S	BK20Z2 300G1S	BK29Z2 300G1S	BK30Z2 300G1S	BK39Z2 300G1S	BK40Z2 300G1S
BK09Z2 300G2S	BK10Z2 300G2S	BK19Z2 300G2S	BK20Z2 300G2S	BK29Z2 300G2S	BK30Z2 300G2S	BK39Z2 300G2S	BK40Z2 300G2S
BK09Z2 300U1S	BK10Z2 300U1S	BK19Z2 300U1S	BK20Z2 300U1S	BK29Z2 300U1S	BK30Z2 300U1S	BK39Z2 300U1S	BK40Z2 300U1S
BK09Z2 300U2S	BK10Z2 300U2S	BK19Z2 300U2S	BK20Z2 300U2S	BK29Z2 300U2S	BK30Z2 300U2S	BK39Z2 300U2S	BK40Z2 300U2S
BK09Z2 400G1S	BK10Z2 400G1S	BK19Z2 400G1S	BK20Z2 400G1S	BK29Z2 400G1S	BK30Z2 400G1S	BK39Z2 400G1S	BK40Z2 400G1S
BK09Z2 400G2S	BK10Z2 400G2S	BK19Z2 400G2S	BK20Z2 400G2S	BK29Z2 400G2S	BK30Z2 400G2S	BK39Z2 400G2S	BK40Z2 400G2S
BK09Z2 400U1S	BK10Z2 400U1S	BK19Z2 400U1S	BK20Z2 400U1S	BK29Z2 400U1S	BK30Z2 400U1S	BK39Z2 400U1S	BK40Z2 400U1S
BK09Z2 400U2S	BK10Z2 400U2S	BK19Z2 400U2S	BK20Z2 400U2S	BK29Z2 400U2S	BK30Z2 400U2S	BK39Z2 400U2S	BK40Z2 400U2S
BK09Z2 600G1S	BK10Z2 600G1S	BK19Z2 600G1S	BK20Z2 600G1S	BK29Z2 600G1S	BK30Z2 600G1S	BK39Z2 600G1S	BK40Z2 600G1S
BK09Z2 600G2S	BK10Z2 600G2S	BK19Z2 600G2S	BK20Z2 600G2S	BK29Z2 600G2S	BK30Z2 600G2S	BK39Z2 600G2S	BK40Z2 600G2S
BK09Z2 600U1S	BK10Z2 600U1S	BK19Z2 600U1S	BK20Z2 600U1S	BK29Z2 600U1S	BK30Z2 600U1S	BK39Z2 600U1S	BK40Z2 600U1S
BK09Z2 600U2S	BK10Z2 600U2S	BK19Z2 600U2S	BK20Z2 600U2S	BK29Z2 600U2S	BK30Z2 600U2S	BK39Z2 600U2S	BK40Z2 600U2S

Lenntech B.V.	Rotterdamseweg 402	2629HH Delft	Netherlands
T +31-15-261.09.00			
F +31-15-261.62.89			
info@lenntech.com			
www.lenntech.com			