


GEHNY-Series Electronics Grade Nylon and Plus+ Nylon

GEHNY-Series High Purity Electronics Grade Nylon and Plus+ Nylon Filter Cartridges, featuring nylon 6,6 membrane, provides superior particulate retention and cleanliness for production of ultra-pure water critical to the micro-electronics industry. The optional positive zeta potential surface charge (Plus+) enhances retention performance for particulate smaller than the stated micron rating.

Cartridges are manufactured in a clean room environment and undergo extended flushing with 18 megaohm ultra-high purity water to achieve extraordinarily low levels of extractable substances and provide quick rinse-up. Each element is diffusion tested for integrity to assure optimal performance.

Flow Rate vs Pressure Drop

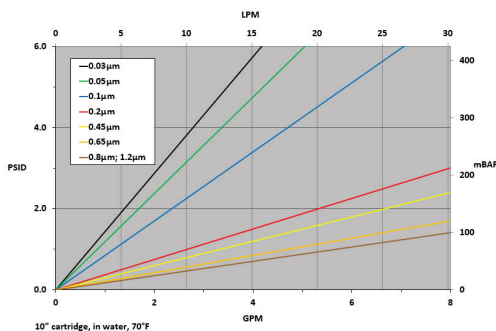

Typical Applications

- UHP DI Water
- Ultrafine Chemicals
- Ion Exchange Resin Trap
- Point-of-Use Filters

Ordering Information

GEHNY	Rating (µ)	A	Length	C	End Cap Style	O-Rings/Gaskets	-	Adders
GEHNY+	0.03		10" (25.4 cm)		2 = DOE Flat Gasket	B = Buna		CS = 316SS Compression Spring
	0.05		20" (50.8 cm)		3 = 222 w/ Fin	C = Clear Silicone		I = Stainless Steel Insert
	0.1		30" (76.2 cm)		4 = 222 w/ Flat Cap	E = EPDM		
	0.2		40" (101.6 cm)		6 = 226 w/ Flat Cap	S = Silicone		
	0.45				7 = 226 w/ Fin	T = Teflon® Encapsulated Viton®		
	0.65				16 = 213 Internal O-Ring	V = Viton®		
	0.8				28 = 222 3-tabs w/ Fin	Z = Teflon® Encapsulated Silicone		
	1.2							

DISCLAIMER: Filtration data presented is representative of performance observed in controlled laboratory testing. It is not given as a warranty, specification or statement of fitness for use. Specific performance can vary widely depending on contaminant type, fluid properties, flow rates and environmental conditions. It is recommended that users conduct thorough qualification testing to assure the product functions as required. For additional technical support, a product Performance Guide is available upon request.

DS_GEHNY_190918



Construction Materials

Membrane.....Nylon 6,6
Support Media.....Polypropylene
End Caps.....Polypropylene
Center Core.....Polypropylene
Outer Support Cage.....Polypropylene
O-Rings/Gaskets.....Buna, EPDM, Silicone,
 Clear Silicone, Teflon® Encapsulated Viton®,
 Viton®, Teflon® Encapsulated Silicone

Sanitization/Sterilization

Filtered Hot Water.....80°C for 30 min.
Steam Sterilization.....121°C for 30 min.,
 multiple cycles

Chemicals: Cartridges are compatible with most chemical sanitizing agents.

Note: Stainless steel insert option required for all cartridges being hot water sanitized or steam sterilized.

Dimensions

Length:
 10 to 40 inches (25.4 to 101.6 cm) nominal
Outside Diameter:
 2.70 inches (7.0 cm) nominal

Operating Conditions

Change Out ΔP (recommended).....35 PSID
Temperature (max).....176°F (80°C)
Differential Pressure (max).....50 PSID
 (3.4 bar) at 68°F (20°C)

Toxicity

All polypropylene components meet the specifications for biological safety per USP Class VI – 121°C for plastics.

Food Safety Compliance

Materials of construction comply with FDA regulations for food and beverage contact use as detailed in the US Code of Federal Regulations, 21CFR. Materials used to produce filter media and hardware are deemed safe for use in contact with foodstuffs in accordance with EU Directives 2002/72/EC, 1935/2004, and/or 10/2011.