

Duratherm* EXL series

industrial high temperature elements

description and use

The Duratherm EXL Series includes RO and NF membrane elements. These Series is specifically designed to maximize the benefits of hot water sanitization for industries relying on chemical-free sanitization for product quality and/or industry compliance standards.

The separation system sanitization protocol is performed via periodic exposure to temperature as high as 90°C (194°F) at minimum feed pressure to kill microorganisms by denaturation and coagulation of the proteins chains.

The Duratherm EXL elements are also suitable for separation systems at temperature up to 70°C (158°F).

All element constructions include polysulfone ATD & central tube and a patented Durasan* cage outer wrap.

features and benefits

- Prevent bio-fouling development
- No disposal costs
- 100% wet testing Quality Assurance
- Durable construction
- Sanitization on the permeate side

markets

- Food / Beverage
- BioPharm
- Electronics
- Chemical

Water Technologies & Solutions fact sheet

Table 1: Element Specification

Membrane	Thin-film membrane (TFM*)		
Model	Maximum crossflow gpm (m³/hr)	Recommended crossflow	Salt rejection
Duratherm EXL R02540HR	8 (1.8)		Figure 2
Duratherm EXL R08040HR	100 (22.7)	Figure 7	Figure 2
Duratherm EXL NF2540HR	8 (1.8)		Figure 3, 4 & 5
Duratherm EXL NF4040HR	40 (9.1)	Figure 6	Figure 3, 4 & 5
Duratherm EXL NF4040	40 (9.1)	Figure 6	Figure 3, 4 & 5
Duratherm EXL NF8040HR	100 (22.7)	Figure 7	Figure 3, 4 & 5
Duratherm EXL NF8040	100 (22.7)	Figure 7	Figure 3, 4 & 5
Duratherm EXL UF2 8040	NA	NA	2,500 MWCO

Model	Spacer mil (mm)	Active area ft² (m²)	Part number
Duratherm EXL R02540HR	50 (1.27)	18 (1.7)	1228306
Duratherm EXL R08040HR	50 (1.27)	275 (25.5)	1228840
Duratherm EXL NF2540HR	50 (1.27)	18 (1.7)	1206922
Duratherm EXL NF4040HR	50 (1.27)	65 (6.0)	1206950
Duratherm EXL NF4040	50 (1.27)	65 (6.0)	1207032
Duratherm EXL NF8040HR	50 (1.27)	275 (25.5)	1206982
Duratherm EXL NF8040	50 (1.27)	275 (25.5)	1207045
Duratherm EXL UF2 8040	50 (1.27)	275 (25.5)	3002290

Table 2: Maximum Pressure Drops

Range	0°C-50°C psig (kPa)	51°C-70°C psig (kPa)
Over an element	15 (103)	7 (48)
Per housing	60 (414)	30 (207)

LENNTECH

info@lennotech.com Tel. +31-152-610-900
www.lennotech.com Fax. +31-152-616-289

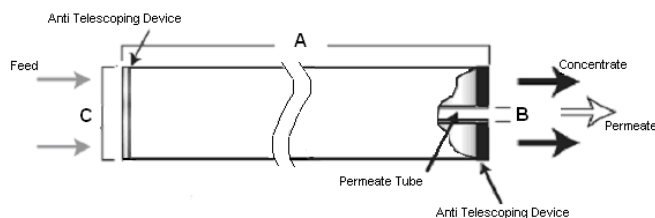


Figure 1A: Element Dimensions Diagram – Female

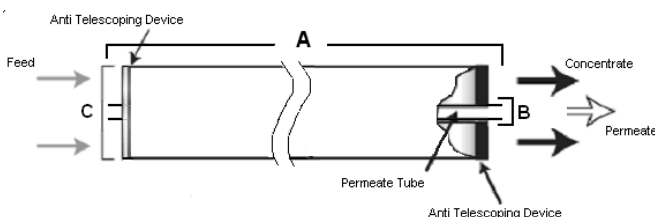


Figure 1B: Element Dimensions Diagram – Male

Table 3: Dimensions and Weight

Model ¹	Dimensions, inches (cm)			Boxed Weight lbs (kg)
	A	B ¹	C ³	
XX 2540	40.0 (101.6)	0.75 (1.91)	2.43 (6.17)	4 (1.8)
XX 4040	40.0 (101.6)	0.625 (1.59)	3.9 (9.9)	9 (4.1)
XX 8040	40.0 (101.6)	1.125 (2.86)	7.9 (20.1)	29 (13.2)

¹ Internal diameter.

² These elements are dried then bagged before shipping.

³ The element diameter (dimension C) is designed for optimum performance in SUEZ pressure vessels. Others pressure vessel dimension and tolerance may result in excessive bypass and loss of capacity.

Table 4: Operating and CIP parameters

Do not exceed 20 GFD (33 LMH) or 2,000 Wagner units under any circumstance.

Typical Operating Pressure	Figures 9 & 10	
Maximum Operating Pressure	1,200 psi (8,273 kPa)	32 – 77°F (0 – 25°C)
	600 psi (4,137 kPa)	78 – 122°F (26 – 50°C)
	400 psi (2,758 kPa)	123 – 158°F (51 – 70°C)
	Hot Water Sanitizing	158 – 194°F (70 – 90°C)
Maximum Temperature	Continuous Operation: 177°F (70°C) Clean-In-Place (CIP): 122°F (50°C) Hot Water Sanitizing: 194°F (90°C)	
pH range	Continuous Operation: 3 – 9 clean-In- Place (CIP): 2 – 10.5	
Chlorine Tolerance	500 ppm hours dechlorination recommended	
Feedwater	NTU < 1 SDI < 5	

hot water sanitization recommendations

For optimal performance, Duratherm EXL elements should always be cleaned using approved CIP procedures and flushed with fouling free water before the sanitization process. Feed pressure during sanitization should not exceed 40psi (275kPa) and the crossflow should not incur a pressure drop greater than 2psi (14kPa) per element. Heating rate to sanitizing temperature and cool down should not be faster than 5°C (9°F)/minute. Maximum sanitization temperature is 90°C (194°F).

loss of permeate flow after repeated 90°C (194°F) sanitization cycles

It is almost impossible to exactly predict the percentage of permeate flow rate lost from the high temperature sanitations, which among other factors depends on:

- The rate of temperature increase and decrease.
- The presence of other species like organics, ionic and metallic compounds that could locally decrease or increase the temperature at the surface of the membrane.
- The feed flow rate and specifically the heat transfer rate to the membrane surface.
- The thickness and geometry of the feed spacer used.

At optimum conditions measured in controlled environment with deionized water, between 30% and 50% of the original permeate flow rate was lost before the element performance had stabilized after repeated heat treatments (over 90% of this flow reduction occurred during the first heat treatment). With the loss of permeate flow rate, the salt rejection increases. The rate of cooling and heating was not more than 5°C (9°F) per minute, and the differential pressure drop per element did not exceed 2 psi.

Pilot testing based on the criteria noted above will give the best operating parameters for any specific application.

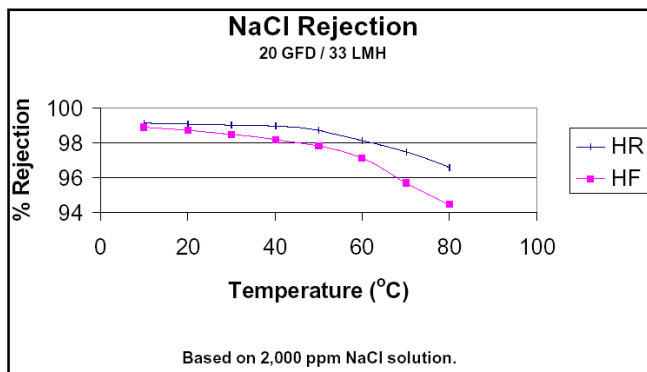


Figure 2: Typical NaCl Rejection dependence on Temperature of Duratherm EXL RO Element

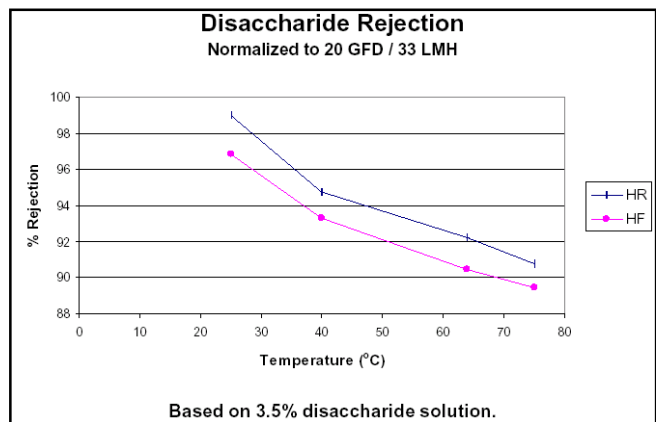


Figure 5: Typical Disaccharide Rejection dependence on Temperature of Duratherm EXL NF Elements

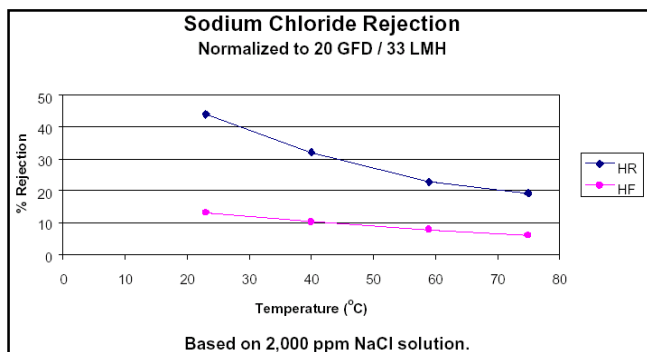


Figure 3: Typical NaCl Rejection dependence on Temperature of Duratherm EXL NF Element

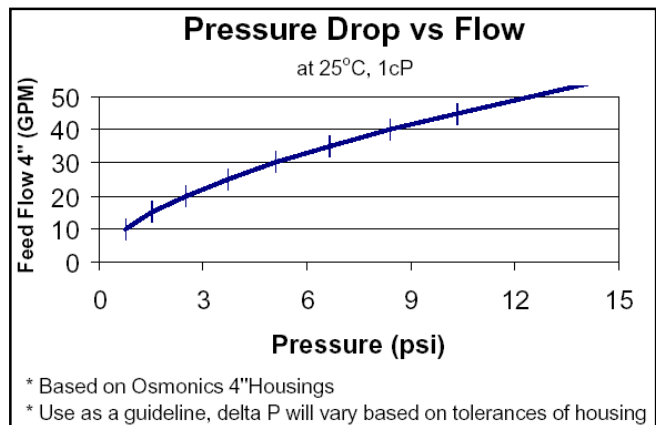


Figure 6: Pressure Drop for 4in Element

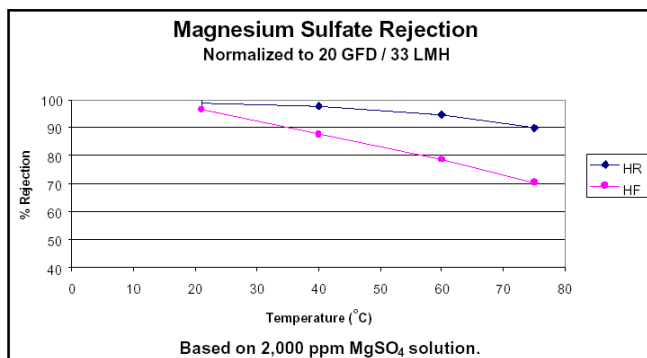


Figure 4: Typical MgSO₄ Rejection dependence on Temperature of Duratherm EXL NF Elements

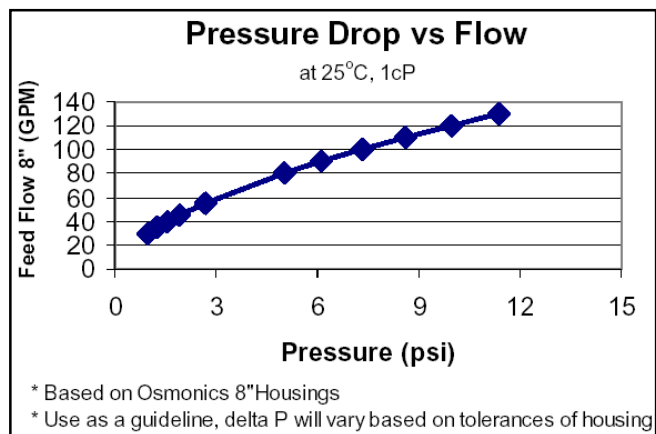


Figure 7: Pressure Drop for 8in Element

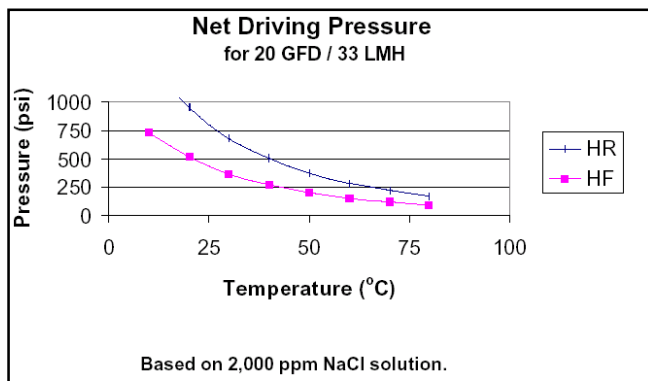


Figure 8: Net Driving Pressure for Duratherm EXL RO Element

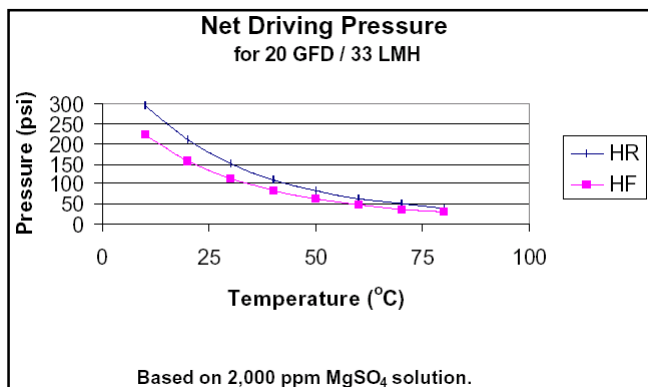


Figure 9: Net Driving Pressure for Duratherm EXL NF Element

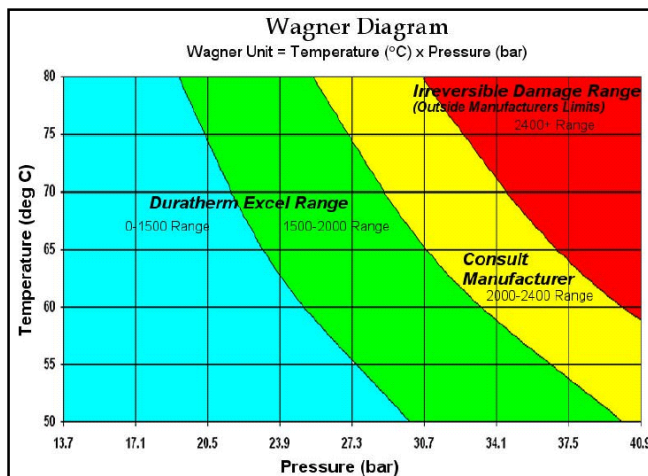


Figure 10

LENNTECH

info@lenntech.com Tel. +31-152-610-900

www.lenntech.com Fax. +31-152-616-289